


Non-Magnetic Cases

Note: Non Compatible with Non-Magnetic Phone Cases

Rocilife **10000 mAh**

Wireless POWER BANK

Model NO.: XFS10

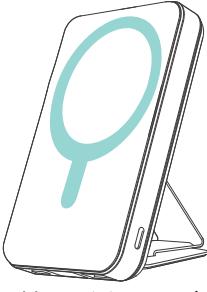

User Manual

Please read this User Manual carefully before using the product and keep it properly.

Product parameter:

Name: Wireless Power Bank
Model Number: XFS10
Material: PC
Battery: Li-Polymer
Material Frame/ABS + PC
Battery capacity: 10000mAh (3.85V 28.5Wh)
Rated capacity: 6000mAh (5VDC, 2A)
Energy conversion: ≥ 60%
Bracket Angle: 60°

Product description:

This product is a portable charging device that can provide wired charging and wireless charging for mobile phones, tablets, e-books, game machines and other various products. The product has the characteristics of wired charging and wireless charging in one, magnetic suction positioning, power digital display, foldable bracket, ip20w PD fast charging, three output (including wireless output, 15W wireless fast charging, Lighting Interface, etc.). Product built-in FOD, overcharge, over discharge, temperature protection, and other safety protection circuit.

Checking quantity of electricity:

Press on/off button check the remaining electricity of the power bank on the LED display. The display will automatically turn off after about 30 seconds;

Wireless Charging the iPhone 12 Series or Later

To activate wireless charging, press the power button or place your device on the charger as illustrated below and it will be held in place magnetically. Note: After the phone is placed correctly, there may be a delay of 3-5 seconds, and the product will automatically turn on the charging mode. If there is no wireless link access within 30 seconds, the product will automatically turn off the wireless charging function.

Wireless charging tips:

Wireless charging mobile phone needs to place the wireless charging area of the product (see the illustration for the wireless charging coil emission area) for wireless charging. The charging distance of this product is within 2mm, if the wireless charging distance exceeds 2mm, the wireless charging cannot be carried out. Please adjust the wireless charging distance of the mobile phone within the wireless charging range.

Charging Your Device Wirelessly and Recharging Your Portable Charger Simultaneously



Charge the product:

Use the power adapter/computer USB port to charge the local wireless charging mobile power bank. The Type-C charging cable/Lighting charging cable can be used to plug into the Type-C input port/Lighting input port of the wireless charging power bank to charge the power bank. Connect the USB connector to the charger or the USB port of the computer, and the number of the power indicator will start to flash, indicating that the product is being charged. When it is fully charged, the digital display will display "100".

Charge mobile phones or other digital devices:

1. Check whether the charging voltage of the digital product matches the output voltage of the product.
2. Select the original charging cable of the digital product, one end is connected with the digital product, and the other end is connected with the output port of the product. The wired output terminal of the product automatically turns on to charge the mobile phone or other digital products, and the digital display screen will always be on.
3. Charge the mobile phone with a wireless charging function, press the button once, and the digital display will light up. At this time, the wireless charging function can be used. Put the mobile phone with wireless charging function in the center of wireless charging of the mobile power bank, and the mobile phone can be charged at this time, and the digital display will be always on.

Reminder:

Please read all instructions and warnings before using this product. Improper use will damage the product or personal safety.

- The charging contact surface on the back of the mobile phone does not contain metal substances, such as iron sheets, rings, metal protective cases, etc.
- When the mobile phone is charging, if intermittent charging or serious heating is found, it is likely that the receiving coil of the mobile phone is not fully aligned with the wireless charging coil, and there are metal foreign bodies in the protective sleeve of the mobile phone. Please try to cool the mobile phone, remove the protective sleeve, and then align it in the normal position.
- This product has an over-current protection function. If the product is used improperly, it will turn off or reduce the output power, reduce the charging speed and ensure safety. Please check whether the equipment is used improperly or not.
- Do not let children use alone under 12-year-old, especially the accessories.
- Please use a soft cloth to clean the surface. Do not use chemicals, soap, or detergent.
- Please do not dismantle the machine by yourself. The user's abnormal use or improper placement of this product may reduce the service life or damage the product. Therefore, the responsibility does not belong to the warranty responsibility or the manufacturer's responsibility. Please understand.
- There is a conversion rate in the power bank, so the battery capacity of the power bank is not equal to the rechargeable capacity.
- Please charge your power bank regularly (at least 5 months is recommended) to maintain its long service life.
- Improper use of the product may easily result in the product itself or endanger the safety of personal and property.
- If consumers violate the product manual and improperly apply or warn, the user and property damage caused by consumers and the company will not bear any legal responsibility.
- Non-professionals are strictly prohibited to decompose this product.
- Avoid using electrical appliances or loads that exceed the output current of the product (the circuit will be protected, no output).
- Avoid strong physical effects, including knocking, throwing, trampling, squeezing, etc. Misuse, dropping, or excessive force may cause product damage.
- Store the product in a cool, dry place. Do not store the product in a hot or humid environment. Do not dispose of the product in heat or fire.
- Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING – When using this product, basic precautions should always be followed, including the following:

- Keep the power adapter/computer USB port clean before using the product.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or hands into the product.
- Do not expose power bank to rain or snow.
- Use of a power supply or charger not recommended or sold by power pack manufacturer may result in a risk of fire or injury to persons.
- Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- Do not use the power bank that is damaged or modified. Damaged or modified batteries exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 100°C may cause explosion. The temperature of 100°C can be replaced by the temperature of 210°F.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Switch off the power bank when not in use.

SAVE THESE INSTRUCTIONS

Unfolded the fold-out stand:



English

- ★ CAUTION: Risk of Fire and Burn.
- ★ Do Not Open, Crash, Heat Above 45°C or Incinerate.
- ★ Follow Manufacturer's Instructions.

Deutsch

- ★ ACHTUNG: Brand- und Verbrennungsgefahren.
- ★ Nicht öffnen, zerquetschen, über 45°C erhitzten oder verbrennen.
- ★ Befolgen Sie die Anweisungen des Herstellers.

Français

- ★ ATTENTION : Risque d'incendie et de brûlures.
- ★ Ne pas ouvrir, écraser, chauffer au-dessus de 45°C ou incinérer.
- ★ Suivez les instructions du fabricant.

Italiano

- ★ ATTENZIONE: Rischio di incendio e ustioni.
- ★ Non aprire, schiacciare, riscaldare sopra i 45°C o incenerire.
- ★ Seguire le istruzioni del produttore.

Español

- ★ PRECAUCIÓN: Riesgo de incendio y quemaduras.
- ★ No abrir, aplastar, calentar por encima de 45°C o incinerar.
- ★ Siga las instrucciones del fabricante.

Polski

- ★ OSTRZEGAWCZE: Ryzyko pożaru i poparzeń.
- ★ Nie otwierać, zgnieść, podgrzewać powyżej 45°C ani spalać.
- ★ Postępuj zgodnie z instrukcjami producenta.

Nederlands

- ★ WAARSCHUWING: Risico op brand en verbranding.
- ★ Niet openen, pellen, achterzetten boven 45°C of verbranden.
- ★ Volg de instructies van de fabrikant.

Svenska

- ★ WARNING: Risk för brand och brännskador.
- ★ Öppna inte, krossa inte, värma över 45°C eller bränna in.
- ★ Följ tillverkarens instruktioner.

Türkçe

- ★ DİKKAT: Yangın ve yanık riski.
- ★ Aşırıya, zıplata, 45°C üzerinde ısıtmayın veya yakmayın.
- ★ Üreticinin talimatlarını uygulayın.

Croatia

- ★ VAROVÁNÍ: Nebezpečí požáru a popálenin.
- ★ Ne otvírat, zgnívat, podporcovat povyšej 45°C a nepalit.
- ★ Dopržajte polohy výrobce.

UK **CE** **FC** **RoHS** Made in China

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The RF transmitter on this device has not been tested for FCC compliance for those conditions where client transmitters are also in operation.