

# LED Bluetooth Symphony Controller

## Technical Parameters

Product name	Bluetooth Symphony Controller
Support system	Android 4.4 and above iOS 11.0 and above
Connection mode	Bluetooth 4.0
Remote control	40-key


## Product Description

Controller :



Long press (5 seconds): Off  
Short press: open  
Mode switch

Remote control:

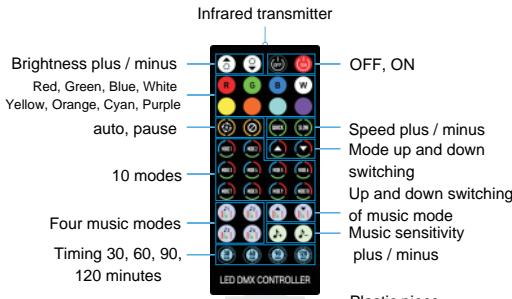

## Download App Software

Please search Rhythm Pro in majorAppcenters, or scan below QR code.



1. Download the "Phythm Pro" APP with your mobile phones by scanning the QR code on user manual or search the "Phythm Pro" APP in iPhone APP store or Google play store.
2. After the APP are downloaded successfully, you need to turn on Bluetooth function on your phone firstly, then plug in the strip light, then open the APP, your APP will pair with the strip light automatically and you can control it.

☆Android phones need to open the location function and allow permission

### Unable to Connect Troubleshooting


- (1) Check if the power supply of the light strip is normal.
- (2) Check if the Bluetooth is turn on.
- (3) Check if there are other mobile phone are connected, Bluetooth 4.0 only support connections one to many, dose not support many to many.
- (4) Check APP Bluetooth setting if the phone is connected to the device, if connect, exit the APP and reopen, the APP will go to connect automatically.
- (5) Normal operations and can not connect, please exit the APP and reopen.
- (6) Exit APP, restart mobile phone, power on the strip light, reopen the APP, then them will connect automatically.

## Operation Instructions


On the homepage interface, The app automatically searches for nearby devices. Click the top-left icon to enter the device grouping interface. When you see (e.g., TAPE LIGHTS 00-XXXX) , it indicates a successful connection. Multiple devices can be managed by clicking the top-right "+" button.




1. Setting: You can set RGB sorting.

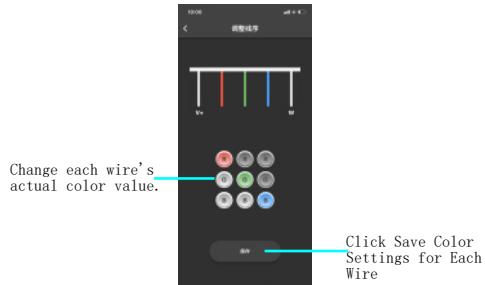


2. Color Adjustment Interface: Adjust colors, brightness, and turn the lights on or off from the color interface.

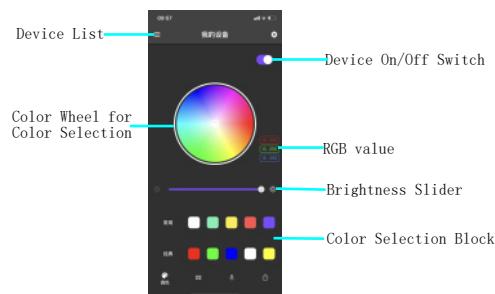


3. Mode Interface: Choose your preferred mode, adjust speed and brightness.

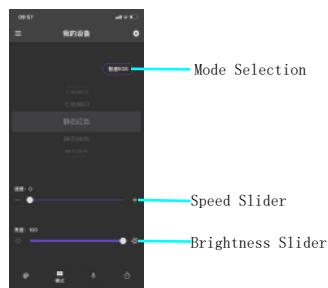

3. Microphone Interface: Comprises phone mic and external mic. The phone mic adjusts lighting based on ambient sound, while the external mic can be set to preferred modes and sensitivity to adjust lighting.

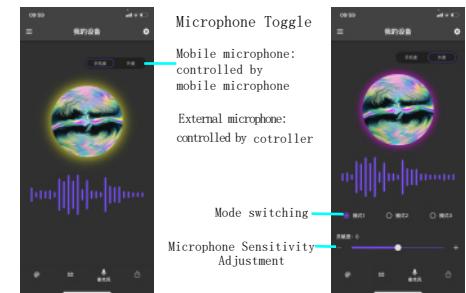

5. Timer: Set specific time periods to turn the lights on or off.

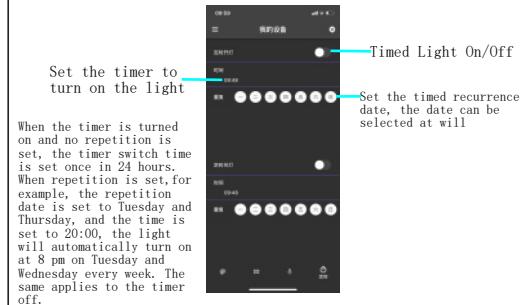

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.