


Thrusting Dildo User Manual

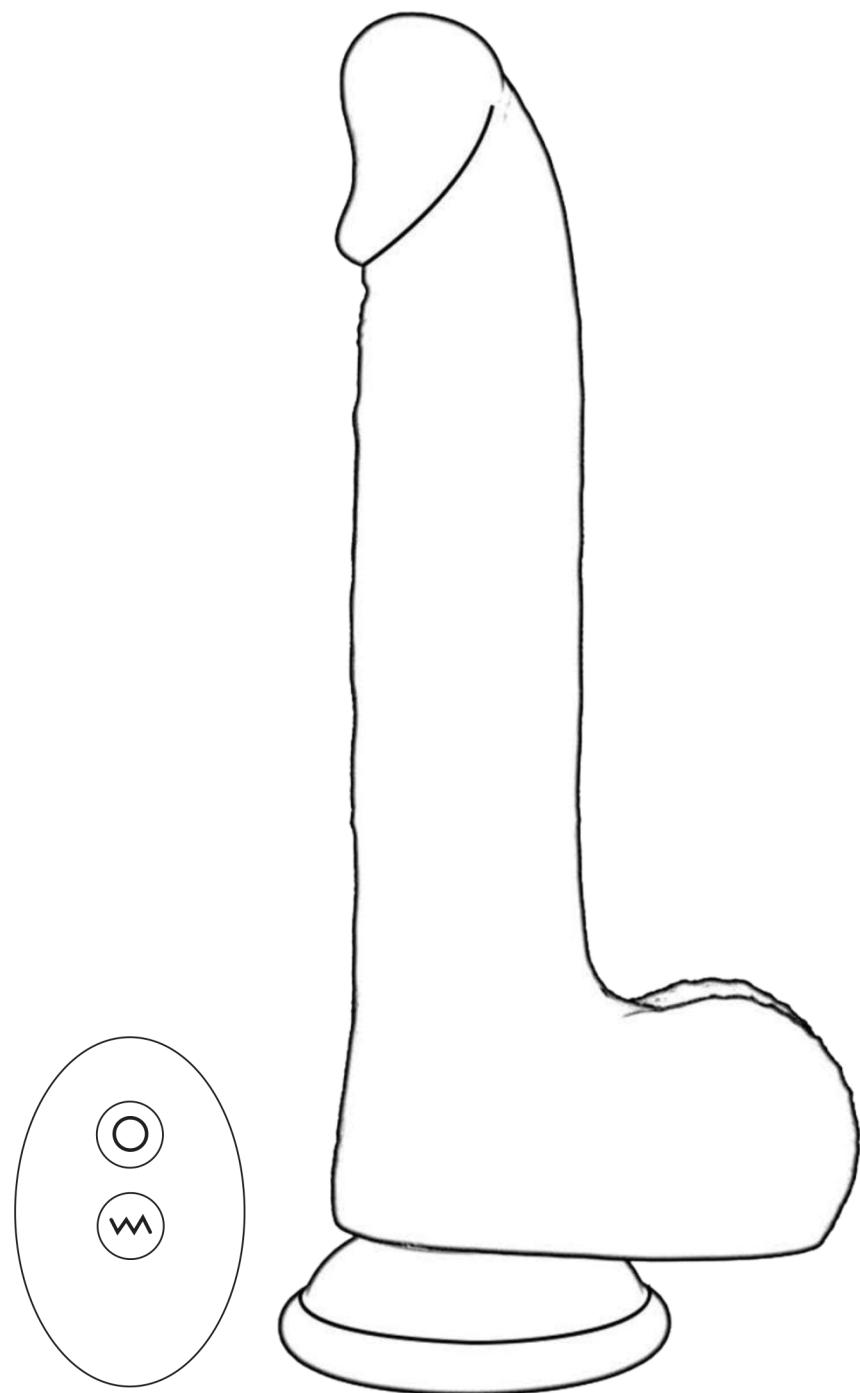

Please read carefully before use and keep this manual properly.

● product specifications

product Name	Thrusting Dildo
Material	ABS + Silicone
Dimensions	68mm*99.2mm*228.7mm
charging Method	Type-c / USB charging
charging Time	Approx. 2 hours
Battery Type	Rechargeable polymer lithium battery (1000mAh)
Usage Time	Approx. 1 hour
Noise Level	≤ 55 dB (measured at 30cm distance)
Rated Voltage	3.7V
Rated current	1500mA
Rated power	5.55w
Main Functions	10 vibration modes, 10 thrusting modes
waterproof Level	IpX7

- package contents

vibrator*1, Remote control*1, charging cable*1, user manual*1

- usage Guide


1. Turn on the thrusting dildo.
2. Adjust to your preferred mode.
3. Relax and enjoy your personalized experience.
4. clean with mild soap and water after use, then store in a cool, dry place.

Note: For best performance, fully charge before first use!

- Function Guide

1. Power on: Hold the power button for 1.5 seconds to turn on the device.
2. Thrusting Modes: short press the power button to switch thrusting modes; long press to deactivate thrusting.
3. vibration Modes: short press the vibration button to switch vibration modes; long press to deactivate vibration.
4. Mode Flexibility: use thrusting and vibration modes independently or in combination.
5. Low Battery Alert: The indicator light flashes when the battery is low-time to charge.
6. charging: Plug the included usB cable into any standard 5v/1A adapter.
7. charging status: The indicator light blinks while charging and remains steady when fully charged.
8. Full charge time: Approximately 2 hours.

- product Diagram

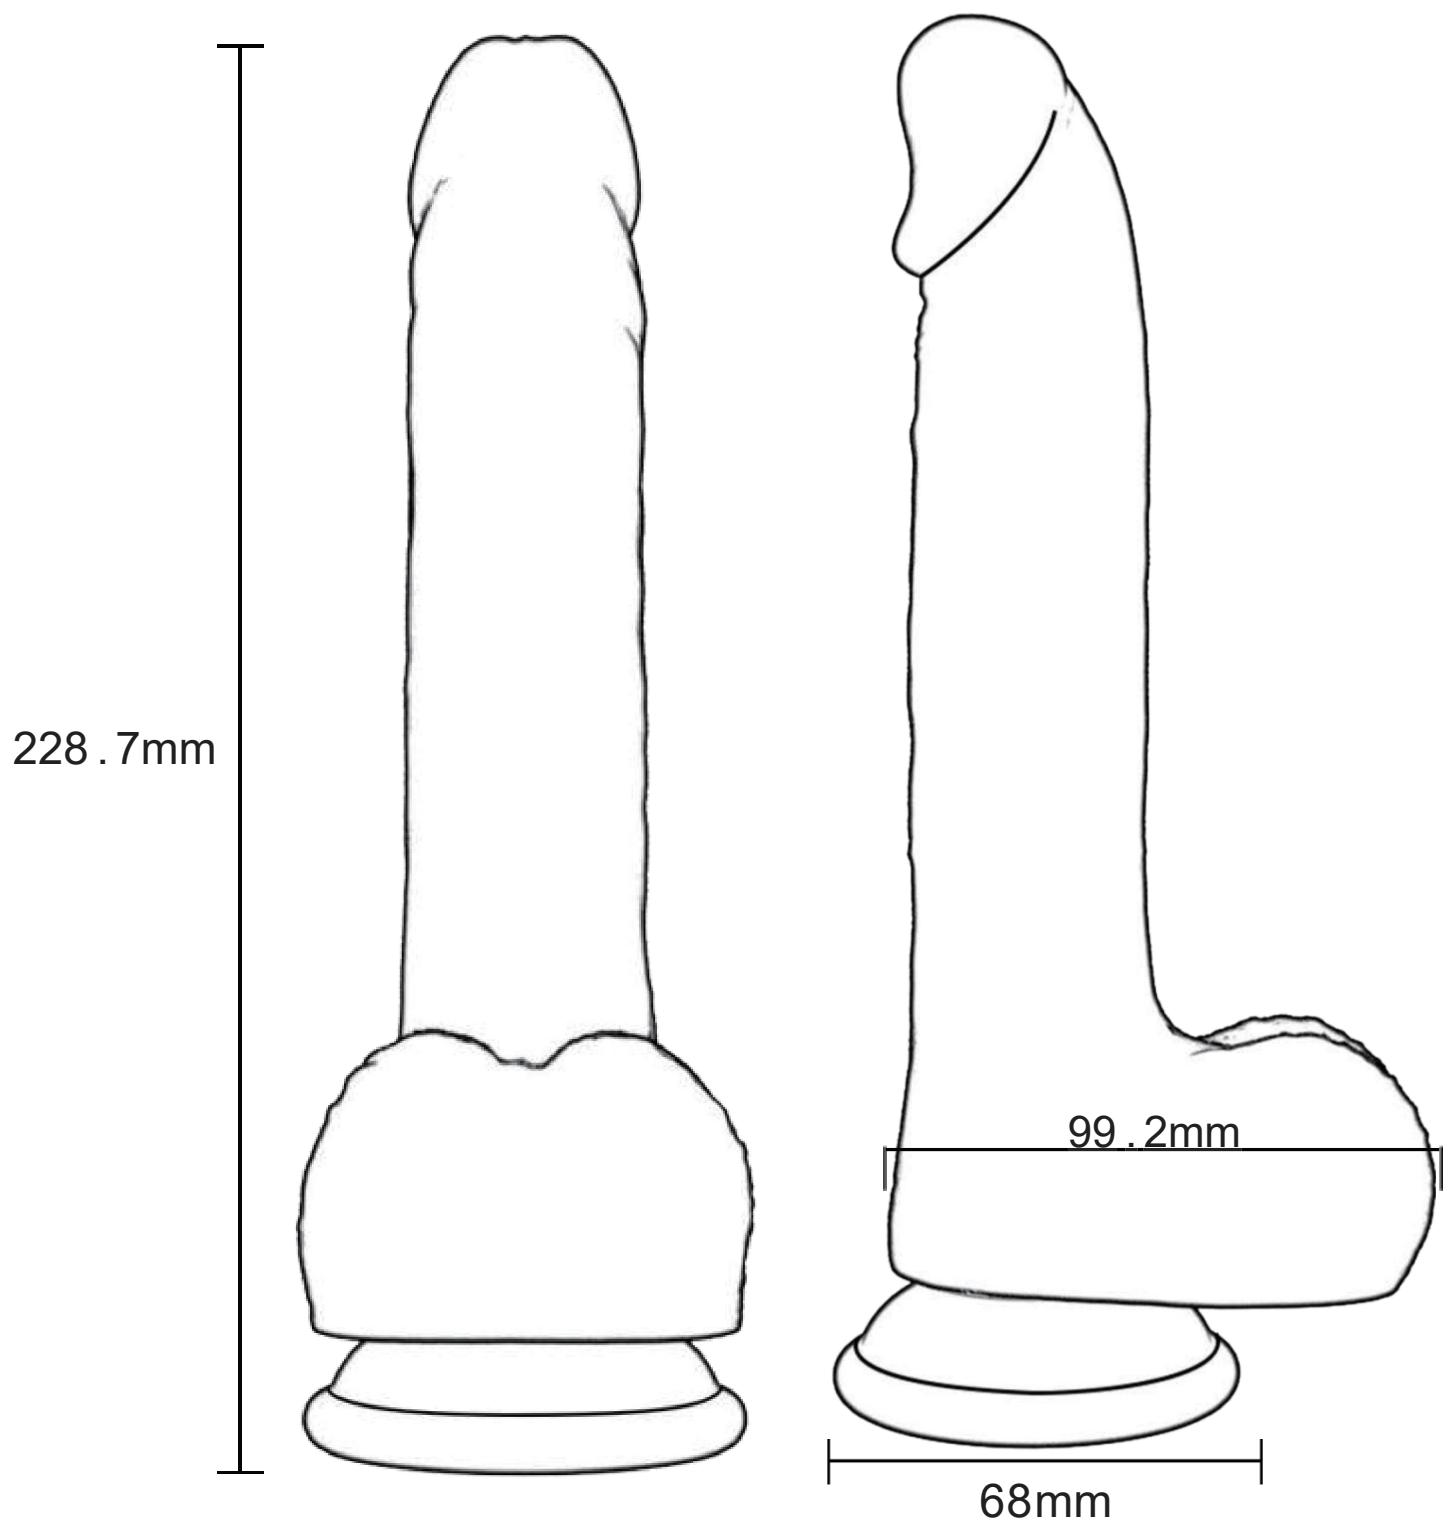

- Remote control Guide



power on: Activate the device.



short press to switch thrusting modes,

Long press to turn off thrusting function.



short press to switch vibration modes,

Long press to turn off vibration function.

Note: Remove the insulating sheet before using the remote control.

The remote control uses CR2032 button battery.

- Cleaning Guide

1. After use, Rinse the product with clean water. Avoid scrubbing with hard objects like brushes to prevent damaging the silicone surface, staining, or water ingress.
2. After cleaning, dry the product thoroughly with a soft towel and store it in a cool, dry place.

- precautions

1. This product is designed for adult only. Not for purchase or use by minors under 18.
2. Do not combine with other products. stop immediately if discomfort occurs.
3. Do not attempt to disassemble, modify, or repair this product yourself.
4. For safety, conduct regular inspections of the product. Immediately discontinue use if any damage or malfunction is observed.
5. After use, store the product in a cool, dry, and well-ventilated area, out of reach of children.
6. The raw materials of this product meet environmental requirements. This product contains a lithium battery. Do not dispose of it in regular waste. Return it to a certified recycling facility for proper disposal to protect the environment.
7. Avoid subjecting the product to impacts, crushing, or excessive weight to prevent functional damage.

- Maintenance Method

1. Before and after each use, clean the product with mild soap and warm or cold water, then dry thoroughly. Avoid exposure to extreme heat or cold.
2. Please store this product in a cool, ventilated and dry place to avoid direct sunlight, high temperature, heavy pressure, humidity and pollution.

Remote control and battery

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children, Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Warnings: Keep away from the children. If swallow, please Call a local poison control center for treatment information.
- d) Battery type CR2032.
- e) Nominal voltage 3.0V Battery.
- f) the product contains replaceable batteries.
- g) Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** Of CHILDREN
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



The battery can be replaced.

- a) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."
- b) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- c) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- d) The statement "Always completely secure the battery compartment, if the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.