

OPEN EAR AC530



快速指南

请仔细阅读本快速指南并妥善保存以备将来使用。

OPEN EAR AC530



QUICK START GUIDE

Please read this Quick Start Guide carefully and keep it for future use.

产品参数

型 号	MH22248
无 线 版 本	6.0
充电仓电池容量	300mAh
耳机电池容量	50mAh
传 输 半 径	10米
音 音 播 放	约6小时(60%音量)
通 话 时 间	约6小时(60%音量)
充 电 接 口	Type-C
充电输入标准	DC 5V/300mA
充 电 时 间	约2小时




无线配对

- 1.耳机从充电仓拿出，耳机自动开机/长按多功能触摸键3-5秒开机，耳机指示灯亮。
- 2.未连接设备的耳机，开机后自动进入OWS组对，OWS组对后自动进入配对模式(并尝试回连最后连接的手机)；打开手机无线界面，搜索“Monster Open Ear AC530”，点击配对，连接成功并伴有提示音。

— 01 —

开机/关机

开机：①耳机从充电仓拿出，耳机自动开机，耳机自动配对等待连接。
②长按耳机3-5秒开机。
关机：①连接手机时，L/R耳机放入充电仓，耳机自动关机。
②并开始充电。
③长按耳机3秒关机。
④耳机开机后未连接设备时5分钟自动关机。

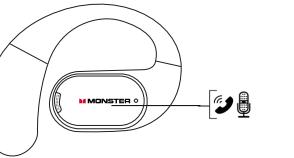

通话使用

使用通话功能时，L/R耳机均可进行如下操作：
• 接听：来电时，单击多功能触摸键。
• 拒接：来电时，长按多功能触摸键2秒。
• 挂断：通话时，长按多功能触摸键2秒。

唤醒语音助手功能(需手机支持)

在音乐播放或暂停状态，长按耳机多功能触摸键2秒，启动语音助手功能(Siri)。

— 02 —

音乐使用

- 音乐暂停/播放：已连接/播放时，单击左/右耳多功能触控区。
- 音量减：音乐播放时，双击左耳多功能触控区(左耳L)。
- 音量加：音乐播放时，双击右耳多功能触控区(右耳R)。
- 上一曲：音乐播放时，三击左耳多功能触控区(左耳L)。
- 下一曲：音乐播放时，三击右耳多功能触控区(右耳R)。

充电指示灯

- 1.通过充电线给充电仓充电：
 - 充电仓亮：充电仓指示灯慢闪
 - 充电仓充满电：充电仓指示灯熄灭
 - 充电仓低电量：充电仓指示灯快闪
- 2.耳机放入充电仓，自动充电：
 - 耳机充电：耳机放入充电仓，充电仓给耳机充电，耳机指示灯常亮。
 - 耳机充满电：指示灯熄灭

恢复出厂设置

开机未连接状态下，连续单击左/右耳功能键5次后恢复出厂设置。

— 03 —

注意事项

- 1.主耳作为副机与手机连接不中断的桥梁,电量消耗大于副机为正常现象。
- 2.苹果手机实时显示主机内部电池电量。
- 3.佩戴方法很重要，避免信号天线被耳朵内部所阻挡,请根据说明佩戴方法进行佩戴。
- 4.双耳模式下任何一边耳机用手捂住会导致信号不良情况。目前此类技术耳机均存在这个情况,因为用手相当于阻断了两个耳机之间的信号连接。
- 5.双耳模式下耳机与主耳机(R耳机)中间一定不能有太多干扰性的障碍物,并且需要确保两者之间的距离,不要影响了耳机与主机(左耳机)间的信号传输。
- 6.双耳模式下,若副耳机(L耳机)有偶尔断连问题属于正常现象,毕竟是属于无线信号传输,就跟WiFi网络一样,有时候不稳定属于正常可能,此时刚好信号传输受到干扰,请稍等片刻或者换下位置即可解决。

- 切勿使用具有腐蚀性的清洁剂清理本产品。
- 切勿让本产品加热或靠近火源。
- 切勿让本产品长时间置于阳光下直接照射。
- 切勿让本产品靠近于火中,避免发生爆炸。
- 切勿为尝试拆开本产品作任何修改,因为它并不包含任何可修改组件。
- 切勿在雨中使用本产品。
- 如果长期不使用本产品,请将它储存在干燥的环境中,并每月至少给耳机充电一次以延长寿命,避免极端的温度和灰尘。
- 您必须选择一款正规生产商制造的合格充电器为耳机充电!

这款产品符合FCC第十五条规定,操作必须根据以下两个条件:
(1)本设备不产生干扰;
(2)本设备必须承受任何接收到的干扰,包括可能导致意外操作的干扰。

— 04 —

常见问题及解决方案

如遇耳机不能正常使用	把耳机放入充电仓，删除手机端中的无线配对名和关闭无线功能,5秒后重新打开电源盖连接耳机。
耳机没有声音	<ol style="list-style-type: none">1.检查设备及音量，将音量调至合适位置；2.请检查耳机是否连接到对的设备上，确保连接正确；3.超出耳机有效连接距离，控制设备和耳机的距离在10米内；4.请检查耳机的无线音频输出是否开启。
耳机无法连接	<ol style="list-style-type: none">1.检查耳机是否处于搜索配对状态,是否选择了正确的设备名或重新开机试连接；2.周围无线设备太多,请关掉其他无线设备,以免干扰无线连接；3.耳机已连接其他设备连接,请先断开与其他设备的连接,然后重新开机再试；4.耳机电量不足,请充电。
声音失真、断音	<ol style="list-style-type: none">1.设备的音频文件质量较差,更换高质量的音频文件播放；2.检查音量级别,必要时请降低音量；3.请检查扬声器电量不足,请先充电；4.超出耳机有效连接距离,或耳机与无线设备间有障碍物。
无线连接后无法使用手机键盘	请在手机无线连接处点击右侧感叹号,关闭输入设备连接。

— 05 —

Product parameter

Model number	MH22248
Wireless version	6.0
Charging bay battery capacity	300mAh
Headphone battery capacity	50mAh
Transmission radius	10M
Music playback	About 6 hours (60% volume)
Talk time	About 6 hours (60% volume)
Charging interface	Type-C
Charge input standard	DC 5V/300mA
Charging time	About 2 hours



Wireless pairing


- 1.将耳机拿出充电仓，耳机将自动进入待机状态，长按多功能触控键3-5秒以启动，耳机指示灯亮。
- 2.未连接的耳机将自动进入TWS组对，TWS组对后自动进入配对模式(并尝试回连最后连接的手机)；打开手机无线界面，搜索“Monster Open Ear AC530”，点击配对，连接成功并伴有提示音。

— 01 —

Power on/off

Boot Up:
1. The headphones are taken out from the charging compartment, the headphones are automatically turned on, and the headphones are automatically paired and waiting for connection.
2. Press and hold the headset for 3-5 seconds to turn it on.

Shutdown:
1. When the phone is connected, the L/R headset is placed in the charging compartment, and the headset automatically shuts down and starts charging.
2. Press and hold the headset for 5 seconds to power off.
3. After the headset is turned on, it will automatically shut down in 5 minutes if the device is not connected

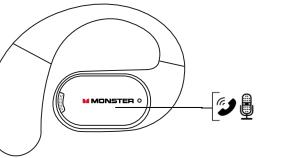

Telephone use

When using the call function, the L/R headset can perform the following operations:
• Answer: Click the multi-function touch key when a call comes in
• Reject an incoming call: Hold the multi-function touch key for 2 seconds
• Hang up: Hold down the multi-function touch button for 2 seconds during a call.

— 02 —

Wake up voice assistant function (phone support required)

When music is playing or paused, hold down the multi-function touch button on the headset for 2 seconds to activate the Voice Assistant function (Siri).

Music use

• Pause/Play music:
When connected/playing, click the left/right ear multifunction touch area.
• Volume reduction: When music is playing, double click the multi-function touch area of the left ear (left ear L).
• Volume plus: When music is playing, double click on the right ear multi-function touch area (right ear R).
• Previous: Three strikes on the left ear multifunction touch area (left ear L) when music is playing.
• Next: When the music is playing, three clicks on the right ear multifunctional touch area (right ear R)

Charging light
1. When charging the charging bin through the charging cable
• Charging in charging compartment: the indicator light of charging compartment blinks slowly
• Charging bin is fully charged: the indicator light of charging bin is extinguished
• Low charging bin: The indicator light of charging bin blinks quickly.

2. When the earphone is put into the charging bin and automatically charged
• Headset charging: The headset is put into the charging bin, and the charging bin charges the headset. The headset is steady on.
• Headset fully charged: Indicator lights off.

Factory data reset

If the headset is not connected after the startup, click the left or right headset function button five times to restore factory Settings.

— 03 —

Matters needing attention

1. It is normal that the power consumption of the main ear as a bridge connecting the secondary machine and the mobile phone without interruption is greater than that of the secondary machine.
2. The iPhone displays the internal battery power of the host in real time.
3. The wearing method is very important to avoid the signal antenna being blocked by the inside of the ear. Please wear it according to the wearing method on the introduction page.
4. In binaural mode, covering either side of the headset with your hand will lead to poor signal conditions, and this situation is present in such technical headphones, because using your hand is equivalent to blocking the signal connection between the two headphones.
5. In binaural mode, there must not be too many interfering obstacles between the headset and the main headset (R headset), and the distance between the mobile phone and the main headset (R headset). In binaural mode, if a pair of earphones (L earphones) have occasional disconnection problems is normal, after all, wireless signal transmission is like WiFi network, sometimes unstable is normal, and the signal transmission may be interfered with at this time, please wait for a moment or change the position to solve.

• Do not use corrosive cleaning agents to clean the product.
• Do not allow this product to heat or be near a source of fire.
• Do not allow this product to be exposed to direct sunlight for a long time.
• Do not allow this product to be discarded in the fire to avoid explosion.
• Do not modify this product in order to attempt to disassemble it, as it does not contain any modifiable components.
• Do not use this product in the rain.
• If you do not use this product for a long period of time, please store it in a dry environment and at least monthly.
• Charge your headphones once to extend their life. Avoid extreme temperatures and dust. You must choose a qualified charger made by a certified manufacturer to charge your headphones! This product complies with FCC Regulation 15.

The operation must be based on the following two conditions:
(1) This equipment does not produce adverse interference.
(2) The equipment must withstand any received interference, including interference that may cause unexpected operation.

— 04 —

Common problems and solutions

In case the headphones do not Normal use	Put the earphone into the charging bay, delete the wireless pairing name in the phone terminal and turn off the wireless function, 5 seconds later, open the battery cover again and connect the earphones.
There is no sound in the headphones,	<ol style="list-style-type: none">1. Check the volume of the standby device and adjust the volume to an appropriate position.2. Please check whether the headset is connected to the right device, and check whether the connection is correct.3. Beyond the effective connection distance of the machine, the distance between the control device and the headset is within 10 meters.4. Check whether the mobile phone's wireless audio output is enabled.
Headset cannot connect	<ol style="list-style-type: none">1. Check whether the headset is in the search pairing state, Check whether the correct device name is selected or restart the headset and try again.2. There are too many wireless devices around, please turn off other wireless devices to avoid interfering with wireless connection.3. The earphone has been connected to another device, Disconnect the earphone from the other device first, and then restart the earphone and try again.4. Earphone battery is low, please charge.
The sound is distorted, static	<ol style="list-style-type: none">1. The audio file quality of the device is poor, Replace the audio file with a high-quality one.2. Check the volume level: Lower the volume if necessary.3. Please check whether the power is insufficient, Please charge it first.4. The effective connection distance of the headset is exceeded, or there is an obstacle between the headset and the wireless device.
After wireless connection The phone keyboard cannot be used	Click the exclamation mark on the right of your phone's wireless connection to close the input device connection.

— 05 —

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.