

《 Alet ' s Mining · Cultivation Manual 》

— Personally taught by Alet, the Sage of Fire . —

“In the name of fire, control the nucleus of hashrate.”

My name is Alet, the Wise Man of Fire. From this day forward, I guide you into the deeper realms of alchemy, forged by the SHA-256 algorithm. Awaken the inner fire, unleash the soul of the miner, and master the truth of efficient returns.

Flame Grades · Tier Overview

Version	Model	HashRate	Power
Gray	BG01	5.0 TH/s	≤ 160W
Silver	BG02	7.0 TH/s	≤ 170W
Golden	BG03	12.0 TH/s	≤ 200W
Mysterious	?	?	?

It is said the “Diamond Tier · Spiritual Flame” is the ultimate relic in the Flame Realm. Those without the inscription shall not attempt to invoke it.

《 Volume I 》

— the origin of the flame core · Foundational Knowledge —

Alet Graphics Card Mining Machine, an artefact with a heart of fire and a bone of stability, specialised in refining the SHA-256 cryptographic algorithm and extracting the essence of digital ores (BTC / BCH...).

Its flame core is composed of ASIC stones, adapted to PC hosts, GPU racks, and the array of servers, and it has been refined for a long time, with constant gains. The version you are holding is: Silver Order - Blazing Flame Spirit Weapon (if not shown in the inscription, please refer to the Flame Score for details).

《 Volume II 》

— Fire Spirit Set · Unsealing of fixtures —

Each practitioner must make sure that the flame loadout is complete before opening the box:

- 【Master Spirit Device】 Alet ASIC Graphics Card Miner × 1
- 【Power Source Line】 6pin/8pin Power Cable × 1
- 【Secret Book Volume】 Alet Flame Mining Technique × 1

《 Volume III 》

— Ritual of Ignition · Installation Method —

Follow the sacred ritual with calm mind:

1. Seal the Furnace: Power off the host and wait until energy is fully dissipated.;
2. Insert the Flame Slot: Securely insert the main device into the PCIe slot;
3. Infuse Spirit Energy: Connect the power source, ensuring at least 1300W of stable supply.
4. Connect Flame Network: Link to the network to channel into the mining pool.

A If using Ethernet: please plug the cable into the connector at the back of the host, The Ether line shall channel flame to the pool.

B If using WiFi : Enter the system interface, select the WiFi named Flame Signal Channel, enter the key to connect.

C “One wire to awaken the spirit—mining never ceases. The network is the oxygen to the furnace — never let it be severed.

5. Awaken the Host: Restart the power, the flame core shall arise.;
6. Configure the Furnace: Input mining pool address, public key, and wallet rune.
7. Begin Refinement: Run the mining software and let the hashrate burn like fire.

《 Volume IV 》

— Way of Flame Stability · Operation Guidelines —

- 1 Thermal Force: Maintain ambient temperature $\leq 35^{\circ}\text{ C}$, ensure proper airflow.
- 2 Energy Stability: Use high-quality power sources to prevent voltage surges.
- 3 Dust Purification: Regularly clean fans and heatsinks to prevent flame from dying.
- 4 Daily Recitation: Manual may be updated; true knowledge evolves.
- 5 Local Control First: Alet opposes remote control—only your hands may command the flame

《 Volume V 》

— Extinguishing Curses · Troubleshooting —

SYMPTOMS	RESPONSE	CAUSE
No Start	Check power and connections reignite	Loose power or no energy
Weak Flame	Recheck settings, re-enter mining incantation	Incorrect configuration
Overheating Flame	Clean dust, improve airflow	Poor ventilation
Random Restarts	Replace with higher-quality PSU	Unstable voltage

《 Volume VI 》

— Flame Inscriptions · Technical Specs —

- 1 Algorithm: SHA-256 (chain genus BTC/BCH...)
- 2 Arithmetic power: 7.0 TH/s ($\pm 5\%$)
- 3 Energy consumption: about 160W
- 4 Interface specification: PCIe x16 + Flex Cable (8pin [3+5])
- 5 Dimensions: Standard graphics card (263 x 108 x 50 mm)

《 Volume VII 》

— Flame Oath · Warranty & Support —

- 1 Tech Inquiries: support@Magicminer.cc
- 2 Community of Fire Cultivators: Scan to join "Flame Source Arts Society"
- 3 Warranty: Core components covered for 6 months; extension available
- 4 Official Website: www.magicminer.cc

May you wield flame as blade, computation as soul
and forge eternal golden fire amidst the blockchain inferno

— Alet · Sage of Fire —



Scan for after-sales support and
FAQs for quick troubleshooting



台灣售後服務
掃描聯繫在地服務中心，查詢維修與支援資訊



AUS Support Center
Scan for local repair & warranty services



MagicMiner

SILVER

AELT

FLAME CORE ARTISAN



MM-001-AG

User Manual



MagicMiner

SILVER

AELT

FLAME CORE ARTISAN

AELT is a fiercely passionate strategist, driven by impact and immediacy. He trusts action over words and burns brightest under pressure.

Fluffy A a spirited fire fox, whose tail burns as hot as AELT's determination,



Power	53
Logic	30
Control	80
Defense	96



MM-001-AG

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.