

Remote Control Manual

A . Remote controller and control box code matching

1. After the device is powered on, press and hold the "SET" button on the remote control for 5 seconds to complete the code matching

2. **Code clearing:** Power on the device again and press and hold the "SET" button on the remote control for 5 seconds to complete the code clearing

B . Key connection function

1. Upward/downward movement

Press the "▲" button to move the TV stand up to the top position where it is flush with the ceiling. Press the "▼" button to move the TV stand down to the maximum tilt angle position. Press the "HOME" button to stop the movement.

2. Location memory

Long press the "M1" or "M2" button on the remote control for 3 seconds, and you will hear a long beep, indicating that the current position has been saved to memory.


These two buttons can each store different positions.

3. Memory location

Short press the "M1" or "M2" button to automatically move the bracket to the position saved in the corresponding button

4. Reset

If the bracket cannot be adjusted to the highest or lowest position, press and hold the "RST" button on the controller for 3 seconds, and the driver will emit a long beep sound, indicating that it has entered the reset state. The bracket will return to the lowest position, indicating that the reset is successful

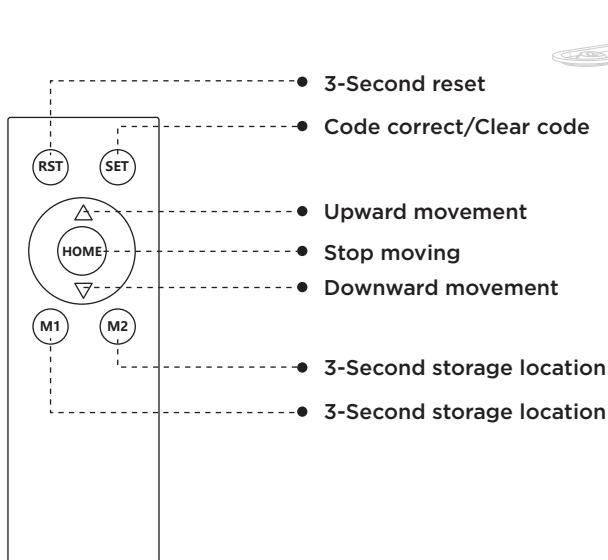

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio/TV technician for help.**

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

