

**Supreme**


**ANABAS**  
audio

Portable player  
**GP-N3S**

**Operating Manual**

**Before use**

Please read through the manual  
and the warranty to use properly.

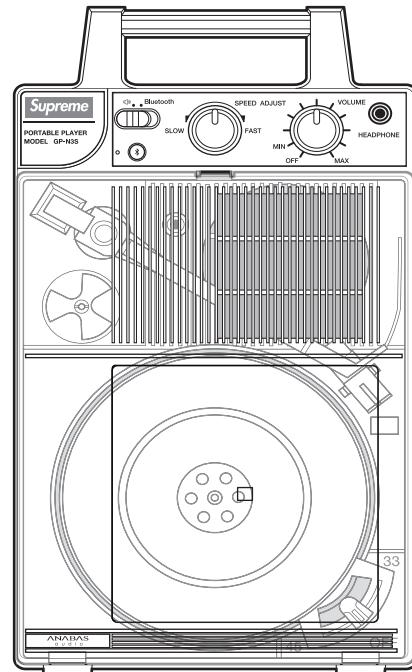

Thank you very much for purchasing our product.  
Please keep this manual (with a warranty) in a safe place.  
It will be useful for you in case of any question or concern.


This product is planned with  
GP-3-R manufacturer's consent.

■ **Contents** ■

● <b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	2	● <b>Usage of earbuds &amp; recording terminal</b> .....	10
● <b>Wireless Communication</b> .....	3	● <b>Usage of earbuds</b> .....	10
● <b>Product feature</b> .....	3	● <b>How to record</b> .....	10
● <b>Package</b> .....	4	● <b>How to Use Bluetooth</b> .....	11
● <b>Before use</b> .....	4	● <b>Pairing with a Bluetooth Device</b> .....	11
● <b>Installation of record holder</b> .....	4	● <b>Listening to Music via Bluetooth</b> .....	11
● <b>Installation of EP adaptor</b> .....	4	● <b>Switching from Bluetooth Device to Speaker</b> ..11	
● <b>Part names</b> .....	5	● <b>Replacement of record needle</b> .....	12
● <b>Before use</b> .....	6	● <b>Care</b> .....	12
● <b>Using an AC Adapter or Mobile Battery</b> .....	6	● <b>Care of the main body</b> .....	12
● <b>Using Dry Cell Batteries</b> .....	6	● <b>Care of AC adapter plug</b> .....	12
● <b>How to play a record</b> .....	7	● <b>Specifications</b> .....	13
● <b>Hang the device on column/wall</b> .....	8	● <b>Troubleshooting</b> .....	13
● <b>Use the device putting obliquely</b> .....	9	● <b>About after-service</b> .....	14

# ● **IMPORTANT SAFETY INSTRUCTIONS**

 1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.  
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.  
When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. For heat dispersal, do not install this unit in a confined space such as a bookcase or similar enclosure.
16. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



#### ※ About Trademarks

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and are used under license.

## Wireless Communication

### FCC Information (For US customers)

#### 1. PRODUCT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

#### 2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by Taichi Holdings Limited may void your authority, granted by the FCC, to use the product.

#### 3. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

#### CAUTION


- This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

## Product feature


- You can change rotation speed of record.
- You can play 17cm record even the device is put on the column or wall or placed obliquely.
- It is the portable player that is easy to carry around.
- You can use it with AC adaptor (AC100V ordinary domestic power source) or dry cell battery (AA). Power source is switched automatically.
- The DC power input terminal uses a USB Type-C connection. You can use your own mobile battery.
- It comes with a combined earbud and recording jack.
- Equipped with Bluetooth functionality. You can use your own Bluetooth-compatible earbuds or headphones.

# ● Package

Make sure that the items shown below are included in the package before use.  
If any item is missing, please contact the dealer where you purchased or our support center.

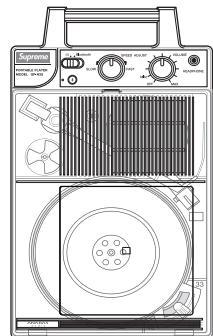

Portable player  
GP-N3S (main body)

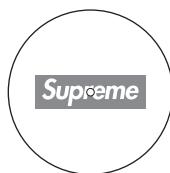

Slipmat




AC adapter



Record holder



USB Type-A to Type-C Adapter for EP  
Conversion Cable

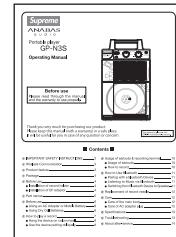


Manual  
(This manual)

# ● Before use


## ● Installation of record holder

When purchased, the record holder is packaged as accessory. Please attach it to tabs inside of the top cover when not in use.

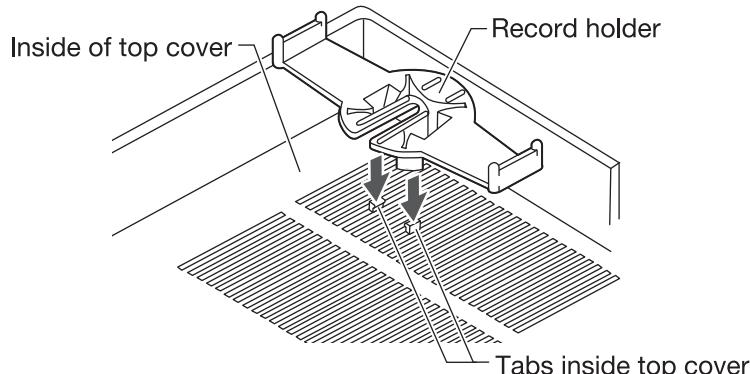


## ● Installation of EP adaptor

When purchased, the EP holder is packaged as accessory. Please attach it to the main body when not in use.

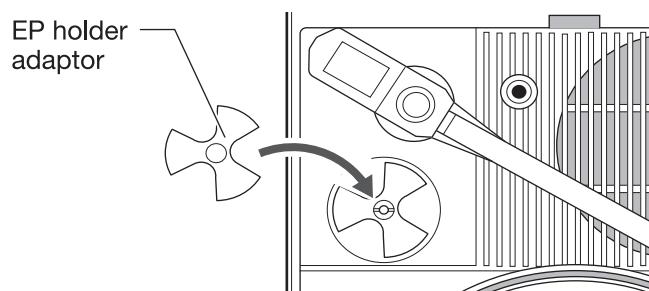

# Part names

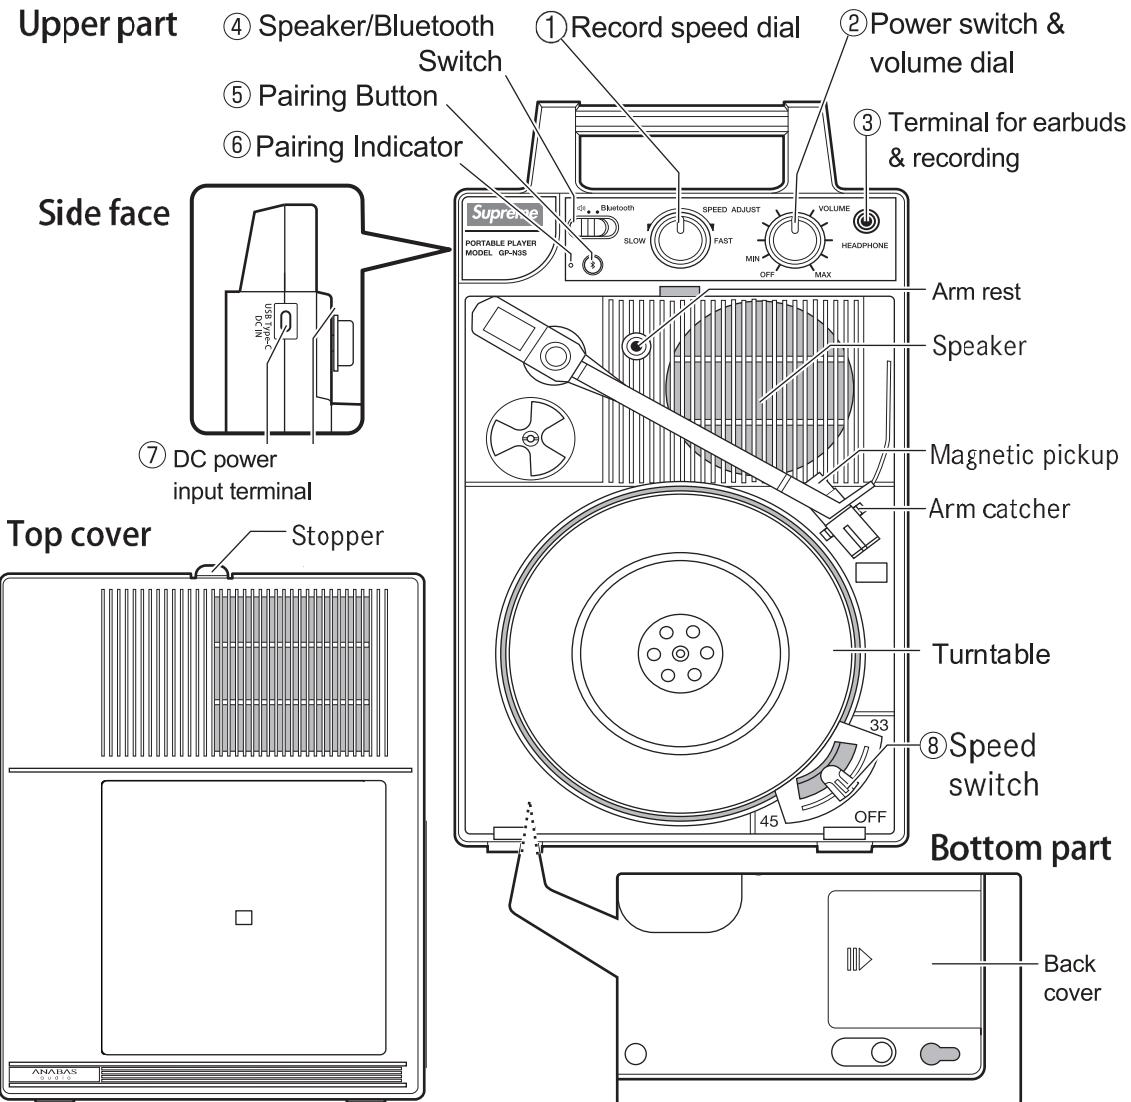

## ① Record speed dial

It is the dial to adjust rotation speed when playing a record. Record rotation speed becomes constant at the center of dial rotation. Turning the dial clockwise increases speed and turning anti-clockwise decreases speed. Range of change is about 5%.

## ② Power switch & volume dial

By turning the dial clockwise, it clicks, and the device is turned on. Turning the dial clockwise increases volume and turning anti-clockwise decreases volume. When turned the dial fully anti-clockwise, it clicks, and the device is turned off.

※ When connected to a Bluetooth device, the volume cannot be adjusted on this unit. Please adjust the volume on the Bluetooth device side.



## ③ Terminal for earbuds & recording

Connect to your earbuds or 3.5mm stereo-mini plug. When tape-recording the sound of record, connect to the device which uses connector code of 3.5mm stereo-mini plug.

※ After connecting the plug to this terminal, no sound will come out of the speaker.

## ④ Speaker/Bluetooth Switch

Switches audio output between the speaker and Bluetooth.

## ⑤ Pairing Button

Press when pairing with your Bluetooth device.

## ⑥ Pairing Indicator

Indicates the Bluetooth pairing status by lighting up or blinking.

## ⑦ DC power input terminal

Connect the included USB cable's Type-C plug to the included AC adapter.

You can also use a mobile battery.

## ⑧ Speed switch

It is the dial to tune the rotation speed of record to the speed specified by record. Tune the dial to the number shown on the cabinet.

※ When not playing the record, be sure to tune the dial to OFF position.


# Before use

## Using an AC Adapter or Mobile Battery

This device can be powered by a household outlet, mobile battery, or dry cell batteries.


※ Batteries are not included. Alkaline D-size batteries are recommended. Please purchase six D-size alkaline batteries.  
⚠※ Mobile battery is not included.  
Please use a mobile battery with DC 5V--- and 0.5A or higher output.

### 1. Connect the Type-C plug of the included USB Type-A to Type-C conversion cable to the DC power input terminal on the side of the unit.

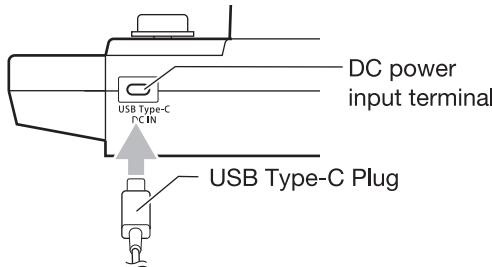

### 2. When using the included AC adapter:


Connect the Type-A plug of the included USB cable to the AC adapter, then plug the AC adapter into a 100V AC outlet

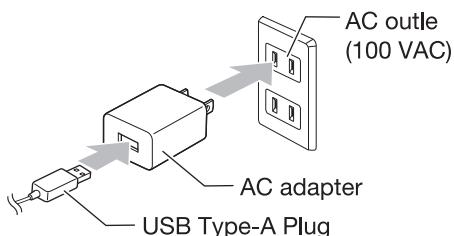

⚠※ Please connect to easy-to-reach power outlet so that you can unplug in an emergency


### 3. When using a mobile battery:

Connect the Type-A plug of the included USB cable to the mobile battery.

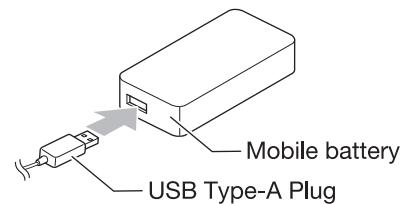


## Using Dry Cell Batteries

### 1. Slide and remove the bottom panel in the direction of the arrow on the underside of the unit.

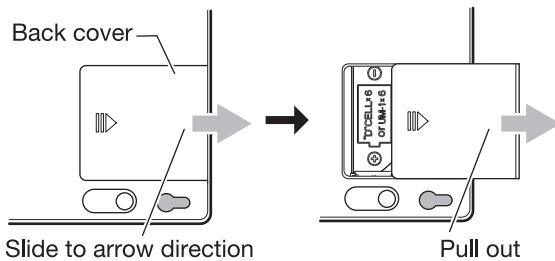


### 2. Install six D Size batteries in correct polarity.

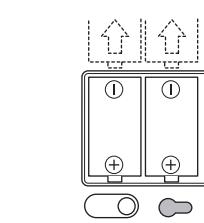


### 3. Close the back cover.

# How to play a record

1. Push down the stopper of the top cover to the direction of arrow and lift up.

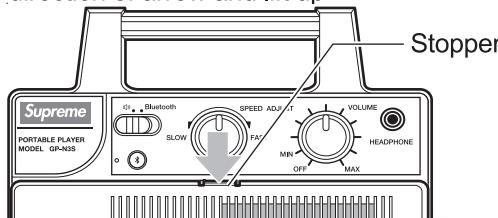


2. Turn the power switch & volume dial clockwise to turn on.

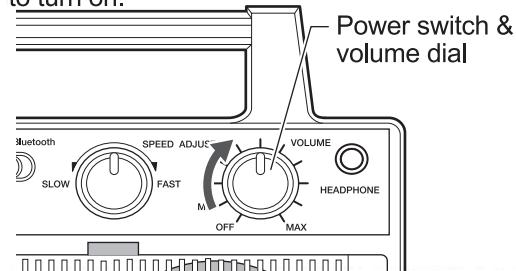


● Turn the dial clockwise until it click to turn on.

3. Remove the pickup from the arm catcher and place on the arm rest.

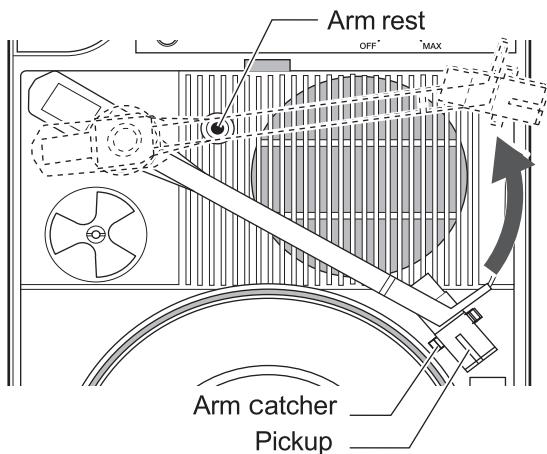


4. Remove the needle cover from the pickup.

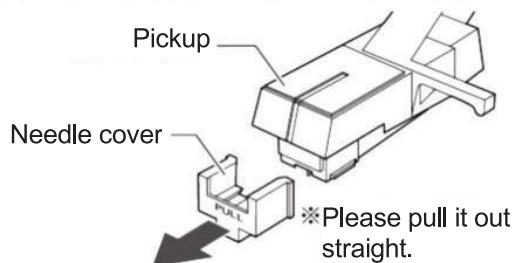

※ When downward pressure is applied to needle, it may become loose or fall from the main body and you hear only small sound. Please refer to p8 [Replacement of Record needle] to mount needle properly.



5. Adjust speed switch to rotation number of the record.

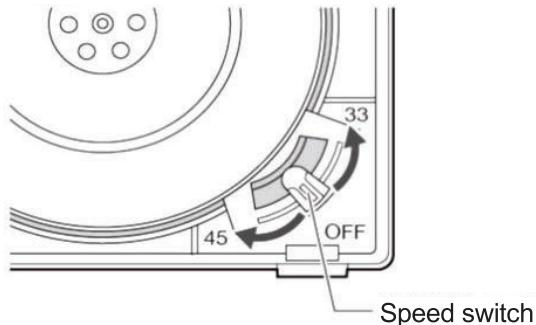

※ This device does not support SP record (78rpm).

6. Place a record on the turntable.

- When playing LP, please use the adaptor for LP.
- You can use this device putting obliquely. If you do so, please insert supplied record holder to the center spindle to fix the record. For detail, refer to p10 [Use the device putting obliquely].

7. Lift the pickup and put the needle tip of the pickup on the record softly.

- When the pickup is lifted, the turntable starts to rotate.

8. Turn the power switch & volume dial to the desired sound volume.

9. After the end of playing, return the pickup to the arm rest.

- When you return the pickup to the arm rest, the turntable stops.

10. When not playing the record, follow the instructions below.

1. Turn the power switch & volume dial fully anti-clockwise to turn off.
2. Return the needle cover to the pickup.
3. Return the pickup to the arm catcher.
4. Switch the speed switch to [OFF].

※ When not playing the record, DO NOT leave the record holder attached to the center spindle.



※ If the record slips while playing a film record, please put the adapter for EP on the record. When playing a film record, keep the device in a horizontal state.

## ● Hang the device on column/wall


17cm record can be played hanging the device on the column or wall longitudinally/transversely. When using hanging on the column or wall, use the supplied record holder.

1. Drive two long nails firmly on the column or wall aligning with hanging holes at the bottom of the device.

**!**


- ※ Ensure that the column or wall is strong enough to hang the device. If not, column or wall may get damaged, or the device may fall down causing failures or injuries.
- ※ If the nail is too thin, it wouldn't sustain the weight of the device.

- Use the nail up to 1.45cm in height.
- Use the nail up to 8mm in diameter of nail head.
- When hanging longitudinally
  - Use the hanging holes (A) & (B) at the bottom of device.
  - Drive nails at 21.5cm intervals.

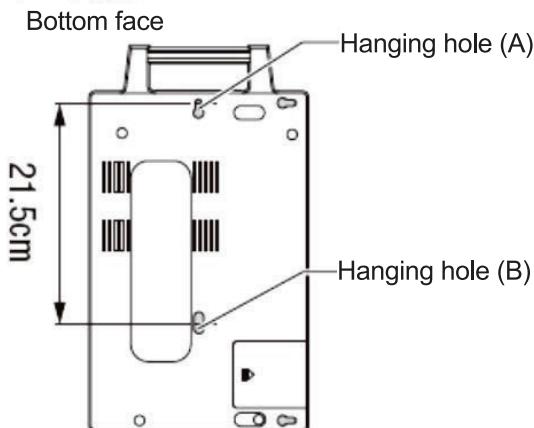


■ When hanging transversely

- Use the hanging holes (C) & (D) at the bottom of device.
- Drive nails at 31.4cm intervals.

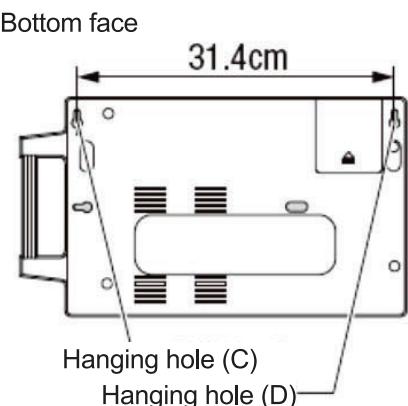

2. Hang the device on the column or wall.

3. Detach supplied record holder from inside the top cover.

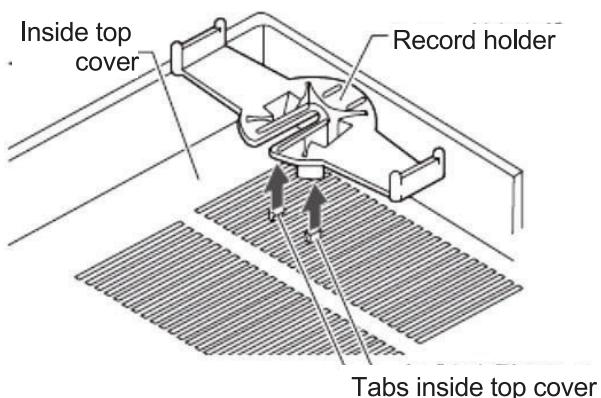

4. Place 17cm record on the turntable.


**!**

- ※ Do not place 30cm LP record as it will protrude from the device.
- ※ This device does not support SP record (78rpm).

5. Insert supplied record holder to the groove of the center spindle.

**!**


- ※ When attaching or detaching supplied record holder to the center spindle, be careful that the record holder does not touch record's sound groove.

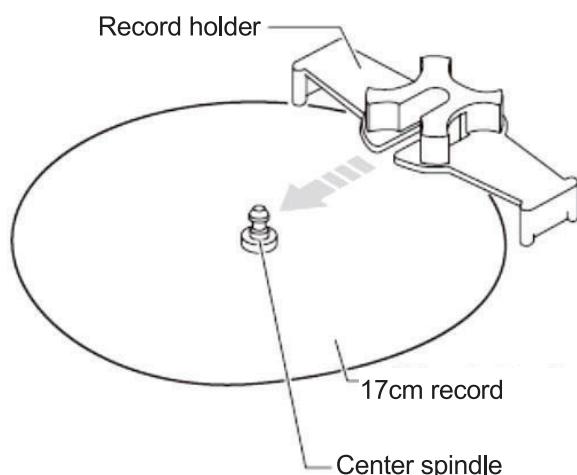

6. Play the record.

**!**

- ※ When not playing the record, DO NOT leave the record holder attached to the center spindle. Return the record holder inside top cover.
- ※ Scratched record may cause sound jumping when used hanging on the wall. If sound jumping occurs, place the device horizontally.

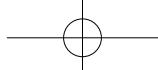

## ● Use the device putting obliquely

You can play 17cm record putting the device obliquely against the wall.


If you do so, please use supplied record holder.

### 1. Lean the device against the wall longitudinally/transversely




- ※ When leaning the device against the wall, use a stopper to prevent the device from falling down.
- ※ Stopper is not supplied.


● When standing longitudinally

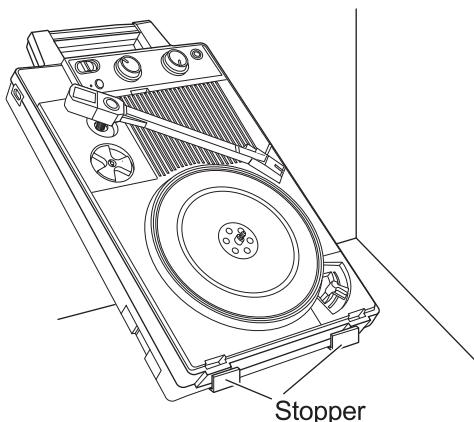

● When standing transversely

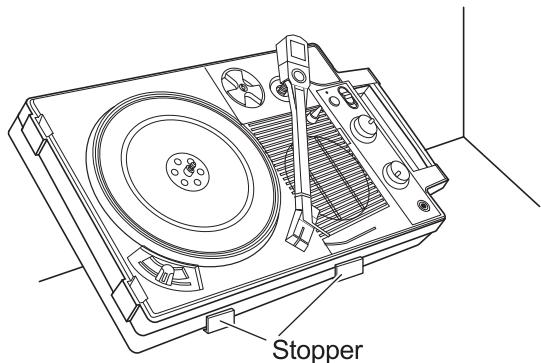

### 2. Detach supplied record holder from inside the top cover.

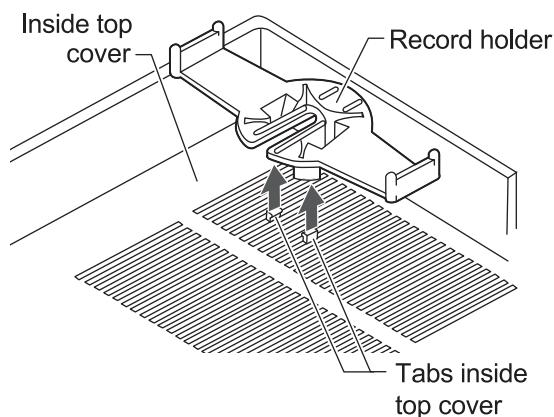


### 3. Place 17cm record on the turntable.

- ※ Do not place 30cm LP record as it will protrude from the device.
- ※ This device does not support SP record (78rpm).

### 4. Insert supplied record holder to the groove of the center spindle.

- ※ When attaching or detaching supplied record holder to the center spindle, be careful that the record holder does not touch record's sound groove.

Record holder

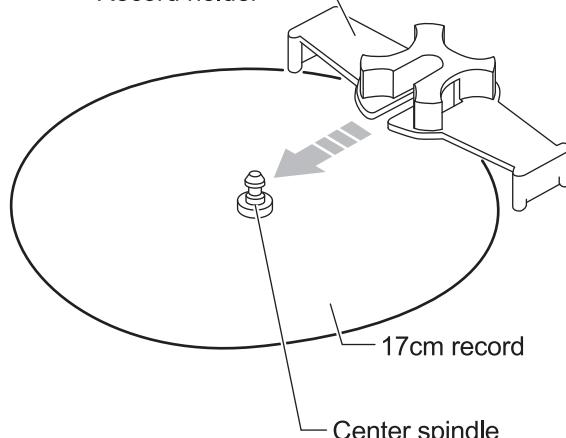

### 5. Play the record.

- ※ When not playing the record, DO NOT leave the record holder attached to the center spindle. Return the record holder inside top cover.
- ※ Scratched records may cause sound jumping when used leaning against the wall. If sound jumping occurs, place the device horizontally.

# Usage of earbuds & recording terminal


## Usage of earbuds

You can connect earbuds / recording terminals to your earbuds or headsets to listen to music in stereo.



※ Earbuds or headsets are not supplied.  
Please use your own one.

1. Set the speaker/Bluetooth switch to the "LOUD" position.
2. Turn the power switch & volume dial anticlockwise and set the volume to the minimum..
3. Connect the earbud terminal to 3.5mm stereo mini plug earbud or headset cable.

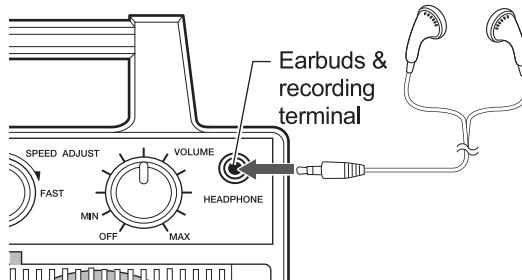


● After connecting earbuds or headset cable, sound does not come out of the speaker.

4. Play the record.
5. Turn the power switch & volume dial to adjust to easy-to-listen sound volume.



※ When using earbuds, increase sound volume incrementally not to damage your ears with loud noise.

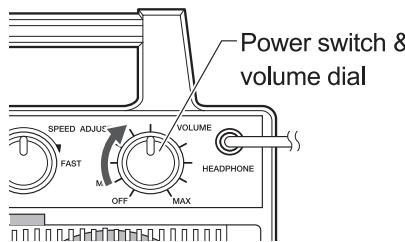

## How to record

You can record the record's sound by connecting a recording device with external input terminal like radio cassette recorder to earbuds & recording terminal.

### Preparation


Prepare the cord with has 3.5mm stereo mini plug at one end and a terminal to connect to input terminal of recording device at another end.



※ Connection cord for recording is not supplied. Please use your own ones.


### Recording

1. Set the speaker/Bluetooth switch to the "LOUD" position.
2. Connect 3.5mm stereo mini plug of connection cord to earbud terminal and another plug to the recording device.

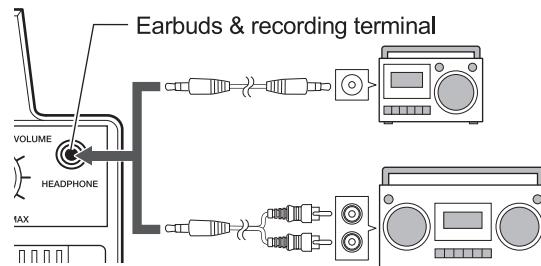

● After connecting earbuds or headset cable, sound does not come out of the speaker.

3. Turn the power switch & volume 3/4 round to the right slowly.

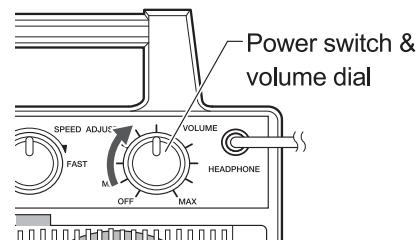

4. Play the record.

# How to Use Bluetooth

Enjoy music with your own Bluetooth-compatible earbuds or headphones.

## Pairing with a Bluetooth Device




\* Bluetooth devices are not included. Please purchase one separately.

### 1. Place your Bluetooth device within 1 meter of this unit and set it to pairing mode.

- Refer to your device's instruction manual for how to enable pairing mode.

### 2. Turn the power/volume knob fully to the left to turn off the power.


### 3. Set the speaker/Bluetooth switch to "Bluetooth".

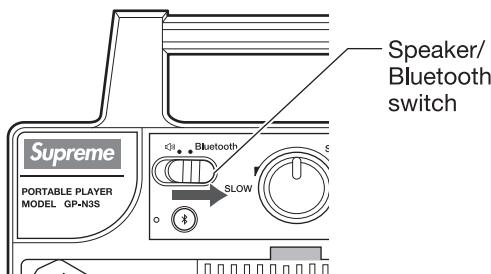

### 4. Turn the power/volume knob to the right to turn on the power.

- The pairing indicator will blink at 1-second intervals, indicating standby for pairing.

### 5. Press and hold the pairing button.

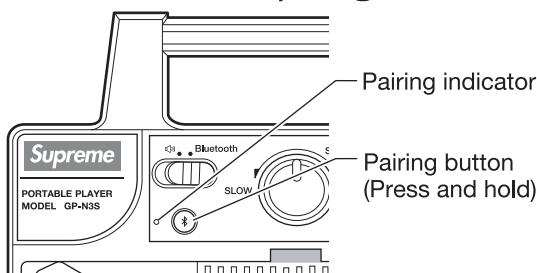

- The indicator will blink rapidly (0.5-second intervals), indicating the device is searching.

### 6. Confirm that the blinking slows down.

- When the blinking slows, pairing is successful.
- Once pairing is completed, there is no need to pair again.
- Pairing mode will automatically end after about 60 seconds, and the indicator will remain lit.
- If the indicator is lit and you need to pair again, press and hold the pairing button.

## Unpairing

You can unpair the Bluetooth device using any of the following methods:

- Turn off the power
- Set the speaker/Bluetooth switch to "Speaker"
- Press and hold the pairing button

## Listening to Music via Bluetooth

### 1. Pair your Bluetooth device with the unit.

- Refer to "Pairing with a Bluetooth Device" on the left.

### 2. Play a record.

\* Volume cannot be adjusted on this unit.  
Please use your Bluetooth device to adjust the volume.

## Auto-Off Function


This unit has a Bluetooth auto-off function. Regardless of pairing status, if the speaker/Bluetooth switch is set to "Bluetooth" and no sound is played for 30 minutes, the Bluetooth function will turn off and the pairing indicator will turn off.

To pair again, turn the power off and then back on.

## Switching from Bluetooth Device to Speaker

### 1. To listen through the speaker, set the speaker/Bluetooth switch to "Speaker".


- Music from the Bluetooth device will stop and audio will be output through the speaker.

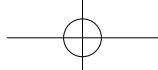


# ● Replacement of record needle

- ※ After using record needle for about 400 hours, sound quality becomes poor and the record may get damaged. Please replace record needle early.
- ⚠** Use the record needle by Audio-Technica ATN-3600 for replacement. DO NOT use other needles.
- ※ Refer to manual of ATN-3600L for replacement.

1. Pull down the end of needle to remove it downward.

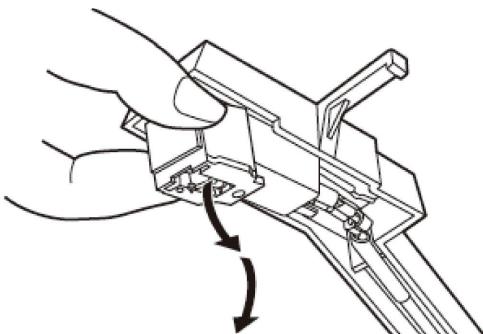


2. Insert the protrusion at back end of replacement needle to the back end of cartridge groove.

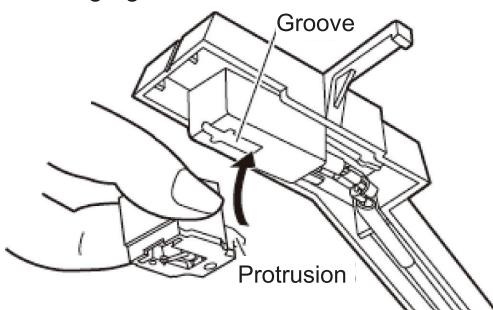

3. Push the tip until it clicks as shown below.




- ※ Do not apply too much force on the needle tip, cantilever, and armature when mounting.

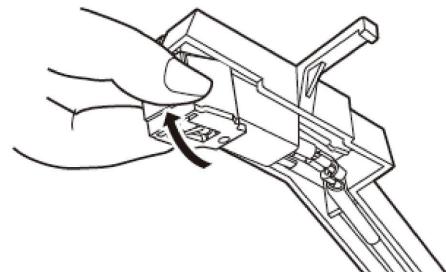

4. After mounting, ensure that the cantilever of the needle fits in the groove of the armature.



- ※ Ensure that the cantilever is at the proper position for best performance.

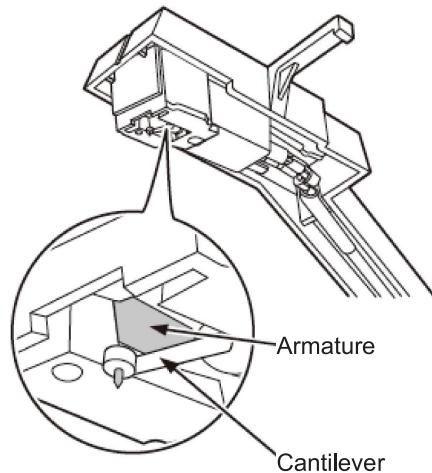

## ● Care




- ※ Always unplug the AC adapter or remove the mobile battery before cleaning.

### ● Care of the main body

- Wipe the surface with soft dry cloth.
- If the surface is very dirty, clean carefully with a wet cloth after squeezing well.
- ※ Do not use hard sponge or scrubber like melamine sponge to avoid scratch.
- ※ Do not use polishing powder, scourer, or solvent like benzine, thinner, or alcohol.

### ● Care of AC adapter plug

- Wipe the surface with soft dry cloth.
- ※ Do not use polishing powder or solvent like benzine, thinner, or alcohol.

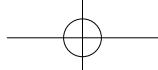

# ● Specifications

Product name	Portable player
Model	GP-N3S
<b>Main body</b>	
Power source (Automatic switch system)	AC adapter (Input: 100V - 50/60Hz, Output: DC5V 0.5A DC 9V (six D Size dry cell batteries) *Battery is not included.
Power consumption	4W (1.2W during standby)
Overall size	About 220(W) × 385(D) × 73(H) mm (protrusion excluded)
Weight	About 1.3 kg (batteries excluded)
Supplied terminal	Terminal for earbuds and recording
Accessory	An adapter for EP, a record holder, an AC adapter, USB Type-A to Type-C Conversion Cable, Operation manual (this manual)
<b>Record player</b>	
Model	2-speed player
Rpm	33 1/3 rpm, 45 rpm
Attached mechanism	Rotation speed adjustment mechanism (more than ±5%)
Tone arm	Dynamic balance type
Cartridge	ATN-3600L, ATN-3600LC by Audio-Technica
Motor	DC motor
Drive system	Belt drive
Turntable	17cm
<b>Speaker</b>	
Speaker	10cm (8Ω)、2W
<b>Bluetooth Section</b>	
Registration Number	GP-N3
Version	5.2
Class	Class 2
Supported Profile	A2DP
Frequency	2.4GHz band
Modulation	FH-SS modulation
Interference Range	80m
Communication Range	Approx. 10m


※ Appearance and specifications are subject to change without notice. We do not provide after-sales service like repair or selling parts outside Japan.

# ● Troubleshooting

Before requesting a service, please check the following items.

Please stop using and contact our service department if the problem is not solved.

Problem	Check
Power is not turned on (When AC adapter is used)	● Make sure that AC adapter plug is deeply inserted to the power outlet. Power is not turned on (When batteries are used)
Power is not turned on (When batteries are used)	● Check polarity and remaining quantity of batteries.
The turntable turns but no sound comes out	● Check the position of dial and switch. ● Please check the connection with the Bluetooth device.
No sound comes out.	● Is sound volume adjusted properly? Adjust sound volume. ● Please check the connection with the Bluetooth device.
When playing a record, harsh or clattering sound comes out. High-frequency sound is not clear.	● Check for dust at the end of needle. Remove dust with soft brush. ● Check if the needle is mounted appropriately. Mount the needle tightly to prevent loosening. ● Check for dust on the record. Clean the record with gauze dampened with commercial record cleaner or water. ● Check for damage of the record or needle. If needle is damaged, please replace it.

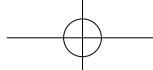

Problem	Check
Howling occurs	<ul style="list-style-type: none"> <li>Howling occurs when vibrations of the speaker are transmitted to the player. Please turn down the volume or change the location of the device.</li> </ul>
No sound comes out from the speaker.	<ul style="list-style-type: none"> <li>Check if earbuds or headsets are not connected to earbuds &amp; recording terminal. No sound comes out from speaker if earbuds or headsets are connected.</li> <li>Is the speaker/Bluetooth switch set to "Bluetooth"? If set to "Bluetooth", no sound will come from the speaker.</li> </ul>
Ham radio interrupts.	<ul style="list-style-type: none"> <li>There may be an amateur radio station nearby. Refer to [About after service] and contact us.</li> </ul>
If the speaker/Bluetooth switch is set to "Bluetooth" and the pairing indicator is off	<ul style="list-style-type: none"> <li>Has there been no sound for over 30 minutes? If so, the pairing indicator turns off automatically. To pair again, turn the power off and then back on.</li> </ul>

## ● About after-service

If you have any concern about after-service, please contact us by the addresses below.

### SUPREME USA

190 Bowery Street  
New York, NY 10012

[support@supremenewyork.com](mailto:support@supremenewyork.com)

#### ● Handling of personal information

- We may use customer's personal information and contents of consultation to respond to inquiries and for repair and confirmation, and keep the record. We will manage personal information properly shall not provide it to the third party without good reason such as entrusting repair work.

#### ● System of maintenance and repair

The repair fee consists of technical fee and parts charge.

Technical fee	The fee to repair broken parts.
Parts charge	The charge for parts needed for repair.

<b>Inspection</b>  	Check on the device which has been used for many years!	
	Do you have any problem like this?	<ul style="list-style-type: none"> <li>Power code or plug is too hot.</li> <li>Power code or plug is damaged or becomes not energized when touched.</li> <li>It smells like something burning.</li> <li>Main body is much hotter than usual.</li> <li>There are other failures.</li> </ul>

If you have problem like this, stop using and contact the dealer to avoid failure and accident.



# Memo



# Memo

