



Manual of Intelligent Lock

Open the lock way: Fingerprint, password, credit card, key

Q7




Optional:

tuya bluetooth

tuya WiFi

Wirelessremote control

Multi-language support

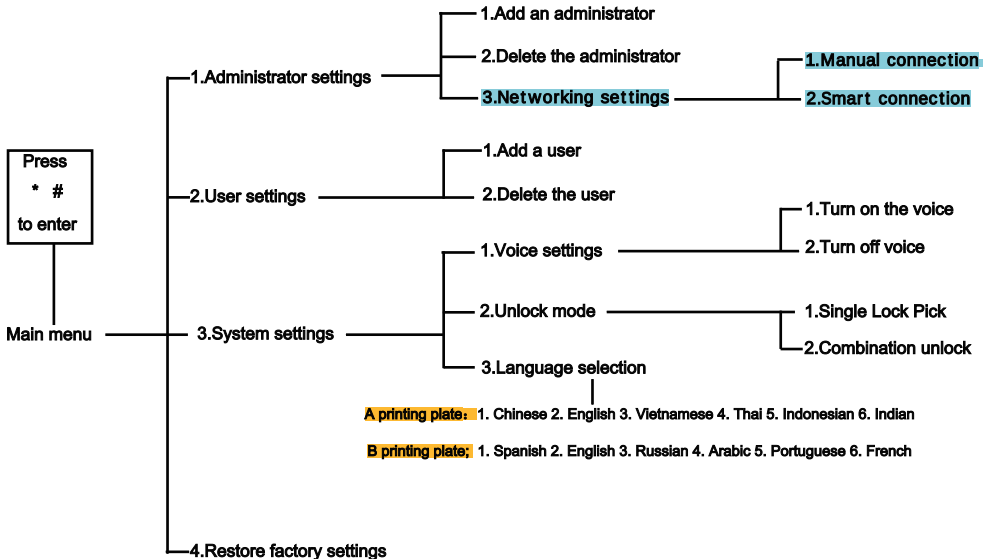


Warning Sign:

According to the voice navigation tips, the operation

Simple operation, easy to learn

1. Press and hold the reset key for 6 seconds to restore the factory settings;
2. In the initial state, press "*" and then "#". The language: "Please enter administrator information", enter the initial password "123456" and then press # key
Information (fingerprint, swipe card, password, etc.), according to the voice navigation input, refer to the box diagram;
3. Press the lock key for a few seconds, the voice prompt "the door has been locked", at this time, ordinary users can not unlock the lock, only the administrator can unlock the lock;
Hold down the lock key for 3 seconds or the administrator unlocked once, the lock is cancelled.
4. Regular function: press "5" before unlocking (within 4 seconds), press "5" and "#". Enter the correct initial password "123456" and then press # key

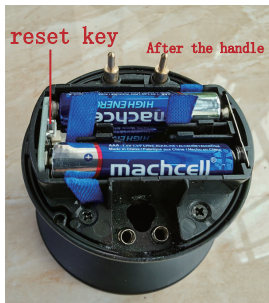


Doodle WiFi connection

1. Mobile phone connected to WiFi(2.4G), can not connect to 5G network, set on Bluetooth
2. Press "*" and "#" on the smart lock to enter the settings, press 3 in the administrator settings, Select 2 Smart Connection
3. After opening the **tuya** on the phone, click "+" in the upper right corner to add the device camera /Lock the door lock (WiFi) enter the WiFi password to confirm the keyboard light flash, Connect connection confirm the keyboard light flash, Connect connection until the connection is successful.




Graffiti Bluetooth connection

1. Turn on Bluetooth on your phone and then open the doodle,
Click "+" in the upper right corner to add the device automatic
scan search device click, the automatic configuration is successful.

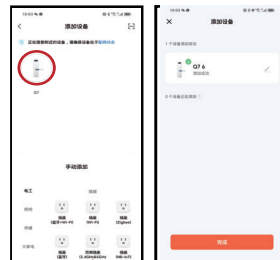

Download the Doodle smart App



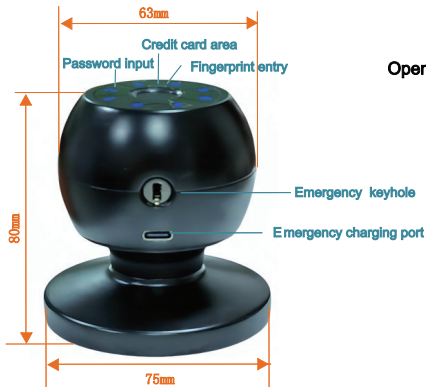

Product Parameter:

Open the door way: Fingerprint, swipe card, password, key

main body material: aluminum alloy

The fingerprint head: semiconductor

Fingerprint capacity: 100

Password capacity: 100

quiescent current : 40uA

Unlock current: 150mAworking

voltage: 4.5-6V

applicable temperature: -25℃-70℃

Suitable for humidity: 20%-90%

Applicable door thick: 40-60mm

scope of application : Office, room doors, etc

Installation steps:


1. Install the lock body



2. Install 2 filaments



3. The plug screw is made parallel to the line

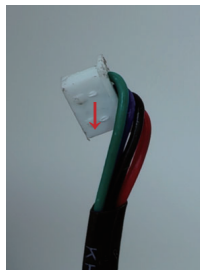

4. Put the line into the square tube



5. Put the line through the square tube



6. Install screws




7. Tighten it with the screws



8. Plug in the docking plug



9. Hide the plugs and wires

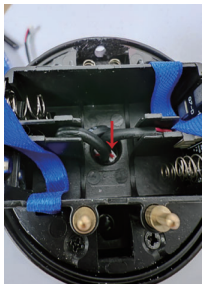

10. Install the next two batteries




11. Install two more batteries



12. Put the hook off




13. Installation is complete

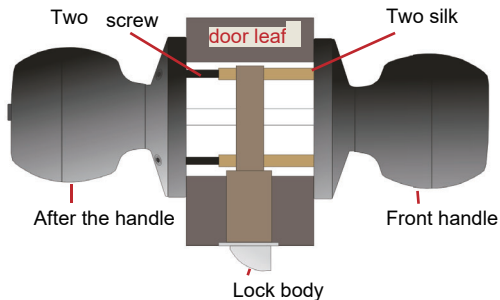

Important tips:

Be sure to keep the emergency key with you or in a safe place outside

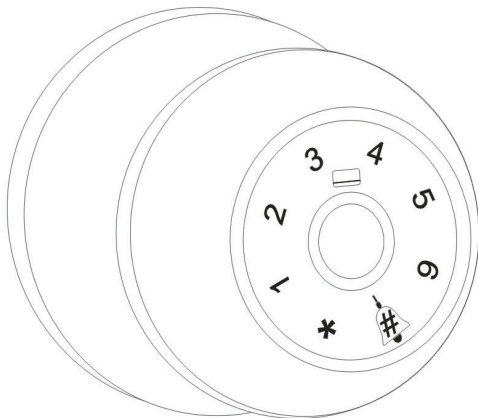

Made in china

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.