
Bluetooth Headphone

Parameter configuration

Truly wireless connection, achieving wireless stereo and HIF sound effects.

Before using this product, please fully charge it.

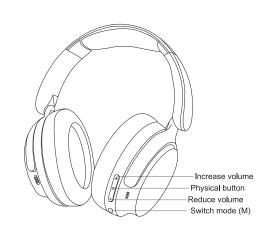

1. Simple operation instructions

- 1. Power on: Press and hold the physical button for 3 seconds to turn on the device.
- 2. Shutdown: Press and hold the physical button for 5 seconds to shut down.

Open the phone's "Settings" - turn on Bluetooth search - find the pair name X1, click connect - display "Connected". After the phone connection is completed once, the headphones will automatically connect to the phone when the first point of the operation is used again.

2. Function Definition Explanation

①、Function definition in call state

Call answering	Press the Physical button once
Hang up the phone	Press the Physical button once
Call rejection	Long press the Physical buttor

②、Function definition in music state

Play/Pause	Press the Physical button once
Next song	Long press for 2 seconds + button
Previous song	Long press for 2 seconds - button
Increase volume	Press the + key once
Reduce volume	Press the - key once

Charging time

Endurance capability

Turn on noise reduction/ Turn off noise reduction/ Transparency mode	Press M to switch modes

3. Definition and parameters of charging compartment

Product status	Indicator light display
Charging in progress	The red light is always on
Fully charged	Full of lights off
Function	Describe
Battery capacity	800MAH
Charging time	About 2.5H

About 80H

- Matters needing attention
 1. Do not treat this product violently, do not squeeze it with heavy objects, and stay away from high temperature and high humidity

- objects, and stay away from high temperature and high high renulting environments.

 2. Stay away from WIFI, routers, and other high-frequency transmitting devices, as this can affect the signal reception of the device, causing sound jamming and disconnection.

 3. Please use this product in an effective environment (10 meters), and there should be no physical obstruction (such as walls) between the Bluetooth device and the earphones.
- If the product is not used for a long time (within one month), charge the headphones.

Warranty Manual

- 1. Please keep this warranty card properly as proof of repair:
- 2. During the maintenance period of the warranty equipment, if the machine itself has functional problems or malfunctions under normal use and maintenance, and it is verified to be true, our company provides repair services;
- 3. During the warranty period, if any of the following events occur, our company has the right to refuse service or charge materials and service fees at our discretion.
- 1) Unable to provide this guarantee and valid proof of purchase: 2) Product malfunctions and damages caused by improper use by
- 3) Human or abnormal damage;
- 4) Damage caused by unauthorized repair services not authorized by

- 5) Malfunctions and damages caused by natural disasters or other force majeure factors:

 6) Intentional damage caused by others;
- 4. Our company reserves the right to modify and interpret all content.
- FCC Warning
 This device complies with Part 15 of the FCC Rules. Operation is subject to the following

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 NOTE 1: This equipment has been tested and found to comptly with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or municular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna.
- user is encouraged to any to encourage measures:

 Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 -Connect the equipment into an outlet on a circuit different from that to which the receiver
- is connected.

 -Consult the dealer or an experienced radio/TV technician for help.

 NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

