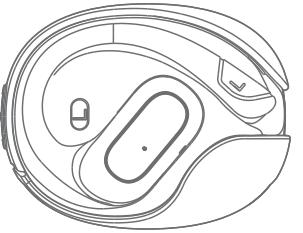
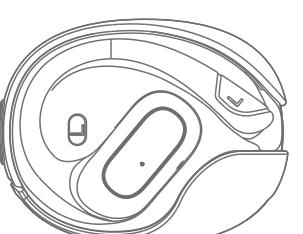
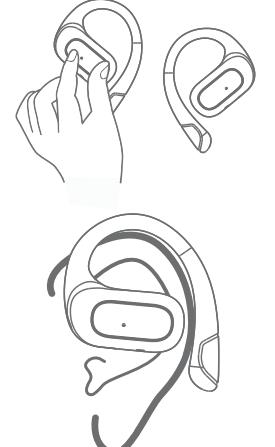
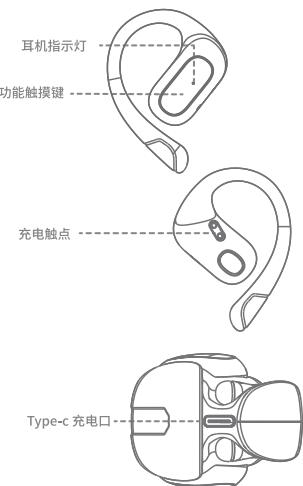
 
 
 
 
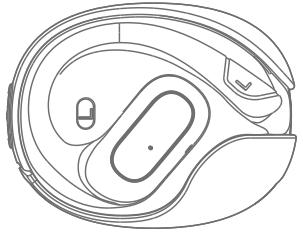
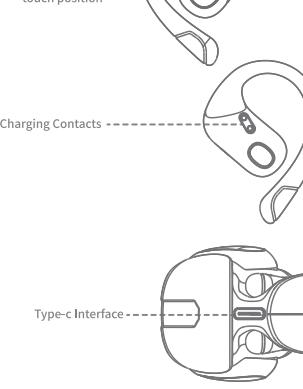
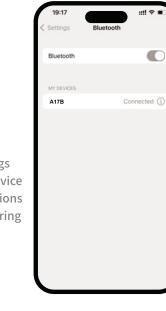
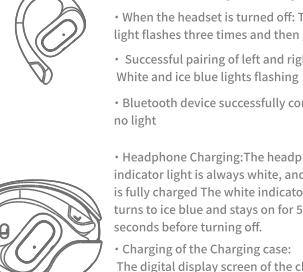
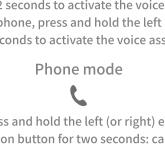
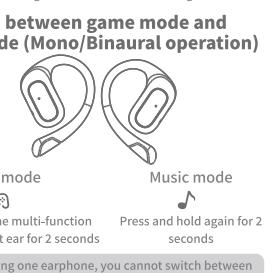
 
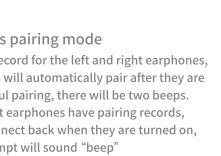


A17B 无线耳机  使用说明书 使用前请阅读使用说明书	产品规格 产品型号:ERAZER X5 蓝牙版本:V5.4 有效距离:约10米 喇叭直径:φ14.2mm 阻抗:16Ω 频率响应:20Hz-20KHz 麦克风灵敏度:-38dB±1dB 耳机额定输入:5V=35mA 充电仓额定输入:5V=350mA 充电仓额定输出:5V=70mA 耳机电池额定容量:30mAh 充电仓电池额定容量:350mAh 使用时长:约4小时(耳机) 耳机充电时长:约1.5小时 充电仓充电时长:约1.5小时	欢迎使用 A17B 无线耳机  取出并配对 第一次使用时,请同时取出左右两侧的耳机。耳机白和冰蓝灯闪烁,耳机将自动配对。	如何正确佩戴耳机 	产品说明 	触摸操作 使用蓝牙设备连接 
 开机 自动开机:将耳机从充电仓取出,耳机开机,提示音“嘟”四声。 手动开机:耳机关机的状态下(在充电仓外),长按耳机多功能触摸键约3秒钟,耳机开机,提示音“嘟”四声。 关机 自动关机:将开机状态下的左右耳机直接放入充电仓,耳机关机,提示音“嘟”四声。 手动关机:长按处于开机状态下的左右耳机多功能触摸键约3-5秒钟,耳机关机,提示音“嘟”四声。 注: 当耳机开机后,3分钟未与相应蓝牙设备进行配对连接,便会自动关机;超出信号有效连接距离,未与相应蓝牙设备连接,3分钟后,耳机自动关机,提示音“嘟”四声。	单击  音乐模式  播放/暂停  通话模式  双击  音乐模式  双击右耳:音量增大  双击左耳:音量减小 	三击  音乐模式  点击左耳三次:上一曲  点击右耳三次:下一曲  长按  激活语音助手  长按左耳多功能键2秒激活语音助手, 单耳使用时,长按左(或右)耳2秒,均可激活语音助手 电话模式  电话拒接:长按左(或右)耳多功能键2秒	游戏模式与音乐模式切换  游戏模式  音乐模式  长按右耳多功能键2秒提示音“嘟”三声 再次长按右耳多功能键2秒提示音“叮咚”三声 *备注1: 单击使用时,无法切换游戏模式和音乐模式 *备注2: 出厂设置默认为音乐模式	指示灯说明  双耳从充电仓取出后会自动开机配对,耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五击多功能键,提示音“嘟”四声后,耳机自动关机后将双耳机放回充电仓,再将双耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。 适用于以下情况: A: 双耳无法配对时,单边音时,双配对名时。 B: 使用单耳机分别连接不同蓝牙设备时。 C: 清除连接的所有蓝牙设备时。 特别提示: 当单边耳机出现无声,或者无法配对时,请按以上恢复重置操作。	产品注意事项 (1)除说明书有特殊标示的操作方式以外,请勿尝试拆卸或更换产品内的任何零件。 (2)本产品含内置可充电电池,禁止撞击、挤压、刺破、短路电池,若发现温度过高、变形、鼓包漏液等异常现象,请停止使用,请勿置电池于明火、阳光暴晒、加热器、火炉等高温以及高压环境中,电池遇水后禁止使用。耳机使用后,勿将耳机放在潮湿、充满灰尘、油烟、蒸气、阳光直射等高温高压等环境中,以免造成耳机及电池损坏。 电池可充放电次数有限,最终会老化,电池使用异常时可更换新电池,但切勿自行更换电池,如果电池更换不当会有爆炸危险,只能通过售后服务更换同类型或者等效类型的电池使用。 (3)产品使用报废后,勿将产品扔置水中,废旧处理应严格按照垃圾分类进行处理。请合理正确的使用此产品,以免造成一定的浪费和环境污染。 (4)在耳机使用过程中,由于过距离、中间有障碍物或者有其他无线电信号、蓝牙信号、WIFI信号等一系列的干扰的情况下,耳机在使用时听不清视频、玩游戏等情况时,会出现偶尔的卡顿语音不同步或者连断的情况。 如出现此情况请重新连接耳机或者远离干扰物。 (5)充电时充电器请使用输出电压为直流5V/1A的充电设备,必须选择正规生产厂家获得CCC安全认证过的充电设备,请勿使用快充充电器,以免造成电池负载过大,而产生电池损坏。连接充电时间请勿超过规定的充电时间,充电时请勿使用,以免造成损坏。

A17B Wireless Earbud A17B Product Manual	Specification of Product Model of Product: ERAZER X5 Version: V5.4 Effective Distance: Approx. 10m Speaker Diameter: φ14.2mm Impedance: 16Ω Frequency Response: 20Hz-20KHz Microphone Sensitivity: -38dB±1dB Earphone Input: 5V=35mA Charging Case Input: 5V=350mA Output: 5V=70mA Earphone Battery Capacity: 30mAh Charging Case Battery Capacity: 350mAh Duration: Approx. 4 H (Earphone) Earphone Charging Time: Approx. 1.5 H Charging Time of the Charging Case: Approx. 1.5 H	Welcome to Wireless Earbud  Take out and pair it When using it for the first time, please remove the earphones on both sides at the same time. The white and ice blue lights on the earphones flash, and the earphones will automatically pair.	How to wear headphones correctly 	Product Description 	Touch Operation Connect with Bluetooth device 
Indicator Light Description  <ul style="list-style-type: none"> When the headset is turned on: White and ice blue lights flashing When the headset is turned off: The white light flashes three times and then goes out Successful pairing of left and right ears: White and ice blue lights flashing Bluetooth device successfully connected: no light Headphone Charging: The headphone indicator light is always white, and the ear is fully charged. The white indicator light turns to ice blue and stays on for 5-10 seconds before turning off. Charging of the Charging case: The digital display screen of the charging case flashes. After being fully charged, the digital display screen of the charging case always shows 100. 	 Power On Auto power on: The earphones are taken out of the charging case, the earphones will be powered on, with the prompt sound of “du”. Manual power on: Long press for 3 seconds, the earphones will be powered on, with the prompt sound of “du”. Power Off Auto power off: Put the earphones in the charging case, the earphones will be powered off, with the prompt sound of “du”. Manual power off: Long press for 3-5 seconds, the earphones will be powered off, with the prompt sound of “du”. Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device, it will automatically power off after 3 minutes, with the prompt sound of “du”.	Once Press  Music mode  Play/Pause  Phone mode  Call Answer/End  Double Press  Music mode  Double press the right ear: Volume up  Double press the left ear: Volume decreases 	Long Press  Wake up voice assistant  When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant Phone mode  Press and hold the left (or right) ear multi-function button for two seconds: call rejection 	Triple Press  Music mode  Triple press on the left ear: Triple press on the right ear: next song Switch between game mode and music mode (Mono/Binaural operation)  Game mode  Press and hold the multi-function button on the right ear for 2 seconds Press and hold again for 2 seconds Note 1: When using one earphone, you cannot switch between game mode and music mode. Note 2: The factory setting defaults to music mode	Clear Bluetooth pairing history When two ears cannot be paired, it is necessary to clear all connected devices and click on the left and right earphones 5 times respectively.  1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps. 2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound “beep”.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.