

J50Pro Instruction Manual

Description of the interface

1 . [AI key]

Single press [AI key] to cycle through the gears.

PS: First time use, power on automatic work, Bluetooth / WiFi open pairing

2. [Customized time]

[C1=Custom Gear 1] [C2=Custom Gear 2]

C3=Customized gear 3] [C4=Customized gear 4].

PS: [Customized mode] need to be set on the phone-APP

3 . [M key]

1, single-press [M button] to view the current battery level (see below illustration [1])

2, Press the [M button] again to view the current oil level (see below illustration [2])

3、 Long press [M button] for 3 seconds to turn on/off the fan.

(see below illustration [3-1], [3-2])

PS: If there is no operation for 10 seconds, the system will automatically return to the main interface.

4. [+ key] [- key]

1. The oil level warning: when the oil level is less than 10%, the oil volume icon turns red and flashes, single press [+ key] to close. (see illustration [4])

2. Battery warning: when the battery is less than 10%, the battery icon turns red and blinks, single press [- key] to close. (See illustration [5])

3. Reset Oil level: Long press [+ key] for 3 seconds, the oil level icon and battery level display 100% blinks 2 times. (See illustration below [6])

4. Bluetooth, WiFi reset: Long press [- key] for 3 seconds. The reset is successful, the corresponding icon flashes 2 times. (See the following illustration [7])

5. Oil level correction: Single press [M button] to view the current oil level percentage, the oil level icon light up. Make 5% variable correction by [+] [-]. (See illustrations below [8-1], [8-2]) can be turned off and corrected through APP.

Matters needing attention

1, please do not use the equipment tilted or inverted, so as not to essential oil seepage corrosion equipment or household items, such as accidental seepage of essential oils, please wipe out with alcohol in a timely manner.

2、 Please clean the equipment regularly (with alcohol), it is recommended to clean the equipment once a month, so that the equipment works in the best condition!

3, please cut off the power supply when cleaning, and do not use wet hands to operate directly to prevent electric shock and personal injury.

4, the use of the process, such as inadvertent contact with the skin or eyes, please promptly wash with flowing water can be.

Note (not used for a long time)

1, please turn off the machine first, cut off the power supply.

2, please pour out the equipment essential oil bottle essential oil to dry, and then the atomizer head or body essential oil test clean, in order to prevent the essential oil slow corrosion.

3, please equip the machine with a dust cover, placed in a cool, ventilated place.

Common Troubleshooting

Troubleshooting conditions: please energize the equipment

(I), power supply failure:

1, power supply direct plug please use, please use the original adapter, or in accordance with the customer service development of the adapter, if you can power on, judged to be the adapter selection problem, if still can not power on the power supply failure, may be the cause of a short circuit or the key components of the terminals fall off.

2, rechargeable battery power supply, please charge the device for at least half an hour, if it can be turned on the judgment for the battery is dead. If you still can not turn on the power supply failure, possible causes: the battery is not used for a long time to starve to death, adapter output power and equipment to accept the power mismatch, charging line port damage, possible causes of short-circuit or the key components of the terminals off (caused by the transportation process).

(B), air pump failure:

1, after power on, set up normal, will press the finger to the fog port whether the air flow is generated, if not or air flow is negligible, measurement judgment for the air pump failure, the possible causes of air pump port shedding or poor contact, if the equipment is placed for a long time in a humid environment or the body of the essential oil warehouse has obvious traces of liquid leakage may lead to a short-circuit of the pump, can not work properly.

2, can listen to the equipment through the ear with or without the sound of the air pump vibration or hand attached to the body of the vibration sense, no vibration for the air pump failure, resulting in the same reason 1.

3, there may be atomized core blocked, will be replaced by the atomized core for testing, replacement after working normally, then judge the atomized core blocked.

(C), not out of the fog or fog volume is small

1, the old (used for a period of time) equipment does not fog or small amount of fog: normal power supply, set up normal, normal conditions of the air pump: the atomizing core will be clogged, alcohol cleaning to try, can not replace the atomizing head. Or replace the gasket test.

2, the new (just purchased new) equipment does not fog or fog small: check whether the settings are normal, if the settings are correct, can be out of the fog that is the setup problem, if the settings are correct, but also not out of the fog to check whether the installation is correct, if the installation is also not a problem, send the equipment back to be replaced, do a good job of registering, and replacement must be required to ship out the test.

(D), the control board failure

1, set up no response, or out of control, including screen devices appear garbled flashing black screen, non-oil warning or power warning device buzzer has been calling all the time, it is judged to be a control board failure. Causes of key components short-circuit (not the designated adapter, essential oil corrosion control board, that the disassembly, component shedding led to)

2, customize the device is not timed, the memory battery is dead, replace the memory battery can be. Bluetooth devices need to be regularly connected to synchronize time.

(E) oil leakage

- 1、 Check whether the atomizing head is broken.
- 2, check whether the essential oil bottle and atomization head is tightened.

FCC:

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.