
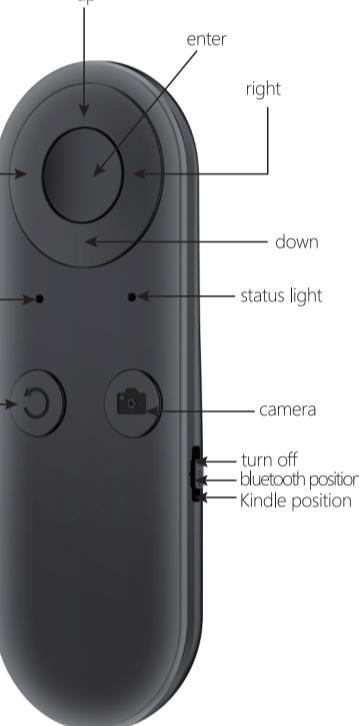


Phone Remote Control User Manual

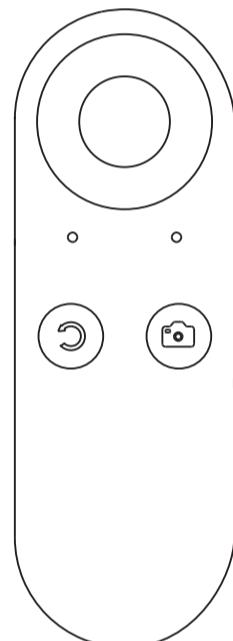

1. Product Overview


This Phone Remote Control offers an easy way to enhance your reading and entertainment experience. This guide will walk you through setup, operation, and key features.

2. Key Features:

Control your phone, tablet, or iPad for video scrolling, page turning, volume, music, and camera functions via Bluetooth.


3. How to use?

- 1) Power On
Slide the side switch to the middle position (Bluetooth Mode). The remote will turn on automatically.
- 2) Bluetooth Connection
Search for "TK01" in your device's Bluetooth settings and connect. The indicator light will stop flashing once connected.
- 3) Notes
iOS devices – Enable AssistiveTouch before connecting.
Steps: Settings → Accessibility → Touch → AssistiveTouch → Turn On

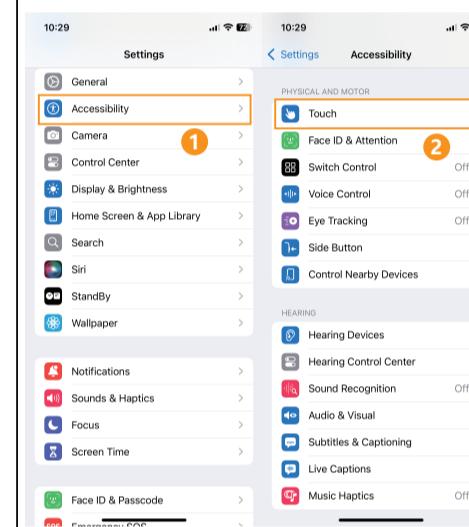

Android devices – No additional settings are required.

- 4) Supported Devices
iPhone & iPad (iOS 8.4+)
Android phones & tablets

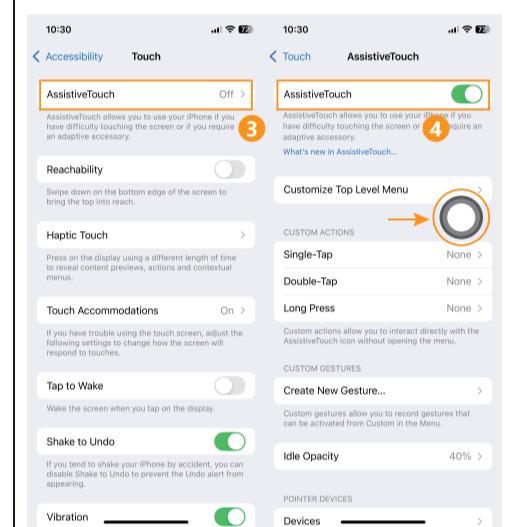

- 5) Compatible Apps
TikTok, Snapchat, YouTube, Facebook, X (Twitter), Instagram, Spotify, Apple Music, and other phone apps.

4. Operations

A. Air Mouse Control

Control the remote controller with gestures to move the cursor on your phone's screen. Position the cursor and press Enter to select.
Tip: New users may need a short adjustment period to get used to gestures, and you will like it.

B. Return Button

Short press → Previous page (Android only, not for iOS)
Long press → Home screen

C. App Controls TikTok

Up – Previous video / Hold to increase volume
Down – Next video / Hold to decrease volume
Left – Turn left
Right – Turn right
Enter – Play/Pause, Double press to Like the video

Instagram / Facebook / X

Up – Scroll up
Down – Scroll down
Left – Select left menu
Right – Select right menu
Enter – Confirm/Enter

YouTube / Netflix

Up – Hold to increase volume
Down – Hold to decrease volume
Enter – Hold to Play/Pause
Cursor on right → Double press "Enter" button to forward 10s
Cursor on left → Double press "Enter" button to backward 10s

Music Control

Enter – Hold 3s to open music app (must be running in background)
Up – Hold to increase volume
Down – Hold to decrease volume
Left – Hold for previous track
Right – Hold for next track

Camera Control

Camera Button – Hold to open camera app (Android only)
Left – Select the left menu
Right – Select the right menu
Camera Button – Double press to take photo or start/stop recording

5. Additional Functions

Cursor Speed Adjustment

Before turning on, hold the Right button and switch power on (move the side switch to middle position) and wait for the light, release the button — the blue light flashes indicate speed:
1 flash = Slow
2 flashes = Medium (default)
3 flashes = Fast

Cursor On/Off

Hold Up + Down together for 4 seconds. Light flashes 3 times to confirm.

Gyroscope Calibration

Hold the return button and power on (move the side switch to middle position), then the green light flashes quickly, place remote on a flat surface until blue light flashes — calibration complete

6. FAQ:

Q1. Bluetooth won't connect

Reboot the remote, remove the device from your phone's Bluetooth list, and reconnect.

Q2. Connected but not working


For iOS, ensure AssistiveTouch is enabled:
Settings → Accessibility → Touch → AssistiveTouch → On

Q3. TikTok scrolling not working? Scrolling too fast in Facebook, Instagram?

Lower Tracking Sensitivity in AssistiveTouch settings, suggest 10–30%.

Q4. Page turning not working

Add Tracking Sensitivity in AssistiveTouch settings, suggest 10–30%.

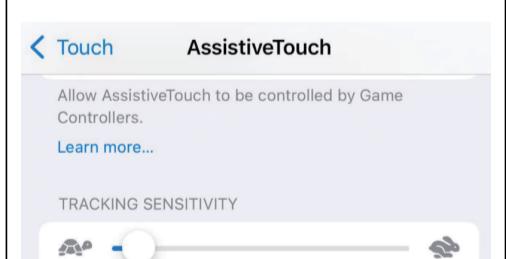

If you have any questions, don't hesitate to reach out. I'm always here to help!
Email: linqi5597@gmail.com

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.