

# MUSIC PLAYER

## USER MANUAL

To ensure the best user experience,  
please read the user manual carefully  
and keep it safe for future reference

## Attention

1. If the APK you downloaded cannot be installed on this item, please change to a lower version of the APK.
2. If the device crashes, freezes, etc, Please reset the device or restore factory settings. Note: please backup all your files before factory settings, otherwise your files will not be retrieved.
3. If the SD card can not be recognized, please try to format the card.
4. slide up from the bottom to bring up the touch button, and press the button  to hide it. sometimes if these buttons change to black color, press the button  and it should get back to white.
5. Press and hold the [Power button] and [Volume -] button at the same time to take a screenshot.
6. Universal password: 1235789 (when you forget your password, enter this password to unlock the player).

## charging

1. Charging by wall charger or computer are both ok.
2. New batteries need to go through several charging and discharging processes to achieve optimal performance.
3. If you do not use the machine for a long time, please charge and discharge it at least once in a month to prevent the battery from being damaged by over consumption.

## Gesture Operations

Long press: press the icons for 2 seconds, Long press the blank area of the main screen to access to the main screen editing status

Slide: Slide fingers on the screen.

Drag: Long press the icon and drag it to other position.

## Settings

### WIFI

Turn on WLAN (you can also swipe down at the status bar to open the notification panel and set the WiFi), tap on the WLAN you're going to connect, If you select an encrypted network, a password should be input.

### Bluetooth

Turn on Bluetooth, the device will automatically searching the available devices. Select the Bluetooth device and finish pairing.

### Memory

Average memory use and Memory used by apps

### Apps & NotificationsList

recently opened apps here. Tap on each app to uninstall or force stop. Notifications, App permissions are available.

### Battery

Charge and usage information of Batery: Standby intelligent power saving, Battery Saver, Battery Manager, and Battery percent.

### Display

Brightness level: to adjust the brightness of screen.

Night light: Setting a schedule for night light status and adjust intensity of brightness

Wall paper: Select from Gallery, Live Wallpapers, Wall papers.

Sleep: if there is inactivity for 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes, the screen be tured of.

Auto-rotate screen: On/Off.

Font size: Adjust the font size from small, Default, Large, and Largest.

## System

Language & input: Setting languages and input method.

Keyboard & input methods: Set Android keyboard or Gboard to be your preferred language to input by turning of one of them in the [Manage keyboards] function.

Date & Time: Setting date & time of device.

Reset options: Erase all data and reset to factory settings.

About device: Detail information of device.

## Specification

Supported Format	Music	MP3, OGG, FLAC, AAC, WAV, WMA, APE
	Video	RM, AVI, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS
	Pictures	JPG, BMP, GIF, PNG
	Recordings	WAV
Audio Bitrate	MP3 : -32Kbps-320Kbps	
	WAV:-1411 Kbps	
	AMR:-12.8Kbps	
	APE:-258Kbps-1411Kbps	
	FLAC: 265Kbps-1411Kbps	
SNR	≥85dB	
USB port	Type-C USB 2.0	
Compatible Systems	Windows 7 and the above	
Operating temperature	0-45°C(32-113°F)	
Charging	5V DC, 1A	

## Warning

Do not leave the device in an environment where the temperature is too low or too high (below -10°C or above 50°C) for a longtime. Extreme temperature environments will cause the device to deform and shorten the service life of the device;  
Do not use the equipment under thunder storm weather;  
Do not place the device in the water for a long time;  
Do not expose the equipment to the sun for a long time.

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.