

**PROJECTOR**

**PROJECTOR USERMANUAL**

**WARN** Safety precautions

When using the projector, please ensure that there are no obstacles within 30cm around the air inlet and outlet. Ensure sufficient ventilation and unobstructed ventilation to prevent hot air from accumulating inside the machine. Otherwise, it may cause abnormal operation of the projector. (As shown in the figure)

After using the dust removal window, please close the door, otherwise it will cause serious damage to the projector. Please clean the dust on the dust screen of the air inlet regularly to prevent blockage and damage to the projector. (Can use brushes, vacuum cleaners, etc.)

**CATALOGUE**

Cautions And Warnings-----01

List Of Items-----02

The Remote Control-----03

Installation And Debugging-----04

The Software Settings-----06

Picture adjustment-----09

Media Player-----10

Screen sharing-----11

Warranty Card-----12

Clean And Maintain-----14

**CAUTIONS AND WARNINGS**

For better life, it is recommended that you use this product in a dark room.

- Do not install the machine where directly blown by the air conditioner, the water condensed or high temperature may cause machine failure.
- Make sure that there is sufficient ventilation and the ventilation is not blocked, so as to avoid the accumulation of hot air in the machine.
- Prevent clips or paper falling into the machine, and do not put any metal objects into machine. If accidentally happens, please turn off the power immediately and do a careful inspection. If it
- Due to avoid the risk of leakage, do not place any liquid on the machine.
- When transporting the projector, please use anti-shaking materials to protect the lens from scratches please install the lens protection cover, avoid long transporting.
- During or after the projection, the vicinity of the exhaust vent will become hot, do not touch with your hands.
- Do not look into the lens while the machine is powered on, it may cause serious damage to your eyes.

**NOTICE**

Do not open the case. Please entrust qualified professional maintenance personnel to perform maintenance.

This mark warns there is an unattended voltage in the unit, which may cause electric shock due to the surface magnetic field. It is extremely dangerous to touch and parts inside the machine.

**NOTICE**

To prevent fire or electric shock, do not expose this machine to rain or moisture.

**LIST OF ITEMS**

Projector

Remote Controller

User Manual

Power cord or adapter

**THE REMOTE CONTROL**

**Remote Control Description**

- Power: To turn on/off the unit
- Menu: To make or cancel the projector operation
- Menu: To open the menu of applications or files
- Volume: To increase/decrease the volume
- Enter/Choose/Click
- Check/Source Key: Use the up/down buttons to select OSD items, and the left and right buttons to make adjustments
- Return/Back: To previous menu or close the active window
- Home/Back to homepage
- Signal source switching: Switching signals or opening/removing dials
- Before focal length: Adjust the lens focus forward
- After focal length: Adjust the lens focus backward
- Turn/Over: project settings function

Thank you very much for purchasing our products. Please check whether the physical products received are complete. If the products and accessories you receive are not complete, please contact the sales personnel in a timely manner. (For specific items, please refer to the actual package.)

**INSTALLATION AND DEBUGGING**

- Manual Focusing:** When the projection image is blurred (as shown in the figure below), rotate the focusing ring on the lensage to adjust the effect, so as to obtain satisfactory results. If you cannot obtain satisfactory clarity through adjustment, please move the lensage to adjust it appropriately.
- Autofocus:** For versions with autofocus capability, after enabling the autofocus function in the settings interface, the mobile device can achieve automatic focusing.
- Autofocus:** Whether it's autofocus or manual focusing, as long as the version has the autofocus function, the focal length can be adjusted by operating the remote control.

\*Please select the appropriate operation method for your device based on the model and version of the projector you are currently using, here are some general guidelines to consider.

**Projection Distance Reference**

Projection Size (Inch)	Projection Distance (M)
33"	1.5 M
52"	1.7 M
62"	2.0 M
80"	2.3 M
88"	2.5 M
105"	3.4 M
120"	3.8 M

**How To Power Off**

- Press the ON/OFF button on the remote control or the power switch on the unit.
- Put the lens cap on and store the unit in a dry and cool place.

**THE SOFTWARE SETTINGS**

**1 Home Page**

**2 Projection Setting**

**3 Language setting**

Settings Screen- Select the appropriate language in System configuration.

**4 Time setting**

Settings screen- Select the appropriate time Settings for you in System Configuration.

Notes: With the update of system version, there will be differences from the actual interfaces. Please refer to the displayed interfaces as final.

**THE SOFTWARE SETTINGS**

**5 Wi-Fi Setting**

Select a hotspot and enter a password to connect.

**6 Bluetooth Settings**

Open Bluetooth and select pairing successfully.

**Picture adjustment**

**1 Projection mode**

Select the projection method that suits you in the Settings screen.

**2 Picture correction**

Select Manual keys in the setting interface screen correction.

Notes: With the update of system version, there will be differences from the actual interfaces. Please refer to the displayed interfaces as final.

**MEDIA PLAYER**

You can play videos, music, or pictures from a storage device in the following ways.

- After the projector is turned on, insert a USB flash drive, and the system will detect the external device by itself, and a pop-up prompt will pop up. Select the type of file you want to play, and press the "OK" button on the remote control panel to enter.
- Press the signal input button on the remote control and select USB device to turn it on.

**Screen sharing**

**1 SAME SCREEN**

For screen sharing function, please use Airscreen for Apple Phones, and Miracast for Android Phones.

**2 Other operations**

On the home page, press the direction down key to select applications, change the desktop background, and sound effects.

**Product Warranty Description**

The after-sale service of projector is strictly based on the "Consumer Rights Protection Law of the People's Republic of China" and "Product Quality Law of the People's Republic of China", service content detailed as below:

Within 12 months upon purchasing, faults that not caused by improper use of human factors shall be inspected by after-sale service center. Free maintenance service shall be provided for you with valid purchase proof if it's determined as defect that caused by product quality itself.

**Non-Warranty Regulations:**

- Accessories such as Remote Controller, User manual, Power cord are not warranted.
- Damage caused by self-disassembly or unauthorized maintenance, modification etc.
- Damage that caused by artificial damage
- Period of warranty validity has expired.

**After-Sale Service Card**

Customer Name: \_\_\_\_\_

Customer ID: \_\_\_\_\_

Customer Tel: \_\_\_\_\_

Customer Email: \_\_\_\_\_

Fault Description (Please describe in detail for quick maintenance): \_\_\_\_\_

**INTELLIGENT PROJECTOR**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning: The equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.