


[Thank you for using this product, Please read this brochure carefully before using it.]

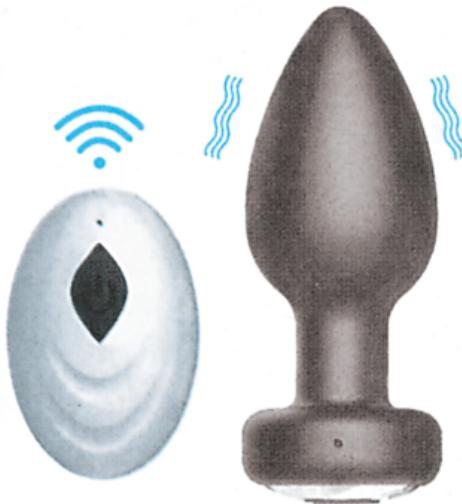

Directions for use




Directions for use

1. Function is introduced



1. Long press the power button for 1 seconds, and the product will enter the vibration mode. Short press can switch 10 different vibration frequencies.
Long press the power button for 2 seconds in any mode to power off.

2. Charging instructions

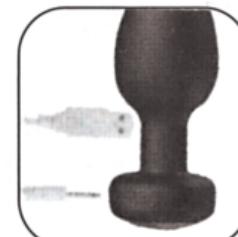

- Align the angle, align the charging head with the charging hole, and insert it gently;
- The USB plug can be connected to a variety of sockets such as computers, please do not use the product when charging;
- After charging is complete, please remove the charging cable and keep it in a safe place.

Product parameters

Product Name: Remote vibrating anal plug
Vibration frequency :10 frequency
Mute level :≤ 50dB
Battery: Rechargeable lithium battery
Material :ABS+ silica gel
Weight: 77.3g
Product size :90MM*35MM
Color: black

Packing list

Remote control *1 vibrating anal plug *1 product instruction *1, USB charging cable *1

Matters needing attention

- ★ Please charge the product for the first time.
- ★ Before and after each use of the product, please clean it thoroughly. Make sure the product is in place before cleaning Shutdown state and the product is in a closed state.
- ★ Rinse the main part with clean water and antibacterial soap, and then rinse with clean water. Dry with a towel.
- Do not use detergents containing alcohol, petroleum-based solvents or acetone.
- ★ Please store the product in a cool, ventilated and dry place to ensure that the product is not exposed to direct sunlight, high temperature, stress, moisture and pollution.
- ★ Connect the USB cable to a USB power adapter (not including the accessory) or USB port, can be used any USB power adapter for charging.
- ★ It takes about 2 hours for a complete charge. According to the number of residual electric quantity inside the appliance Body charging time may vary.
- ★ The appliance can be used for 60-90 minutes after full charging, the specific use time depends on you. Select the vibration mode. The higher the vibration mode frequency, the faster the battery depletes.
- ★ You don't have to run out of power before charging. In order to extend the battery life and ensure the charging efficiency, we recommend that you charge the device before the vibration of the device has decreased significantly.
- ★ If the product is automatically shut down, it may be caused by lack of power, start the self-protection mode. Please charge it in time.

Safety issue

As the intimate partner of the majority of users, the safe and healthy use of this massager is the user and Our common responsibility is to remind the majority of users:

- ★ This product is only suitable for adults over 18 years old. Please keep it away from children.
- ★ Do not use too much force in the process of use, please pay attention to avoid injury.
- ★ Do not mix this product with others. If you feel uncomfortable during use, please stop using this product immediately.
- ★ Must check regularly whether the product is damaged, if found damaged should immediately stop using.
- ★ After the product is discarded, it should be treated as waste electrical and electronic products and recycled to the corresponding waste electricity Device electronic products recycling station. This product is not suitable for ordinary garbage.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.