

14.8cm



USER GUIDE



VIBRATING ASS AND PUSSY
MOANING MASTURBATOR



VIBRATING ASS AND PUSSY
MOANING MASTURBATOR

Cleaning your toy

Best results, use antibacterial toy cleaner or soap and water. Pat dry with a soft cotton towel. Air dry completely.

Things to avoid while cleaning:

The correct cleaning and maintenance methods are essential, for your toy to live a long and healthy life. So far we have covered what to do, below are a list of things to avoid when cleaning.

Keep away from sharp objects – TPE is a very delicate material, which can tear easily. When storing or cleaning the doll, keep away from anything sharp.

Dry with care – TPE can easily warp when drying. As the TPE will be warmer than usual, please take extra care, as the material is more susceptible at this temperature. Only use a dry cloth for drying, remembering not to apply too much pressure.

It is very important that your toy dries naturally. Under no circumstances should any electric air dryer be used as this will damage it.

Please Note:

We will dust baby powder on the skin to prevent the product from becoming sticky before the product leaves the factory. So it is normal if there is powder on the surface. Due to the property of TPE products, they have a slight smell, which will gradually fade away as time after ventilation.

Remark

- 1) The cornstarch powder makes sure the material that the masturbator is made of maintains its quality. It also provides a softer sleeve for a realistic sensation.
- 2) If your toy is feeling oily and sticky, you just need to grab some (ideally organic) cornstarch and rub it into the flesh-like material.

FCC Caution: (15.19 Labeling requirements.)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(15.21 Information to User)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




Made in China

Interface on the device

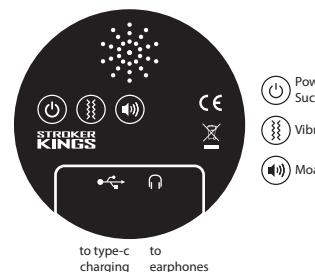

- Power / Suction
- Vibration
- Moaning

Using the remote controller

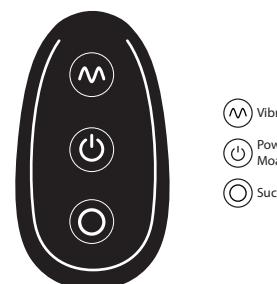

- Vibration
- Power / Moaning
- Suction

Power on & off

- Turn on the device without the remote controller.
- Activate the remote controller by pressing the (i) power button for 2 seconds.
- To disable the remote & turning off the device, press the (i) power button for 2 seconds.

Suction mode

- Press the (i) suction button for adjust suction level – 12 levels in total.
- press and hold for 2 seconds to inactive suction mode.

Vibration mode

- Press the (i) vibration button for adjust vibration level – 12 levels in total.
- press and hold for 2 seconds to inactive vibration mode.

Moaning mode

- Press the (i) power button twice quickly for adjust moaning level – 3 levels in total.



Warning: This product contains a battery that is hazardous and is to be kept away from children. The battery can cause serious injuries if it is swallowed or placed inside any part of the body. Seek medical attention immediately if it is suspected the battery has been swallowed or placed inside any part of the body.

