

梦响指挥家

P10018 DIMOO DREAM MELODY SERIES BLOCKS

91PCS

# DREAM CONDUCTOR



包装上含有重要信息, 请保留备用。

包装或说明书的图片或颜色与实际商品存在一定差异, 请以实物为准。

Package contains important information. Please keep it for further use.

Product colors or images on packaging/manuals may vary slightly from the actual item. Please refer to the physical product.

15+

## 产品列表

Product List



大娃本体  
Main Figure Body



人仔底座  
Figure Base



积木部分  
Blocks



礼服  
Tailcoat



故事书  
Storybook



乐谱  
Music Score



拼搭说明  
Instructions

## 配件列表

Parts List

从以下场景里取出相应配件, 可开启大娃的联动和音乐彩蛋玩法。

Retrieve the corresponding accessories from the scene to activate the figure's interactive features and unlock musical Easter eggs.




弦月飞车  
Crescent Moon Racer



弦月飞车  
Crescent Moon Racer



星河木马  
Galactic Carousel

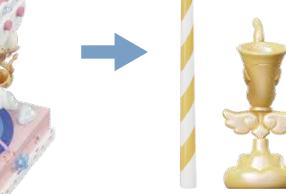

铃兰摩天轮  
Lily Ferris Wheel



铃兰摩天轮  
Lily Ferris Wheel



琴音舞会  
Melody Ball




图仅为效果图, 请以产品实物为准  
Illustrations are for reference only. The actual product shall prevail.

# DREAM CONDUCTOR

## 互动玩法

### 肚子外壳可拆下

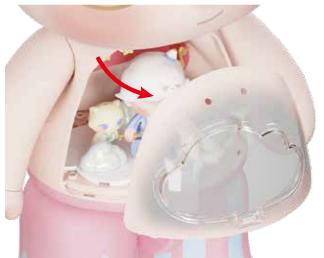

### 云形门可打开




### 灯光玩法



- (1) 开启脚底开关;
- (2) 触摸下巴, 打开/关闭头顶灯;
- (3) 脚底有充电接口, 腿部有电池, 可插入底座充电;
  - 满电状态下可独立亮灯2.5-3小时左右;
  - 低电量提醒: 头顶灯闪3秒后熄灭; 触摸下巴、开启脚底开关、将大娃插入底座, 以上操作后头顶灯均会闪3秒进行提示。
  - 空电量充电时, 建议先充电30分钟后再使用灯光。

### 可动区域

- 头部可左右旋转共90°
- 礼服可自由穿脱
- 手臂、手腕可旋转
- 可坐下或站立, 听到“咔”声表示腿部复位

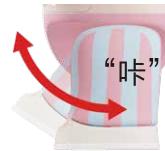

### 注意事项

- 图例为效果示意, 具体请以产品实物为准;
- 请勿过度转动头部和四肢, 以防止磨损或损坏;
- 请勿频繁穿脱衣服; 布料工艺特殊请注意防尘, 水洗易致变形, 如有污渍可用柔软洁净的布或湿巾擦拭;
- 产品头部有灯光部件, 请勿倾斜或弯腰放置, 避免撞到头部损坏灯光部件;
- 产品内部含有电路板, 请勿放在高温或高湿度的环境, 以免电路受损及意外发生;
- 产品不防水, 请远离水源, 以免电路受损及意外发生;
- 产品外观组装处有轻微缝隙属于正常情况;
- 请勿使用5V-1A以外的电源, 以免导致产品发热或损坏;
- 请勿自行拆卸出厂组装好的零部件 (如底座等), 以免影响产品售后处理。

### Type-C接口

- 底座不带电池, 播放音乐时只能插电使用。
- 使用Type-C充电线接5V-1A充电器充电;



### 充电指示灯

- 大娃充电时底座指示灯呈现粉红色, 满电后呈现蓝色

## 联动玩法

- 1 指挥棒
- 2 飞羽领结
- 3 磁吸小鸟
- 4 5种乐器元件
- 5 乐谱支架



### 音乐玩法

#### 音乐开关

- 通电时按下开关2~3秒, 控制开关机, 开起时开关亮灯。
- 旋转开关控制音量大小
- 音乐播放时, 按下开关音乐暂停, 再次按下开关音乐继续播放。

#### 播放音乐



插电后开启底座音乐开关:


- 每放置1种乐器元件, 该乐器旋律就会响起;
- 每减少1种乐器元件, 该乐器旋律退出;
- 乐器旋律的加入或退出会有1~2秒的延时, 属于正常情况。

- 5种乐器元件全部放置后, 开始播放《DIMOO的梦境回响曲》完整乐曲, 同时胸部灯光自动亮起, 头部灯光随乐曲律动闪烁;
- 播放完整音乐时, 轻触大娃下巴, 头部灯光有三种模式: 律动/常亮/关闭, 并按顺序在轻触开关后依次出现;
- 减少任意一个乐器元件会退出完整音乐状态, 同时该乐器旋律退出, 胸部灯光熄灭, 头部恢复到播放完整音乐前的状态。


# DREAM CONDUCTOR

## INTERACTIVE PLAY


### REMOVABLE OUTER SHELL

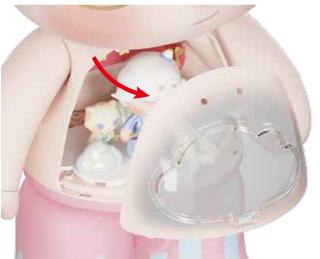

### OPENABLE CLOUD-SHAPED DOOR

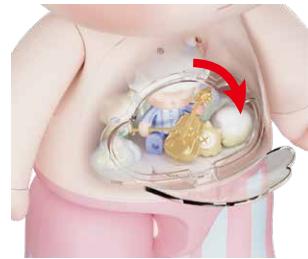

### TOUCH-LIGHT INSTRUCTIONS

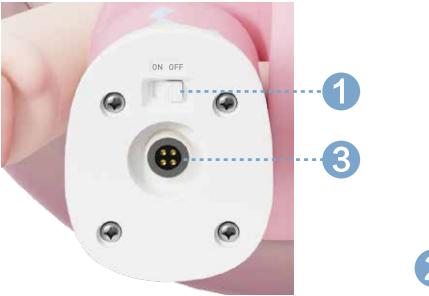

- (1) Turn on the foot switch.
- (2) Touch the chin to turn on/off the overhead light.
- (3) The sole has a charging port and the leg contains a battery. It can be docked into the base for charging, with lighting functions available during charging.  
-It can light up independently for about 2.5-3 hours when fully charged.  
-Low Battery Alert: The overhead light flashes for 3 seconds then turns off. It will also flash for 3 seconds as a prompt when touching the chin, activating the sole switch, or inserting the big doll into the base.  
-When charging from empty, it is recommended to charge for 30 minutes before using the light.

### ARTICULATED AREAS

- The head can rotate 90° left and right
- Dress is removable
- Arms and wrists are rotatable
- It can sit or stand; a "click" sound indicates the legs are reset.



### TYPE-C PORT

- The base has no built-in battery and must be plugged in for music playback.
- Charge using a Type-C cable connected to a 5V/1A charger.


### CHARGING INDICATOR

- Pink light: Charging in progress
- Blue light: Fully charged



### NOTICE

- Illustrations are for reference only. The actual product shall prevail.
- Do not over-rotate the head or limbs to prevent wear and tear.
- Avoid frequent dressing and undressing. The fabric is specially crafted and requires dust protection. Washing may cause deformation; for stains, gently wipe with a soft, clean cloth or damp tissue.
- The product's head contains lighting components. Do not place it at an angle or expose it to impacts, as this may damage the lighting parts.
- The product contains internal circuit boards. Avoid high-temperature or high-humidity environments to prevent circuit damage and potential hazards.
- The product is not waterproof. Keep it away from water to prevent circuit damage and potential hazards.
- Minor gaps at assembly points are normal and do not affect product performance.
- Do not use a power source other than 5V/1A to avoid overheating or damage to the product.
- Do not disassemble factory-installed parts (e.g., base) as this may void the after-sales service.

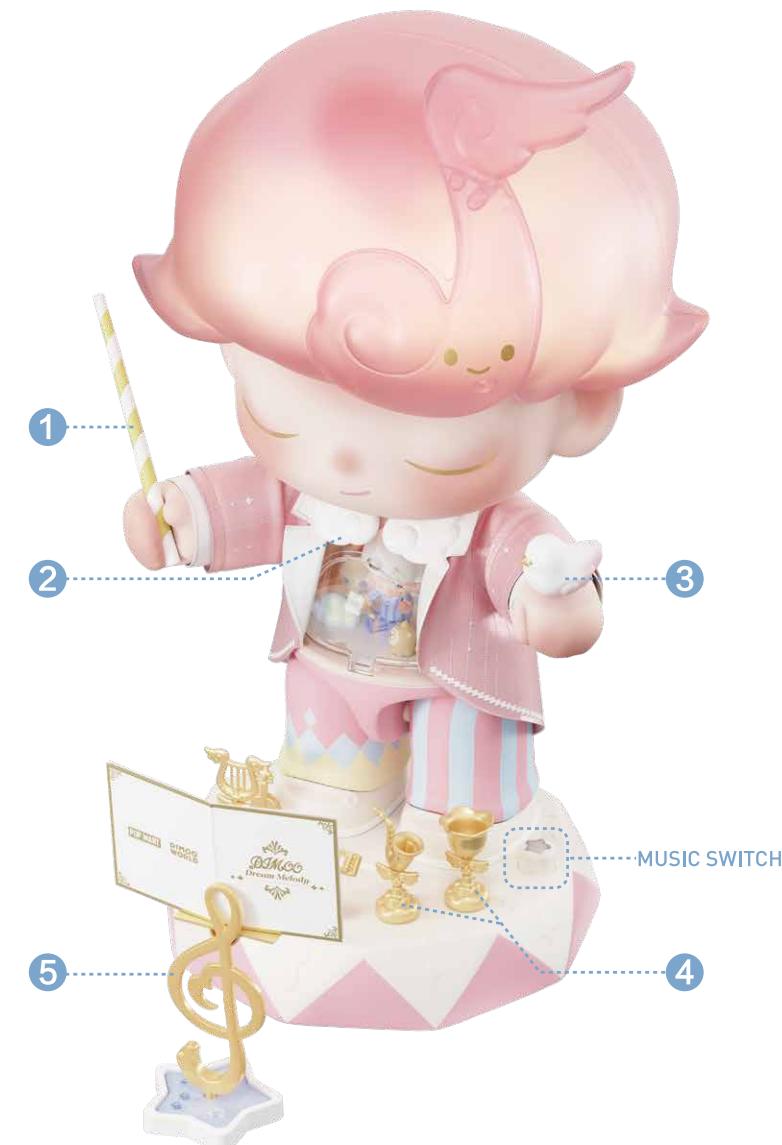

### PLAY MUSIC



Turn on the base music switch after plugging in:

- When each musical instrument is placed, the melody of the instrument will sound;
- When each musical instrument is removed, the melody of the instrument will stop.
- It is normal for the instrument melody to have a delay of 1-2 seconds when entering or exiting.



- When all 5 musical instruments are placed, the full musical composition of DIMO DREAM MELODY starts playing, with the chest lights automatically illuminating and head lights pulsing rhythmically.
- When full music plays, gently tap the doll's chin to cycle through 3 headlight modes: Pulse/Steady/Off in sequence.
- Removing musical instrument will exit full music mode:
  - The corresponding instrument melody stops
  - Chest lights turn off
  - Head lights revert to their pre-orchestra state

## INTERCONNECTED PLAY

- MAESTRO BATON
- FEATHER BOWTIE
- MAG-SNAP BIRDIE
- FIVE MUSICAL INSTRUMENTS
- MUSIC STAND



## MUSIC INSTRUCTIONS

### MUSIC SWITCH

Press & hold the switch for 2-3 seconds to power on/off. The indicator light illuminates when activated.

Rotary switch controls volume level.

Press to pause/play: Music pauses on the first press and resumes on the second press.

## ELECTRONIC FUNCTION SPECIFICATION

### 电子功能说明

#### PRODUCT PARAMETERS

##### 产品参数

Model Number: P10018    Rated Voltage: 5V    Rated Current: 1A  
 Product Model: P10018    Rated Voltage: 5V    Rated Current: 1A

Rated Power: 6.08W (one 3mm straw-hat white LED with 0.06W + seventeen 3535 RGB LEDs \* 0.06W + one speaker with 5W)  
 Battery Model/Capacity: 14500/3.7V 800mAh

额定功率: 6.08W(1颗3mm草帽白灯0.06W+17颗3535 RGB \*0.06W+1个喇叭5W)  
 电池型号/容量: 14500 / 3.7V 800mAh

Supplier's Declaration of Conformity  
 Product Name: DREAM CONDUCTOR  
 Model No.: P10018

Party issuing Supplier's Declaration of Conformity:

Beijing Pop Mart Cultural & Creative Co., Ltd  
 ADDRESS: Chaoyang District, Beijing, China  
 TEL: (+86) 400-023-2233

Responsible Party – US Contact Information:  
 POP MART AMERICANS INC.  
 101 N Brand Blvd Suite 606 Glendale, CA 91203, USA

For devices subject to part 15 of this chapter as specified in § 15.19(a)(3) of this chapter, that the product complies with the rules.

This class B digital apparatus complies with Canada ICES-003." & "Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada."

This toy contains a battery that is non-replaceable.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this toy (5V DC).

Warning! The toy is not intended for children under 3 years old.

Product Name: DREAM CONDUCTOR

Model No. P10018

This device complies with part 15 of the FCC Rules. Operation is subject to the following

Two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

##### 警告:

本产品仅适用于15岁以上人群。电源接线端务必保持干燥和清洁，避免短路。包装上含有重要信息,请保留备用。包装上的图片与实际商品存在一定差异,请以实物为准,敬请谅解。应定期检查USB电缆线路,包括其电源线、插头、外壳和其他组件。如果发现一些损坏的区域,在修复之前不要使用电缆线。请使用带有指定参数的变压器。本产品未配备变压器。清洁前,应将产品从变压器或充电器上断开。请定期检查变压器的电线、插头、外壳或其他部件是否损坏。如有,请立即停止使用,直至修复。

##### 该产品产生的闪光可能会引发对癫痫敏感的人!

-未连接超过推荐的电源供应数量

-该产品只能与USB电源一起使用

-该产品应与提供的USB电源一起使用

-USB电源不是玩具

##### CAUTION:

This product is only for ages 15 & up. The supply terminal must be kept dry and clean to avoid short circuits. The package contains important information. Please keep it for further use. Actual product may differ slightly from photos on the packages. Please refer to the actual product. Thanks for understanding. The USB cable line should be checked regularly, including its power cord, plug, shell and other components. If find some broken areas, don't use cable line until it's repaired. Please use transformer with specified parameters. This product is not equipped with a transformer.

The product should be disconnected from the transformer or charger before cleaning. Please regularly check the wire, plug, housing or other components of the transformer for damage. If any, stop using it immediately until it has been repaired.

##### WARNING:

This product produces flashes that may trigger epilepsy in sensitised individuals!

- Not connected more than recommended number of power supplied

- The product should only be used with a USB power supply

- The product shall be used with the USB power supply supplied

- The USB power supply is not a toy

This toy is only to be connected to equipment bearing either of the following symbols

Beijing Pop Mart Cultural & Creative Co.,Ltd instructions for the Prevention and management of waste

##### Batteries

Dear Customers,

Thank you for purchasing the battery products of Beijing Pop Mart Cultural & Creative Co.,Ltd. To protect the environment and promote sustainable resource utilization, we provide the following information on the prevention and management of waste batteries in accordance with the EU Battery Regulation (EU 2023/1542).

Product Information

Model: HD 14500

Type: Cylindrical lithium-ion rechargeable cell

Chemical Composition:

Description	Chemical name	CAS No.	Content
Button battery	Lithium nickel cobalt Al	113066-89-0	39.5
	Carbon black	1333-86-4	1.44
	Polyvinylidene fluoride (PVDF)	24937-79-9	0.7
	Graphite	7782-42-5	20.6
	Carboxymethyl cellulose	9004-32-4	0.39
	Styrene-butadiene rubber (SBR)	9003-55-8	0.49
	polyethylene	9002-88-4	2.24
	Lithium hexafluorophosphate	21324-40-3	14.38
	Copper	7440-50-8	9.34
	Aluminum	7429-90-5	3.39
	Nickel	7440-02-0	0.93
	Fe	7439-89-6	6.6

Capacity:800mAh

Prevention Information for Waste Batteries

Correct Usage. Please use the battery in accordance with the requirements in the product manual. Avoid overcharging, deep discharging, and using it in harsh conditions such as high temperatures and high humidity to extend the battery life and reduce premature battery failure caused by improper use.

Storage Suggestions: If long-term storage of the battery is required, please maintain the battery charge at 30%–50% and store it in a cool, dry, and well-ventilated environment, avoiding contact with metal objects.

Management Information for Waste Batteries

Do not dispose of used batteries together with general household waste.

You may return used batteries to the following locations.

Our authorized recycling points: Please refer to <https://www.popmart.com/gb>, <https://www.popmart.com/nl>.

Or take them to the used battery collection points designated by the local government authorities.

Penalties for Violations:

If you violate the regulations for the management of used batteries and dispose of them indiscriminately, you may face legal liability and fines.

##### IC statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc., must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment from health risks. If the toy is out of use, please use common household tools to break the product for built-in rechargeable battery operated toy or unscrew the battery door for replaceable battery operated toy, then take the battery out from the toy. Dispose of battery in accordance with your local battery recycling or disposal laws.



**EU legislation**  
 For Electrical and Electronic Equipment and Batteries, requires these to be separately collected so that they can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream! The "wheeled bin" symbol means that it should be collected as "waste electrical and electronic equipment". You can return an old product to your retailer when you buy a similar new one. For other options, please contact your local council.

## ▲ 注意事项

本产品仅适用于15岁以上人群。电源接线端务必保持干燥和清洁,避免短路。包装上含有重要信息,请保留备用。包装上的图片与实际商品存在一定差异,请以实物为准,敬请谅解。应定期检查USB电缆线路,包括其电源线、插头、外壳和其他组件。如果发现一些损坏的区域,在修复之前不要使用电缆线。请使用带有指定参数的变压器。本产品未配备变压器。清洁前,应将产品从变压器或充电器上断开。请定期检查变压器的电线、插头、外壳或其他部件是否损坏。如有,请立即停止使用,直至修复。

### WARNING:

This toy produces flashes that may trigger epilepsy in sensitised individuals.  
 Keep the projection light away from eyes to avoid any possible harms.



Point de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
 Privilégiiez la réparation ou le don de votre appareil!

**POP MART**

**DIMOO  
WORLD**

