


# 正面

**Wireless Thermometer Probe Instruction Manual**

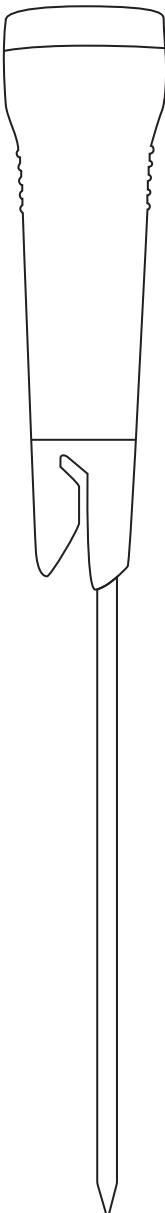

Compatible battery model: **LR44**  
Number of batteries: **2 PCS**

Please read this instruction manual before use and keep it for proper use.

**Before use, the following precautions you must know**

**Precautions**

- The product is sharp, please take care to avoid injury.
- Keep out of reach of children.
- This product has stainless steel material, and the handheld position has precision instruments, can not be used in microwave ovens, ovens, air fryers, barbecue ovens and other confined spaces.
- Please use it at least 30 cm away from the installation site of the artificial pacemaker.
- If the product is damaged or abnormalities occur, stop using it.
- Do not modify, disassemble, or repair the product arbitrarily.

**Product specifications**

Product name	Wireless Thermometer Probe
Model Name	AW-R80
Input voltage / current	3V/65uA
Input power consumption	0.000195W
Accuracy range	0°C-300°C (±0.5°C)

**Download the APP**

Please search the keyword "COOKING DANCE" in App store or Google Play, or scan the following QR code with your phone. Applicable to iOS 9.0 or above and Android 5.0 or above.

**Google Play**

**App Store**

**FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# 反面

**Connecting the wireless temperature probe**

**1** Press the power button for more than 3 seconds. The status light flashes white for 1 second. The same goes for turning off. The probe will automatically switch off if disconnected for one hour.

**power button** **status light**

**2** Custom temperature and duration settings can be set according to your needs in the "COOKING DANCE" APP

**Custom temperature** **timer**

**Product composition and name**

**status light** **power button**

**battery cover**

**probe part**

**fixture**

**temperature sensor**

**3** After the connection is successful, place the probe in the temperature measurement position and select cooking on the APP to start temperature measurement.

**APP interface introduction**

**1** Click the cooking icon in the APP to select different Cooking modes

**Inserting / exchanging batteries**

Batteries purchased separately. Battery specification information: **LR44-2 pcs**

**LR44**

**Before cleaning, the following precautions you must know**

- Do not wash it in a dishwasher.
- Be careful not to let water get into the handheld part.
- Never use benzene, thinner, abrasives, corrosive detergents, or metal scrubbers.
- Use a rag for cleaning, do not use wire balls, wire brushes or other sharp tools. If dirt is difficult to remove, soak the probe part in warm water.

**How to clean a Wireless thermometer probe part**

**1** Power off the Wireless thermometer probe.

- Status light is off

**2** Clean the probe part with tapwater or general dishwashing liquid, and avoid water getting into the handheld part.

**3** Wipe the probe part and the handheld part with a dry rag.

**4** Store in a ventilated, dry place out of reach of children.