



User manual  
For Drone VTX  
WML0001

Rev. 1.0

2012-2025 Well Linkage, Co. Ltd.

This document contain information that is proprietary to Well Linkage, Co. Ltd  
Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

Specification are subject to change without notice.

# ■ FAT Shark VTX Manual

## 1. LED Description

LED	Description
Red	Power
Blue	Band
Green	Channel

## 2. Button Operation

Channel select mode:

- Short press to enter CHANNEL setup. Green LED flashes.

Band select mode:

- Press for 3 seconds to enter BAND setup. Blue LED flashes.

Power select mode:

- Press for 3 seconds to enter POWER setup. Red LED flashes.

**Note:** These button functions only work when the TRAMP cable **is not connected** to the flight controller.

## 3. Frequency Table

The following frequencies are available in unlocked and locked modes:

Band / CH	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Band A	5845	5825	5805	5785	5765	5745	5725	
Band B	5733	5752	5771	5790	5809	5828	5847	
Band F	5740	5760	5780	5800	5820	5840		
Band R			5732	5769	5806	5843		
Band H			5733	5773	5813			

Power Output Levels (Unlocked):

Mode	Level 1	Level 2	Level 3	Level 4	Level 5
PIT	25	200	500	1500	2500

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

## FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.