


The maximum constant current is 2 amperes per channel. Please reduce load if main unit is overheating.

**CAUTION! Do not short circuit or overload the LED outputs, this may lead to permanent damage!**

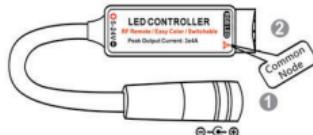

## Operation

### 1. Using Remote Controller

Please pull out the battery insulate tape before using. The RF wireless remote signal can pass through barrier, so it's not necessary to aim at the main unit when operate.

2). Press 'ON/OFF' and 'MODE+' key together in 5 seconds after power on.

After this operation, the main unit will recognize any remote controller. To pair the main unit back to specific remote, please repeat the 'Pairing New Remote' operation.

### 4. Switch Output Color Sequence

The controller's default output signal sequence is Common-Green-Red-Blue. If the LED application is in different cable sequence, the direct color keys will not match the LED color. In this case, user can adjust the output signal sequence with following steps:

- 1). Plug off the power of main unit and plug in after 5 seconds.
- 2). Press 'RED' and 'BLUE' color key together in 5 seconds after power on.

With this operation, the output sequence will switch between 6 possible combinations. The sequence will be memorized and it won't change before next same operation.

For proper receiving remote signal, please do not install the main unit in closed metal parts.

### 2. Pairing New Remote

The remote and main unit is 1 to 1 paired as default. Furthermore, main unit can be paired to 3 remote controllers and each remote controller can be paired to any main unit. Please do following steps to pair new remote controller:

- 1). Plug off the power of main unit and plug in after 5 seconds
- 2). Press 'SPEED-' and 'SPEED+' key together in 5 seconds after power on.

After this operation, the main unit will recognize the new remote controller.

### 3. Free Remote Pairing Mode

In some specific cases, the main unit may need to be paired to any remote controllers. Please do following steps for free remote pairing mode:

- 1). Plug off the power of main unit and plug in after 5 seconds.

## Specification

Dynamic mode	22 modes
Static Color	20 colors
PWM Grade	256 levels
Brightness Grade	5 levels
Speed Grade	10 levels
Demo mode	Yes
Direct Color Select	Yes
Output Color Switchable	Yes, 6 options
Working Voltage	DC 5~24V
Output Current	3x2A constant
Remote frequency	433.9434MHz
Remote distance	>15m at open area

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.