

Model:M11

I. Key Instructions and Functions

- 1.Power On: Take the earphones out of the charging case. The earphones will automatically turn on and start pairing. Alternatively, long - press the touch key for about 3 ~ 5 seconds to power on.
- 2.Power Off: Put the earphones back into the charging case, and they will automatically power off. Or long - press the touch key for about 3 ~ 5 seconds to power off.
- 3.Play/Pause: During playback, single - click the touch key of one earphone to pause the playback. Single - click again to resume playback when it is paused.
- 4.Answer/Hang up Calls: When there is an incoming call, single - click the touch key of one earphone to answer the call. To end the call, single - click the touch key of one earphone to hang up.
- 5.Reject Calls: When there is an incoming call, long - press the touch key of the earphone for 2 ~ 3 seconds to reject the call.
- 6.Double - click to Adjust Tracks: Double - click to skip to the previous or next track.
- 7.Triple - click to Adjust Volume: Triple - click to adjust the volume.

II. Pairing and Connecting

How do I power on and pair the earphones?

- 1 Remove the earphones from the charging case. The earphones will automatically power on and initiate the pairing process. Turn on the wireless function of your phone, search for the earphones, and then connect. If you experience problems like only one earphone getting connected or the device not being detected, place both earphones back into the charging case. Then take them out again, wait for approximately 5 seconds, turn on the wireless function of your phone (if it was turned off), and search for and connect to the earphones once more.

III. Precautions for Use

- 1 Please do not treat this product violently. Do not squeeze it with heavy objects, and keep it away from high- temperature and high - humidity environments.
- 2 Keep it away from other high - frequency transmitting devices, as this may affect the signal reception of this device, causing audio distortion and disconnection.
- 3 Please do not use it within an effective environment, and there should be no physical obstacles (such as walls) between the wireless device and the earphones.
- 4 When charging, please use a charger with an output not exceeding 5V - 2A to charge this charging case.



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- * RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.