

A

TORCHSTAR


Smart Anti-Glare Downlight with Night Light

User Manual
Notice d'Emploi

Manual De Usuario

*HUB REQUIRED


DOWNLOAD SMART LIFE APP

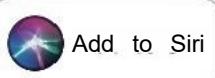

*HUB REQUIRED

PACKAGE CONTENT

INCLUDED

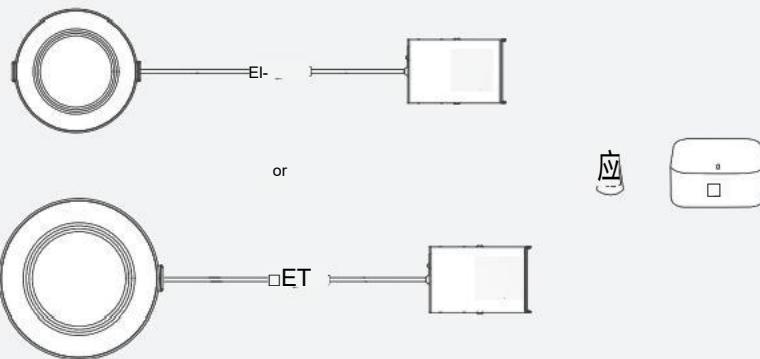

PRODUCT FEATURES



INDOOR



HUB REQUIRED
FOR CONTROL VIA INTERNET



BLUETOOTH



NOT EXPOSE TO
SUN LIGHT



120V



IP44
WATERPROOF



-4°F-104°F
WORKING TEMP



ELECTRICIAN
REQUIRED

IMPORTANT SAFETY INSTRUCTIONS



GENERAL: All electrical connections must be in accordance with local and National Electrical Code(N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, contact and obtain the services of a qualified electrician.

1. Use UL or IEC approved wire only for input/output connections.
2. Remove fixture and mounting components from the box, and make sure that no parts are missing by referencing the illustration in the illustration instructions.
3. The inside of the ceiling must be waterproof.
4. This device is not intended for use with emergency exits.
5. WARNING-RISK OF ELECTRIC SHOCK. DISCONNECT MAIN POWER AT FUSE OR CIRCUIT BREAKER BEFORE INSTALLING OR SERVICING THE FIXTURE.
6. Turn power off before installation, inspection, or removal.
7. Use all necessary precautions while performing this procedure.
8. Properly ground electrical enclosure. IT IS IMPERATIVE THAT THE OUTLET BOX BE PROPERLY GROUNDED.
9. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, OTHERWISE SAFETY WILL BE COMPROMISED.
10. This integrated LED fixture has no lamp/bulb to replace.
11. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
12. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.



TORCHSTAR CORP

LeonLite

LITEdge

3768 Milliken Ave, Suite A
Eastvale, CA 91752


Questions or Comments

1-800-990-7688

info@leonlite.com

www.leonlite.com

©2022 TORCHSTAR CORP
All rights reserved

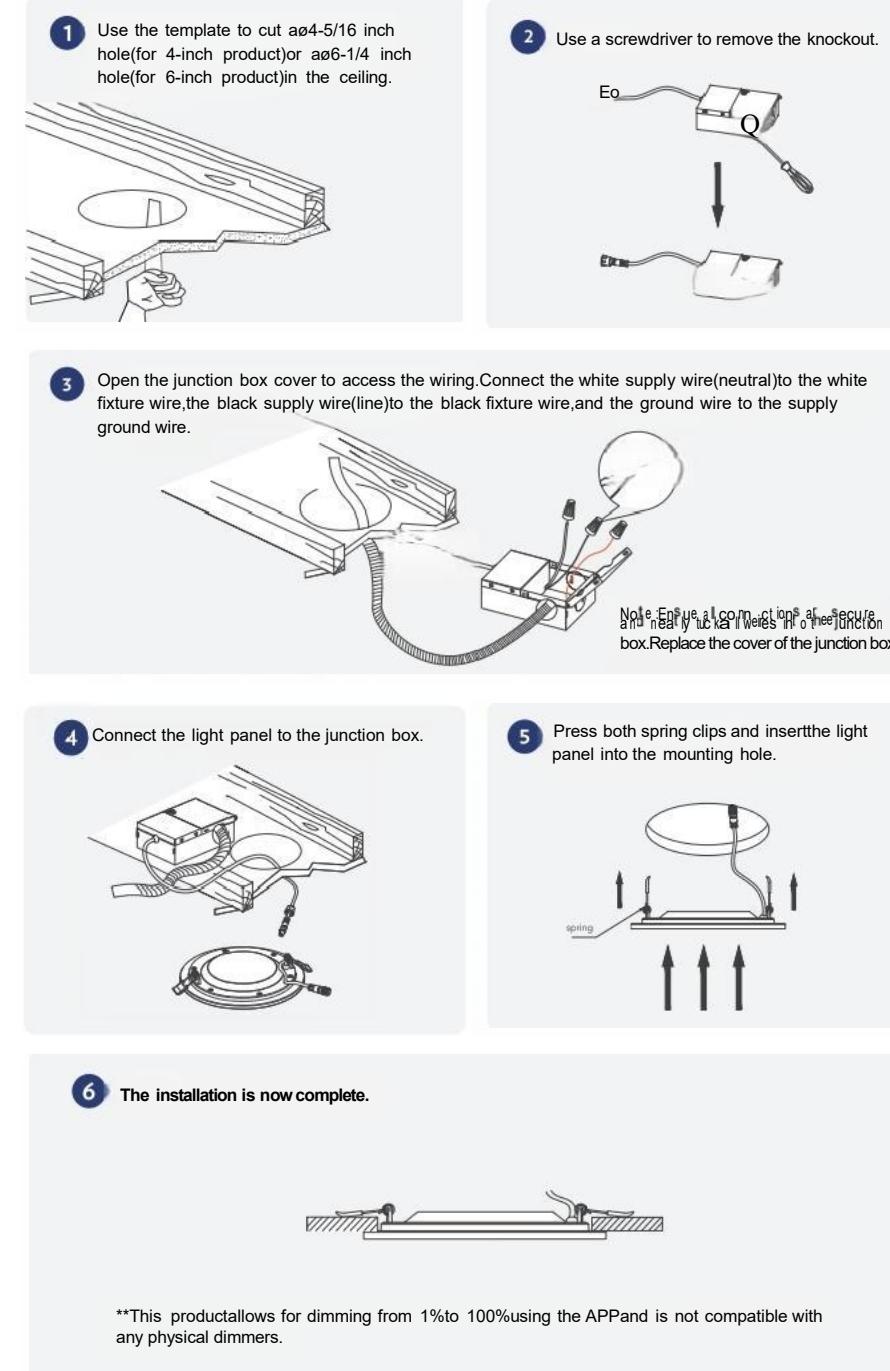

Smart Anti-Glare Downlight with Night Light

Size	4-Inch	6-Inch
Power	10W+2W	15W+3W
Luminous flux	700lm	1000lm
Voltage	120V	
Working temperature	-4° F-104° F	
Color temperature	2700K-6500K &RGBCW	
Material	Aluminum	
Beam angle	100°	
Dimming	ViaAPP	
IC rated	Yes	

① Link to online quick start guide.



800-990-7688 (Toll Free)



www.torchstar.us



TORCHSTAR Product innovation has always been a critical driver of LEONLITE's business. In a highly competitive industry, we constantly strive to develop new products that offer homeowners unique advantages in terms of style, installation, and energy efficiency. In addition, our products meet the industry's strictest safety and performance standards to ensure product quality.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.