

---

# ELLIPTICAL TRAINER

Elliptical Machine remote control



TY-006

User Manual

## PRODUCT CARE

---

### STORAGE

When not in use, place the product into the box and store in a dry, ventilated, cool area.

Do not twist the power cord.

Do not place product in direct sunlight or heat. Do not store where there is high humidity, in areas such as bathrooms.

### CLEANING

Before cleaning, make sure to turn the power off and unplug the power cord.

Use a dry cloth to clean the surface of the product.

Do not use corrosive cleaning agents to clean the product.

## TROUBLESHOOTING

---

If you have problems when using this product, refer to the following tips and possible solutions.

Status	Possible Cause	Solution
Product doesn't turn on	Not powered	Make sure power cord is plugged in
Product suddenly stops operating	1. Power failure 2. Timer exceeded 15 minutes 3. Continuous use time is too long, overheat protection 4. Max User Weight exerted on pedals has been exceeded. A Protection Action is initiated	1. Check that the power cord is connected 2. Press the Power button to turn the machine on 3. Let the product cool down, then turn the power back on 4. Do not stand on device and do not exceed the Max User Weight

## DISPLAY ON CONTROL PANEL

---

Scan	Press The Function Button Until The Word Scan Appears On The Screen; The Screen Will Automatically Explore The Value Of Each Function Every Five Seconds.
Time	Press The Function Button Until The Time Light Appears On The Screen; The Screen Will Show The Actual Length Of Time Of Training/in Use.
Distance	Press The Function Button Until The Distance Light Appears On The Screen; The Screen Will Show The Walking Distance (Meter).
Speed	Press The Function Button Until The Speed Light Appears On The Screen; The Screen Will Show The Current Speed.
Counter	Press The Function Button – When “Counter” Is Lit, The Number Displayed On The Control Panel Will Indicate The Number Of Circles Counted.
Calorie	Press The Function Button – When “Calorie” Is Lit, The Number Displayed On The Control Panel Will Indicate The Number Of Calories Burned.

### PRESS POWER BUTTON TO TURN THE ELECTRONIC STEPPER OFF.

The device automatically stops operating after 30 minutes. Press Auto Exercise or Manual Exercise to restart the timer at 30 minutes and continue exercising.

### WHEN POWER IS OFF OR NOT PLUGGED IN

You can use the device when it is not plugged in or when the power is off. You can pedal forward .

### MOVING THE PRODUCT

---

Always use the built-in handle to carry or move the device.

## IMPORTANT

---

Before using this product, please carefully read all instructions. Before use, carefully read the operating instructions, especially safety precautions. Keep this manual for future reference. Note: The package didn't include the Battery, Pls choose AAA Battery for Remote Use !

### SAFETY INSTRUCTIONS

---

Be sure to use this product in accordance with the operating instructions.

1. Turn off the power after each use. After using or before cleaning the machine, unplug the power supply from the outlet.
2. Do not cover while using, to avoid motor overheating and cause malfunction or damage.
3. Keep children away from the equipment. This machine is for adult use only.
4. Be aware how you are feeling. If you feel uncomfortable or experience any adverse symptoms, stop the using the machine immediately.
5. Do not use the product if it is damaged or defective.
6. Do not insert or drop debris in the product.
7. This equipment is not suitable for therapeutic use. Do not use with other medical electronic equipment, such as pacemakers or EKG machines.
8. Do not use the product in wet or dusty environment. Do not use in humid environment, such as bathroom.
9. Do not store or use the product outdoors. Keep the product away from direct sunlight.
10. Do not operate the machine with wet hands.
11. Do not allow water and other liquids to touch control switch.
12. Do not place the power cord under the product or any heavy object.
13. Do not wind the power cord around the product. That could damage the power cord, cause electric shock or electrical fire.
14. If the power plug is loose, do not use the product.
15. Do not use the power cord to move the product.
16. Use the elliptical indoors on a level surface, and keep at least 3 feet of free space all around it.
17. If there is a power surge during use, stop using the product. Sudden restoration of power could cause injury to you
18. The product's rated voltage fits 100-240V, rated power is 50W,30min.
19. Consult your physician before use, especially if you have any medical conditions such as diabetes.

## WARNING

ONLY USE THE DEVICE WHILE SITTING. DO NOT STAND ON THE DEVICE.

 
## PARTS LIST



### CONTROL PANEL:



### REMOTE CONTROL:



Note: Operations executed- whether via remote control or directly on the control panel -will be displayed on the control panel's screen.

## OPERATING INSTRUCTIONS

1. Plug in the Elliptical Machine
2. Press the Start Button to turn on the power.

**Power:** The device is now ready to be operated.

### Mode:

**Auto Exercise:** Auto Exercise: Press the MODE button once to activate P1, twice to activate P2.....and twelve times to activate P12.

The pedals will rotate at a different speed and direction when set to these different Auto Modes.

**Manual Exercise (HR):** Press the Power button until the letters HR are displayed on the screen. The device is now set to Manual Mode. There are 12 Speed levels, each is outlined below:

01: 30 r/min	06: 60 r/min	11: 90 r/min
02: 36 r/min	07: 66 r/min	12: 96 r/min
03: 42 r/min	08: 72 r/min	
04: 48 r/min	09: 78 r/min	
05: 54 r/min	10: 84 r/min	

**Direction:** Press this button to switch the pedaling direction. Only available on HR (Manual Exercise).

**Speed:** Press this button to increase or reduce speed among the 12 Speed levels: 01, 02, 03, 04, 05.....12, Only available on HR (Manual Exercise).

**Function:** Press this button to alternate the information displayed on the screen for: Scan, Time, Distance, Speed, Counter, and Calorie

### Note:

1. After the device stops operating a function mode:  
Panel: Press the Power button to start/stop the function.  
Remote: Press the Start/Stop button to start/stop the function.
2. When the device is operating and your Function has been selected, it will take the device 3 seconds to start.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.