 




## App Installation Register and log in

①.Scan the QR code to download and install  
Our Support APP.

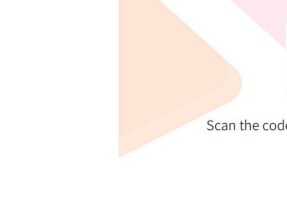

②.Register an account with your email address.  
③.Login the App.

**Tips:**  
Please fully charge before use for the first time.

Nantasia

Scan the code to open the current page

 
Android users downloads

nantasia.apk

Apple users download

## Device Binding


Before binding, please enable Bluetooth  
function of mobilephone.  
Open your download Appscan the Identifica-  
tion Code below to bind the device.

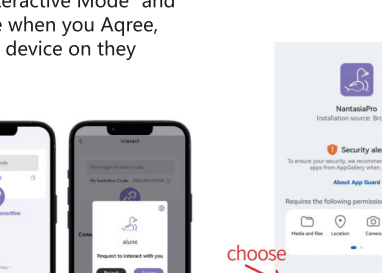

You can also enter the device code **910900**  
to bind the device.


## Device Controlling

**Interact Mode**  
Choose the Interact Mode , copy your  
invitation code send to your friend, ask  
your friend download our app and Register a  
new account chose "Interactive Mode" and  
put your invitation code when you Agree,  
he/she can control your device on they  
phone.


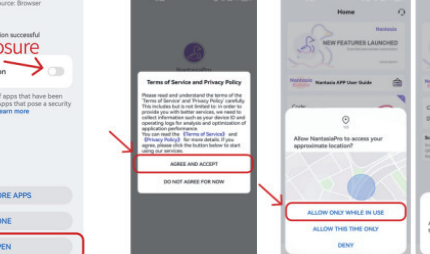


## Help

 ①.I can't install APP ?  
If your phone is Android system when you download app.  
Please choose to trust this app.

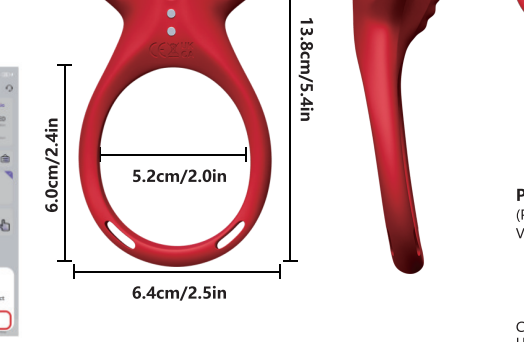

  ②.I can't control device?  
When you open the app for the first time please agree  
and accept al the request.

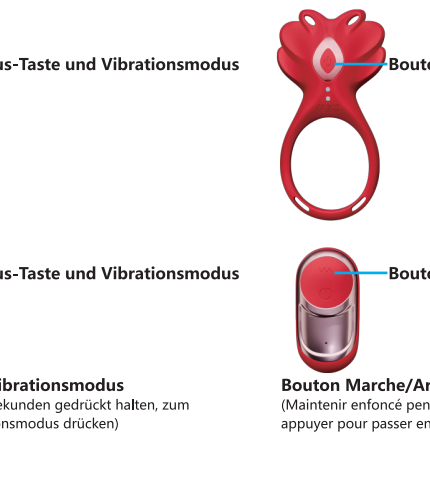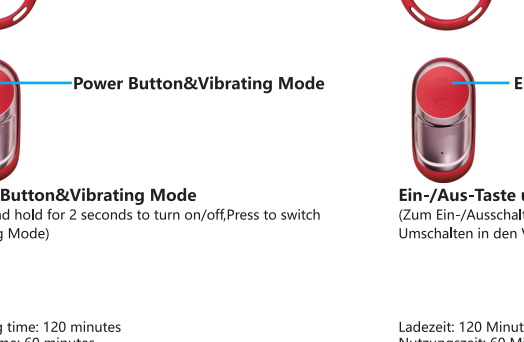

**Power Button&Vibrating Mode**  
(Press and hold for 2 seconds to turn on/off, Press to switch  
Vibrating Mode)

Charging time: 120 minutes  
Usage time: 60 minutes

## English

**Power Button&Vibrating Mode**  
(Press and hold for 2 seconds to turn on/off, Press to switch  
Vibrating Mode)

Charging time: 120 minutes  
Usage time: 60 minutes

## Deutsch

**Ein-/Aus-Taste und Vibrationsmodus**  
(Zum Ein-/Aussschalten 2 Sekunden gedrückt halten, zum  
Umschalten in den Vibrationsmodus drücken)

Ladezeit: 120 Minuten  
Nutzungszeit: 60 Minuten

## Français

**Bouton Marche/Arrêt et Mode Vibrant**  
(Maintenir enfoncé pendant 2 secondes pour allumer/éteindre,  
appuyer pour passer en mode Vibrant)

Temps de Charge: 120 minutes  
Temps d'utilisation: 60 minutes

## Italiano

**Pulsante di accensione e modalità vibrazione**  
(Premere e tenere premuto per 2 secondi per accendere/  
spegnere, premere per passare alla modalità vibrazione)

Tempo di Ricarica: 120 minuti  
Tempo di Utilizzo: 60 minuti

## Español

**Botón de encendido y modo vibración**  
(Mantén pulsado durante 2 segundos para encender/apagar,  
pulsar para cambiar al modo vibración)

Czas ładowania: 120 minut  
Czas użytkowania: 60 minut

## Polski

**Przycisk zasilania i tryb wibracji**  
(Naciśnij i przytrzymaj przez 2 sekundy, aby włączyć/wyłączyć,  
naciśnij, aby przełączyć tryb wibracji)

Oplaatid: 120 minuten  
Gebruiksduur: 60 minuten

## Nederlands

**Aan/uit-knop en trilmodus**  
(2 seconden ingedrukt houden om aan/uit te zetten, indrukken  
om de trilmodus te wisselen)

Laddningstid: 120 minuter  
Användningstid: 60 minuter

## svenska

**Strömknapp och vibrationsläge**  
(Tryck och håll in i 2 sekunder för att slå på/av, tryck för att växla  
vibrationsläge)

Doba nabijeni: 120 minut  
Doba používání: 60 minut

## čeština

**Tlačítko napájení a vibrační režim**  
(Stisknutím a podržením po dobu 2 sekund zapnete/vypnete,  
stisknutím přepnete vibrační režim)

充電時間: 120 分  
使用時間: 60 分

## 日本語

**電源ボタンと振動モード**  
(2秒間長押しするとオン/オフになり、短く押すと振動モードに切  
り替わります)

充電時間: 120 分  
使用時間: 60 分

## 繁體中文

**電源鍵和震動模式**  
(長按2秒開啟/關閉，短按切換震動模式)

充電時間: 120 分鐘  
使用時間: 60 分鐘

## 中文

**电源键和震动模式**  
(长按2秒开启/关闭，短按切换震动模式)

充电时间: 120 分钟  
使用时间: 60 分钟

## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.