

EN

A6

Manual-tablet pc



Full name of manufacturer's company:

Shenzhen Xin times chain technology Co.,LTD

address:

6F,Biock F,Huachuangda Science Park,176Hangcheng Avenue,Hangcheng Street,Sanwei Community, Baoan District,Shenzhen,Guangdong,CN(China)

Charger Adaptation Requirements

Please refer to the input voltage/current value on the back of the product you purchased for charger adaptation.

This product only supports chargers with the above specifications, and the charger must comply with Chinese national standards.

If the machine is not used for a long time, please three months to the machine product to charge once, full of electricity and then turn off the machine to place.

Machines that have been left for a long period of time need to be pre-charged with the charger for more than 30 minutes before displaying the charging status for the first time of use.

caveat

Thank you for purchasing a **UXD** product! This product is installed with Android intelligent operating system, this user guide briefly introduces the various functions of the product, so that you can maneuver freely, fully appreciate the product to bring you value for money, please read this user guide carefully before use.

1. Note that a new battery will only reach optimum performance after two or three full charge and discharge cycles.
2. In order to prevent data loss, it is recommended that users regularly back up important data, especially before firmware upgrades or before the product is sent for repair. We are not responsible for any loss caused by the loss of data.
3. This product is a high precision electronic product, please do not disassemble it by yourself.
4. Avoid strong drops, water drops and splashes, and collisions with this product.
5. Avoid using the product in the following environments: high temperature, low air pressure, low temperature, humidity, dusty, strong magnetic field and long-term exposure to sunlight. We recommend that you use the product at an altitude of 3000 meters or less, at 0° to 35°C, and at a humidity of 5% to 95%.
6. Use batteries, chargers and accessories permitted by the manufacturer. Use of any other type of accessory will violate warranty regulations and may be dangerous.

hint

The nominal battery life of this product refers to the maximum battery life that can be achieved under the minimum power consumption environment. The actual battery life may vary depending on the usage and environment (e.g. WiFi, Bluetooth, screen brightness, volume level) and other factors, and there are also slight differences in individual products.

The reasons for the difference between the nominal and actual disk capacity of this product are as follows.

1, the error caused by the calculation algorithm: hardware manufacturers are in accordance with $1\text{MB} = 1000\text{KB}$ for calculation, while the software is in accordance with $1\text{MB} = 1024\text{KB}$ for calculation. Such as hardware nominal 8GB products, converted to software to identify the capacity of $8 * 1000\text{MB} * 1000\text{KB} * 1000\text{B} / 1024\text{MB} / 1024\text{KB} / 1024\text{B} \sim 7.45\text{GB}$, so there will be 0.55GB of calculation error, the larger the capacity of the product, the algorithmic error is also greater.

2. Android operating system will take up some disk space.

The nominal battery capacity of this product is the battery capacity detected by calculating the charge during actual charging and discharging using third-party tools, which will have a large error due to current fluctuation, and therefore is not used as a criterion for judgment.

First Time Boot Wizard

This wizard will assist you to quickly select language, time zone, set up WiFi network, user and computer name and other information, you can follow the prompts in the wizard, humanized settings, to start your value-added experience.

Key Definition

Power button.

In the off state, long press the power button for 3 seconds to turn on the power

In the boot state, short press the power button to turn off the screen to hibernate, when you need to activate the screen, short press the power button again.

In the power-on state, long press for 3 seconds to enter the shutdown prompt interface, long press for 10 seconds to force power-off

Volume up key: short press or long press to increase the volume

Volume down key: short press or long press, can reduce the volume

virtual keypad



HOME button

Click to return directly to the main screen



return key

Click to return to the previous screen



backstage key

Click to view, switch, and close background programs



menu key

Click to bring up the menu options



screen capture button

Click to save the image of the current screen



volume up key

Short or long press to increase the volume



volume down key

Short or long press to reduce volume

Pull-down notification bar



subscribers

Click to quickly switch the current user



set up

Click to quickly bring up the system settings



batteries

Click to quickly bring up the battery settings



Wi-Fi

Toccare per attivare o disattivare rapidamente il Wi-Fi



bluetooth

Tap to quickly turn Bluetooth on or off



situational model

Click to quickly adjust the volume



flight mode

Tap to quickly turn Airplane Mode on or off



autorotation

Tap to quickly turn on or off locking screen orientation



location information

Tap to quickly turn location features on or off



projection screen

Click to quickly turn searching for wireless display devices on or off

Wi-Fi wireless connection

- 1, click the "Settings" function icon to enter the settings list interface, click to select "WLAN" or "M-F" item to enter the W-Fi settings menu.
2. Paddle the switch to turn on the W-Fi function, the system will automatically scan the attached W-F hotspot signal;
3. Select the W-F signal you want to connect, enter the corresponding password and click "Connect".

Card and mobile network connectivity

1. Insert the SIM card in the shutdown state and boot into the system.
2. Click the "Settings" icon to enter the Settings list interface, click to select the "Traffic Usage" menu.
3. Flip the switch to turn on "Mobile Data Network".
- 4, the card insertion port in the right shell of the white cover, snap open the white cover can be loaded card; Note: chip face down.

Bluetooth connection

- 1、Click the "Settings" icon to enter the Settings list interface, click and select "Bluetooth" menu.Menu.
 - 2, scratch the switch to turn on the Bluetooth function, the system will automatically scan the attachment for Bluetooth signals;
 - 3, choose to click on the Bluetooth device can be connected, in the system pop-up "Bluetooth pairing request", click "pairing";
 4. When the other device is OK, you can connect successfully.
- *Only for models that can support this feature

Display Settings

Click the "Settings" icon to enter the settings list interface, click to select the "Display" menu.

1, brightness: scratch the progress bar to adjust the brightness of the screen backlight display.

2、Wallpaper: you can set the desktop wallpaper display content.

3、Hibernation: can set the system in the time of non-operation, the system automatically shut down the hibernation.

4, font size: you can set the size of the system display font.

5, automatic rotation: can be set to lock the current screen direction, or according to the direction of the device automatically rotate the direction of the soft screen.

Sound Settings

Click the 'Settings' icon to enter the Settings list interface, click to select the 'Beeps and Notifications' menu.

1、Volume: swipe the progress bar to adjust the volume of media, alarm clock and ringtone.

2、Notification ringtone: You can set the notification ringtone.

3、Mobile phone ringtone: You can set the ringtone for incoming calls.

4, other tones: you can open or close the screen lock tone, touch tone screen direction.

Battery status display

Tap the 'Settings' icon to enter the settings list interface, tap to select the 'Battery' menu, you can view the battery status Battery display switch: Swipe the switch, you can turn on or off the power percentage display effect.

stall, won't turn on, won't charge

1, there is a small hole next to the on button poke it with a toothpick, then long press the on button, ten seconds to boot.

2. Charge the tablet for more than 30 minutes before pressing switch on.

Application Management

Tap the 'Settings' icon to enter the Settings list interface, tap to select the 'Applications' menu, you can uninstall the application, clear the default operation, clear the cache, clear the data, force stop and other operations.

- 1、Third-party applications: can be uninstalled
- 2、System application: Not uninstallable

subscribers

Click the 'Settings' icon to enter the settings list interface, click to select the 'User' menu.

- 1、Support the setting of multi-user login.
2. Each user can set up exclusive personal applications and content.

location information

Click the 'Settings' function icon to enter the settings list interface, click to select the 'Location Information' menu.

1. Scratch the switch to switch the positioning function on or off.
- 2, click on the 'mode', you can choose the positioning method.

Security settings

Click the 'Settings' icon to enter the settings list interface, click to select the 'Security' menu.

- 1, screen lock mode: you can select the slide, pattern, PIN code, password screen lock mode.
- 2、Unknown sources: Flip the switch to set whether to allow the installation of local applications.

Languages and input methods

Click the 'Settings' icon to enter the settings list interface, click to select the 'Language and Input Method' menu.

- 1、Language: can switch the system language.
- 2、Input Method: You can set the default input method of the system, as well as the function settings of each input method.

account management

Click the 'Settings' icon to enter the settings list interface, click to select the 'Account Management' menu.

- 1, add account: you can add the account of the application in the system.
- 2, the existing account can be synchronised data and other management functions.

Restore Factory Settings

- 1, click the 'Settings' icon to enter the Settings list interface, click to select the 'Backup and Reset' menu, select 'Restore Factory Settings'.
- 2, Restoring factory settings will clear all user data (programme, local information, etc.), please pay attention to backup.

Date and time

Click the 'Settings' function icon to enter the Settings list interface, click to select the 'Date and Time' menu.

- 1, automatically determine the date and time: scratch open function, can achieve the system in the state of connecting to the network, automatically synchronise the date and time. Scratch off function, can realise the manual setting of date and time;.
- 2, automatically determine the time zone: scratch the on function, can achieve the system in the state of connecting to the network, automatic synchronisation of the time zone. Swipe off function to set the time zone manually.
- 3, using the 24-hour format: scratch to open the function, you can realise the time using the 24-hour system way to display.

USB OTG function

The USB OTG function can support the connection between this product and other mobile devices (USB stick, 3G Internet card, mouse, keyboard, etc.) for data exchange.

- 1, Using the USB OTG function, you must connect your mobile device to this product through the OTG cable.
- 2, the use of USB OTG function, the product's battery power must be maintained at more than 50%; high-power mobile device connection to use an independent power supply unit.



FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.