

XIWOA

U16 colorful Karaoke Speaker

Manual

Pls read the manual careful before use

 


Packing list

Main speaker
Type c charging line

Microphone
bag

WARNING This product is not sold with a power adapter. If consumers use a power adapter for power supply, they should purchase a matching power adapter that has obtained CCC certification and meets standard requirements. The output specifications of the adapter should comply with DC5V2A



Main

- 1.Aux-in
- 3.TF
- 5.Long press for including voice, short press for previous song
- 7.Long press for including voice, short press for next song
- 2.DC 5V charging
- 4.Long press 3s for Power on/Power off
- 6.short press for pause/playing
- 8.short press for change the model

Manual for bluetooth

- 1.open phone , the normal model is bluetooth, and the blue led flash for waiting pair
- 2.Open the phone, enter the mobile device menu option, find the Bluetooth function option and click " searching" , waiting until the product model is found and connected
- 3.Led model Two press the "M" button

Line In

Use 3.5mm line to connect speaker and player , then the speaker can change to the line in model

Led for charging

when charging, the red light on, the light is off when the speaker full charged

TF Model

When insert the TF/SD card in, the speaker can change to TF model and play the song which in the card

Parameter

model	U16 colorful Karaoke speaker
Bluetooth	JL 5.3
Power	5W
size of speaker	52mm
Distance for bluetooth	10m
battery	1200mAh
play time	3-4H
charging time	1-2H
Line in	5V-1A
size of main	L96*W96*H81mm
weight	410g

Instruction for wireless microphone


long press the power button, the speaker and wireless can pair auto successful. Then long press the power button the wireless microphone power off

Health maintenance

- Do not use any type of detergent or cleaning agent to clean the product, as any type of chemical may render this device unusable.
- Do not disassemble the product as it does not contain user repairable parts.
- Do not drop or step on the speaker
- Please keep this speaker in a dry place. Dust, dirt, and moisture can cause damage to the speaker. Do not place this product in a fire or the battery may explode or leak

Microphone Instructions

Tap and hold	Opwer-off
Short press	Mode/Reverberation/ Accompaniment/ Microphone adjustment
Short press	Mode/Reverberation/ Accompaniment/ Microphone Gradually increase the volume
Short press	Mode/Reverberation/ Accompaniment/ Microphone Gradually increase the volume
Short press	Sound effect mode/Girl to boy/ Boy to Girl/Doll sound/Magic sound
Double-click	Original/elimination sound

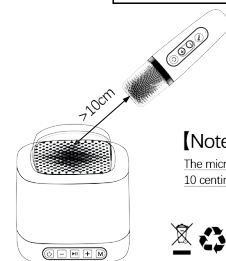

[Note:]

The microphone should not be within 10 centimeters of the speaker to avoid noise.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates , uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.