

Manual

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Getting Started

1. Check For Updates

To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPad OS, or macOS is recommended.

2. Power On

Press your locator's function button once to turn on, it should beep once indicating it is powered on.




3.Add Your Item Locator

3.1 Start the APP

Open Find My APP on your supported iPhone or iPad.

3.2 Connect your Item Locator


Step1. Select the "Items" tab then Tap the "Add Item" tab. +symbol (Figure 1)

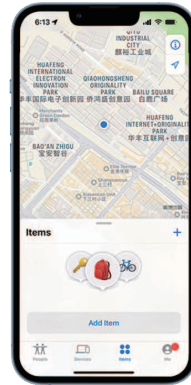

Step2. Tap "Other Supported Items".




Step3. Make sure your Item Locator is close to your phone. Wait... until you see "Wireless locator", then tap "Connect". Follow the pop-up to fill name and select an emoji; then tap "Continue". There will be a request to add your Item Locator to your ID, then tap "Continue". Tap "Finish" and your Item Locator will be set up.

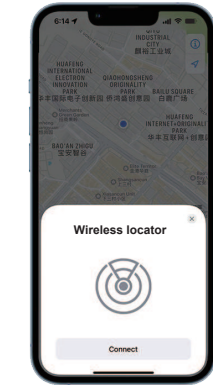

5.Function Introduction


Locate your Item

- Find Item Locator
- Tap "Play Sound" to make your Item Locator beep when it is nearby.
- Find your Item Locator's location
- Your Item Locator's last known location will appear on the map as emoji you choose during set up, tap "Directions" to navigate to the last known location.

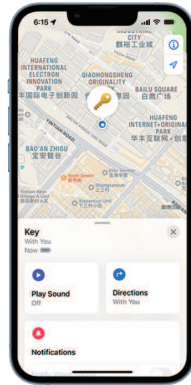



Find Item When Out of Range

- Enable the "Notify When Left Behind" toggle, you will receive a notification when you leave your Item Locator behind and it is no longer in range of your device.
- Enable the "Notify when Found" toggle, when your Item location is seen by another Find My enabled device, you will receive a notification of its updated location.
- Note: "Notify When Found" can only be activated when your Item Locator is out of range.

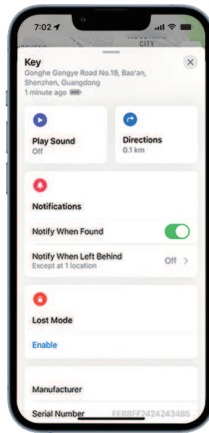

When Your Item is Lost

- When Your Item is Lost Under "Lost Mode", tap the "Enable" tab, a screen detailing Lost Mode will pop up, tap "Continue". You can enter your phone number or email address and tap "Next". You may enter a message that will be shared with the person that finds your item. Tap "Activate" to enable "Lost Mode".
- Note: When "Lost Mode" is enabled, "Notification When Found" is automatically enabled.
- Note: When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device.

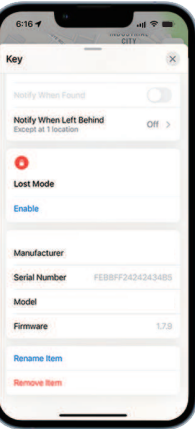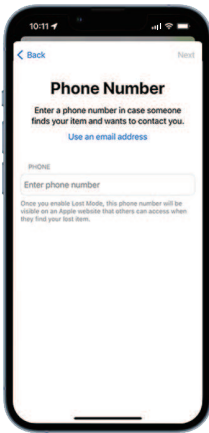

Remove your Item Locator

- Ensure "Lost Mode" is disabled, tap "Remove Item" tab, a summary will open, tap "Remove" to confirm.

Reset your Item Locator

- After successfully removing the Item Locator from the APP, press the Item Locator's function button four times rapidly, and then hold it a fifth time until you hear a ringing chime, the Item Locator is now reset and ready to pair to a new device.

How to replace the Battery:

- Use your fingernails at the small gap on the side of your Item Locator to carefully open the case.
- Replace the battery with a new CR2032 battery 3V. (Positive pole upward).
- Carefully close the Item Locator.




Unwanted Tracking Detection:

If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Item Locator is not connected to its owner's phone, so your partner's Item Locator will not trigger a sound if they are with you.

Button function

1.Power on (Findmy function is on). Press the function button once to turn it on. it should a ringing chime indicating it is powered on.

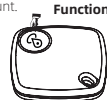

If the product is not paired, it will be closed within 10 minutes. You need to trigger the findmy function again to continue pairing.

2.Power off (Findmy function is off).

Hold the function button for three seconds, then release it.. you will hear two beeps indicating it is powered off.

3.Enable learn more information query. Press the function button two times rapidly and you will hear a confirmation sound, This operation will be displayed on the findmy app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device.

4.Restore factory settings (reset the device locally and restore it to pairing status)

Press the function button four times rapidly and then hold it a fifth time until you hear a ringing chime. A reset operation is required to enable the device to enter the pairing state again (synchronization of Findmy also requires simultaneous unbinding) and rebind the new Apple Id account.

Important tips:

- When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended: 1. Change the phone's network, such as switching between WiFi and mobile. The first pairing may take a long time, please wait patiently. 2. Reset your item. 3.Repair with Findmy APP.
- When "Lost Mode" is enable, DO NOT REMOVE ITEM in the APP. Your Item Locator will be locked and cannot be paired to a new device.
- The battery usage time varies depending on personal usage habits. Frequent use of the call function can accelerate battery consumption.


WARNING

- Remove and Immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate.

Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

6. The compatible battery type is CR2032.

- The nominal battery voltage: DC 3V
- Ensure the batteries are installed correctly according to polarity(+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

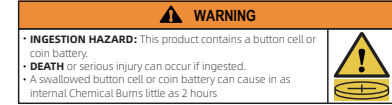

Battery type: CR2032. Battery voltage: 3V. Keep in original package until ready to use; Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash.



Remarks

New function: Share items. The people you've shared it with will be able to locate it, and they won't receive unidentified-tracking notifications. To use Share Items, make sure you and your friends have installed the iOS 17, iPadOS 17, or macOS 14 Sonoma public betas or newer.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



使用说明

操作说明

1. 检查更新

要使用Apple Find My应用程序查找物品定位器，建议使用最新版本的iOS、iPad OS或macOS。

2. 开机

按一下定位器的功能按键即可开机–听到蜂鸣声后，表示已开机。



3. 添加设备

3.1 打开查找APP

在支持的iPhone或iPad上打开“查找”应用程序。

3.2 连接您的定位器

步骤1.按照图示点击“物品”图标，然后点击“添加物品”。或者右上角的“+”（视图1）



步骤2.点击“其他支持的物品”。



步骤3. 确保您的定位器靠近手机，然后等待系统配对，当您在系统弹窗看到“Wireless locator”的时候，点击下面的“连接”按钮，根据弹窗提示填写设备名字和选择设备图标，然后点击“继续”，最后点击“完成”，您的定位器就设定好了。



4. 产品功能介绍

寻找物品

- 查找物品定位器：点击“播放声音”，让您的物品定位器在附近时发出声音。
- 找到您的物品定位器的位置：您的物品定位器的最后一个已知位置将作为您在设置过程中选择的表情符号出现在地图上，点击“路线”导航到最后一个已知位置。



超出范围时查找物品

- 开启“遗落时通知”按钮，当您物品定位器遗落，并且它不再在您的设备范围内时，您将收到通知。
- 开启“找到时通知”切换按钮，当您的物品定位器被另一个启用“查找”的设备看到时，您将收到其更新位置的通知。

注意：“找到时通知”只能在您的物品定位器超出范围时激活。



共享此物品

- 共享此物品的所有人都可以在寻找App中定位物品的实时位置。
- 共享此物品的人都不会在此物品靠近身边时收到陌生通知。

注意：使用该功能，请务必确保你和想共享的对象的iPhone都已经更新到iOS 17或后续新版本。



当您的物品丢失时

- 在“丢失模式”下，点击“启用”，将弹出一个详细说明丢失模式的弹窗，选项卡“继续”。您可以输入您的电话号码或电子邮件地址，然后点击“下一步”。
- 您可以输入将与找到您的人共享的消息。
- 点击“启用”以启用“丢失模式”
- 注意：启用“丢失模式”时，会自动启用“找到时通知”。

注意：启用“丢失模式”后，您的物品定位器将被锁定，无法与新设备配对。



删除并重置您的物品定位器

- 确保“丢失模式”已禁用，点击“移除物品”选项卡，将打开摘要，点击“删除”进行确认。
- 成功从APP中移除物品定位器后，快速按下物品定位器的功能键四次，然后按住第五次直到听到铃声。
- 物品定位器现在已重置并准备好与新设备配对。

如何更换电池：

- 用指甲在物品定位器侧面的小缝隙处小心地打开外壳。
- 用新的CR2032 3V电池更换电池（正极向上）。
- 小心合上物品定位器外壳。



如何防止设备被用于恶意跟踪？

当别人的设备混入您的随身物品时，并跟踪超过一段时间，您会通过以下两种方式被提醒：

- 1、如果您有iPhone，iPad，或者iPod touch等苹果设备，您会在苹果设备上获得提醒；此功能在iOS或iPadOS 14.5 及以后版本的苹果设备上。
- 2、如果您没有苹果设备，如果别人的iTag离开了自己的主人，并跟踪了您一段时间，当它移动时，它会发出音乐，提醒您。当然，如

果碰巧您身边的朋友正带着设备，或者您搭乘的地铁上很多人都有这个设备，也不必担心。因为只要设备没离开主人身边，就不会触发这样的提醒。

按钮功能

- 1.开机（Findmy功能打开）。按下功能按钮一次即可开机，此时会响起一声铃声，表明其已开机。如果产品未配对，将在10分钟内自动关机。
- 2.关闭电源（Findmy功能关闭）。按住设备功能按钮三秒后松开，您会听到两声蜂鸣声，表示它已关闭。
- 3.启用了解更多信息查询。快速按下功能按钮两次，您将听到确认声，此操作将显示在findmy应用程序上，以指导获取设备的人获取设备信息，例如所有者的联系信息（如果应用程序上的物品设置为丢失模式）和设备的序列号。
- 4.恢复出厂设置（在本地重置设备并将其恢复到配对状态）快速按下功能按钮四次，然后按住第五次，直到听到铃声表示设备已经恢复出厂设置。需要恢复出厂设置才能使设备再次进入配对状态（同步Findmy也需要同时解除绑定）并重新绑定新的Apple Id帐户。

功能按键



重要提示：

- 1.将设备与“查找”APP配对时，手机将链接到苹果服务器。由于网络问题，配对可能失败。建议采取以下操作：a 更改手机网络，例如在WiFi和移动设备之间切换。第一次配对可能需要很长时间，请耐心等待。b、对设备恢复出厂设置。c、与查找APP重新配对。
- 2.当启用“丢失模式”时，不要删除应用程序中的物品，否则设备永远被锁定无法使用。
- 3.电池使用时间因个人使用习惯不同而不同，频繁的使用呼叫功能会加速电池的消耗。

监管安全信息

警告：务必将电池放在儿童接触不到的地方，由于化学灼伤和潜

