

Works with
Apple Find My

Open Tag Pro
使用说明书

I.产品规格

型号:MPC2401
版本型号:1.7.0
兼容性:需装有 iOS 14.5 或 iPadOS 14.5 及之后版本, 并已启用双重认证的 iPhone、iPad 或 iPad touch
电池容量:220mAh
材质:铝合金、玻璃、PC
尺寸:88 X 57 X 3.7mm
重量:22g (±2g)

包装内容

1.可定位卡片保护套
2.使用说明书和保修证

II. 产品使用指南

1.确保您的设备装有 iOS 14.5 或 iPadOS 14.5 及之后版本, 且已启用双重认证的 iPhone、iPad 或 iPad touch。
2.打开 Apple 设备的蓝牙功能,依次点击【设置】->【隐私与安全性】, 开启【定位服务】。接着向下滑动界面, 点击【查找】, 允许使用位置并开启【精确位置】。
3.在桌面打开【查找 APP】, 点击界面下方的【物品】选项。
4.进入【物品】页面后, 点击【+】, 再选择【添加其他物品】。
按下卡片上的【开关】按钮, 待设备找到物品后, 点击【连接】, 随后按照系统指示操作, 直至添加成功。

* 如果出现搜索不到本产品的情况, 请短按复位按钮唤醒产品, 产品发出提示音后, 可继续进行连接操作。

III. 开启【丢失模式】

1.当卡片丢失且离开主机达到一定距离, 若想将物品标记为丢失状态, 需要开启丢失模式。
2.打开【查找 APP】, 点击屏幕底部的【物品】, 在列表中点击丢失物品的名称。
3.在【丢失物品】相关界面下方, 点击【显示联系信息】, 填入您的联系方式或电子邮箱, 方便第三方捡到物品后与您取得联系。

* 请预先确认已允许【查找 APP】发送通知, 以免错过重要信息。

IV. 防止擅自追踪

1.当任何定位设备以及其他【查找】网络配件产品离开【查找】应用程序后, 会向您的 Apple 设备发送通知, 同时能够记录您移动的行走路径及时间。
2.这些功能是专门设置的, 目的是防止他人在您不知情的情况下对您进行追踪。一旦您感到安全受到威胁, 请及时联系当地执法人员。

* 本产品具备防止他人擅自追踪的功能, 用户不应将其用于追踪他人, 也不能用于追踪不属于自己的财物, 在全球众多国家和地区, 未经他人同意使用此类产品追踪他人属于犯罪行为。

V. 产品充电 (仅支持无线充电)

1.产品卡片正面印有无线充电标识。
2.将印有无线充电标识的一面朝向无线充电器放置。
3.手动调整位置, 寻找合适的充电点, 当正充电时, 卡片上的充电指示灯会亮起。
4.本产品适用于 5W - 15W 的无线充电器, 要求充电器表面平整, 且充电时需与卡片充电区域完全贴合。

VI. 关于电池

本产品的电池无法拆卸或更换, 因正常使用导致的电池磨损、损坏不在保修范围内。

VII. 注意事项

警告!

1.严禁自行拆开或改装本产品, 以免损坏产品或造成安全隐患。
2.请勿将本产品存放在潮湿环境中, 防止内部元件受潮损坏。
3.不要将产品靠近热源, 也不要热源附近进行充电, 避免影响产品性能和使用寿命。
4.切勿让水或其它液体流入本产品接口内部, 否则可能导致产品损坏。
5.避免产品受到阳光直接照射, 防止外壳老化及内部元件受损。
6.使用或充电期间, 避免长时间运行高耗能的程序, 防止设备过热。
7.请在通风良好的地方使用本产品, 利于散热。
若产品出现过热现象, 请立即停止使用, 待冷却后再尝试操作。

VIII. 如何处理废弃电子产品

1.请勿将本产品当作家庭废弃物随意丢弃。
2.请依照当地的法规规定妥善处理废弃的电子产品。
鼓励您积极参与电子产品回收计划, 共同为环保贡献力量。

IX. 保修条款

1.自购买日期起 6 个月内, 若产品出现损坏或故障, 经本公司技术人员确认是在正常使用情况下发生的, 本公司将提供免费维修服务。
2.维修时必须出示本保修证及购买时的订单编号, 若用户无法提供, 本公司有权不提供维修服务, 用户可能需自行承担相关维修费用。
3.保修期内, 出现以下情况时, 产品保修证自动失效:
• 非本公司人员擅自拆解或维修产品的任何部分。
• 错误操作, 如非法接驳电源, 或者水、污秽物渗入产品内部导致产品损坏。
• 因不可抗拒意外事件或自然灾害导致产品损坏。

4.若此保修证被涂改, 保用证自动失效。
5.本公司有权删除任何维修及保修条款, 恕不另行通知。
6.如因错误使用本公司产品而导致手机电话或其他电子产品损坏, 本公司不承担任何任何责任。
7.关于原装产品与您的手机或其他电子产品的兼容性, 请在购买时向经销商确认。此产品规格可能随时变更, 不再另行通告。

FCCE

Works with
Apple Find My

Open Tag Pro
Instruction Manual

I.Product Specifications

Model: MPC2401
Version Model: 1.7.0
Compatibility: Requires iPhone, iPad, or iPad touch with iOS 14.5 or iPadOS 14.5 or later, and two-factor authentication enabled
Battery Capacity: 220mAh
Material: Aluminum alloy, glass, PC
Dimensions: 88 X 57 X 3.7mm
Weight: 22g (±2g)

Package Contents

1.Find My Card Cover
2.User Manual and Warranty Certificate

II. Product Usage Guide

1.Ensure that your device has iOS 14.5 or iPadOS 14.5 or later, and is an iPhone, iPad, or iPad touch with two-factor authentication enabled.
2.Turn on the Bluetooth function of your Apple device. Tap [Settings] - [Privacy & Security] in sequence, and turn on [Location Services]. Then scroll down the interface, tap [Find My], allow the use of location, and turn on [Precise Location].
3.Open the [Find My APP] on the desktop, and tap the [Items] option at the bottom of the interface.
4.After entering the [Items] page, tap [+], and then select [Add Other Item].
5.Press the [Switch] button on the card. After the device finds the item, tap [Connect], and then follow the system instructions until the addition is successful.

* If the product cannot be searched, briefly press the reset button to wake up the product. After the product emits a prompt tone, you can continue the connection operation.

III. Enable [Lost Mode]

1.When the card is lost and leaves the host for a certain distance, if you want to mark the item as lost, you need to enable the lost mode.
2.Open the [Find My APP], tap [Items] at the bottom of the screen, and tap the name of the lost item in the list.
3.Below the relevant interface of the [Lost Item], tap [Show Contact Information], and fill in your contact information or email address to facilitate contact with you if a third party finds the item.
* Please confirm in advance that you have allowed the [Find My APP] to send notifications to avoid missing important information.

IV. Prevent Unauthorized Tracking

1.When any positioning device and other [Find My] network accessory products leave the [Find My] application, a notification will be sent to your Apple device, and it can also record the walking path and time as you move.
2.These functions are specially set to prevent others from tracking you without your knowledge. Once you feel that your safety is threatened, please contact the local law enforcement officers in a timely manner.

This product has the function of preventing unauthorized tracking by others. Users should not use it to track others or track property that does not belong to them. In many countries and regions around the world, using such products to track others without their consent is a criminal act.

V. Product Charging (Only Supports Wireless Charging)

1.The front of the product card has a wireless charging logo.
2.Place the side with the wireless charging logo facing the wireless charger.
3.Manually adjust the position to find the appropriate charging point. When charging correctly, the charging indicator light on the card will light up.
4.This product is suitable for wireless chargers with a power of 5W - 15W. The charger surface is required to be flat, and it needs to be completely attached to the card's charging area during charging.

VI. About the Battery

The battery of this product cannot be disassembled or replaced.

Battery wear and damage caused by normal use are not covered by the warranty.

VII.Precautions

Warning!

1.It is strictly prohibited to disassemble or modify this product by yourself to avoid damaging the product or causing potential safety hazards.
2.Do not store this product in a humid environment to prevent internal components from being damaged by moisture.
3.Do not place the product near a heat source, and do not charge it near a heat source to avoid affecting the product's performance and service life.
4.Do not let water or other liquids flow into the interface of this product, otherwise it may cause damage to the product.
5.Avoid direct sunlight on the product to prevent the shell from aging and internal components from being damaged.
6.During use or charging, avoid running high-energy-consuming programs for a long time to prevent the device from overheating.
7.Please use this product in a well-ventilated place to facilitate heat dissipation.
8.If the product overheats, please stop using it immediately and try the operation again after it cools down.

VIII. How to Dispose of Waste Electronic Products

1.Do not discard this electronic product as household waste at will.
2.Please dispose of waste electronic products properly in accordance with local regulations.
3.Encourages you to actively participate in the electronic product recycling program and contribute to environmental protection together.

IX. Warranty Terms

1.Within 6 months from the date of purchase, if the product is damaged or malfunctioning, and it is confirmed by our company's technicians that it occurred under normal use, our company will provide free repair services.
2.When repairing, you must present this warranty certificate and the

order number at the time of purchase. If the user cannot provide them, our company has the right not to provide repair services, and the user may need to bear the relevant repair costs by himself/herself.
3.During the warranty period, the product warranty certificate will automatically become invalid in the following situations:
• Any part of the product is disassembled or repaired by non-company personnel without authorization.
• Incorrect operation, such as illegal connection of the power supply, or water or dirt seeping into the product, resulting in product damage.
• The product is damaged due to irresistible accidents or natural disasters.
4.If this warranty certificate is altered, the warranty will automatically become invalid.
5.Our company has the right to add or delete any repair and warranty terms without prior notice.
6.Our company will not be responsible for any damage to mobile phones or other electronic products caused by the incorrect use of our company's products.
7.Regarding the compatibility of the original product with your mobile phone or other electronic products, please confirm with the dealer at the time of purchase. The specifications of this product may change at any time without further notice.

FCCE

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.