

# MUSIC BOXING MAHCINE

## Instruction Manual

MBC-03



## Item List



music boxing machine



boxing gloves(red)



boxing gloves(black)



Velcro\*4



Usb Cable



Disassembly Line

## Position Indication



Speaker Location

Boxing Target

Running Light

Charging Port

Screen Display

Control Buttons

## Screen Indicators



### Intelligent scoring system

Automatically triggered after each song ends:

HIT RATE    LIGHTING    COACH LANGUAGE

≤50%	Red flash	"Wake up! Too slow!"
51%-80%	Orange flash	"Close! Keep going!"
81%-99%	Blue flash	"Almost perfect!"
100%	Green flash	"KO! Champion!"

### Track Selection Mode

After the song ends:



Upper target ▲ → Punch to play previous song  
Lower target ▼ → Punch to skip to next song  
(Not applicable in competition mode)

## Button Functions



### Volume Button

Press to cycle through 8 levels - increases until max, then loops.



### Target Toggle Button

Press to toggle between 6 & 8 targets



### Query Button

Press the button to toggle between: Sum Hits / Cal / Hit Rate%.



### Power Off State

- Single press: Displays battery level
- Long press (2s): Powers on (light flashes and then goes into standby mode)



### Power On State

- Single press: Starts boxing (or starts after hitting a mat)/Pauses
- Long press (2s): Powers off



### Mode Button

- ① Practice Mode: Train freely—no limits. Warm up or refine your technique.
- ② Competition Mode: Beat levels by hitting targets. Need 75%+ accuracy to advance.
- ③ Bluetooth Mode: Pair smartphone to play custom music. Bluetooth name: **music boxing** (Compliant with BluetoothV5.1+BR+EDR+BLE specification)



### Next Track

Press to skip to next track.



### Speed Button

Press to cycle through 8 levels - increases until fastest, then loops.

## Installation Steps

### STEP1


Choose a smooth and flat wall (make sure the wall is clean, dry and dust-free), stick the Velcro on the wall in the appropriate position, and fix it for five minutes (make sure to press it firmly with your hands).

### STEP2

Stick the velvet surface on the back of the boxing machine on the Velcro, and press the machine body hard to ensure full contact.

### NOTE

Too high or too low temperature may cause the viscosity to decrease, please extend the fixing time to ten minutes.

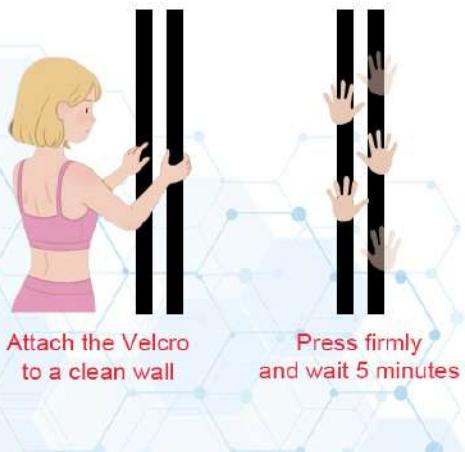

## Removal steps

### STEP1

Hold the disassembly wire tightly with your hands and straighten it, and raise both hands flat on the machine.

### STEP2


Slide the wire down repeatedly along the Velcro gap on the machine until it loosens.

### STEP3

Once loose, hold both sides of the machine and remove it.

### NOTE

When peeling off the Velcro, we recommend using 530 cleaner or rubbing alcohol to soften the adhesive first. Avoid excessive force to prevent wall damage.

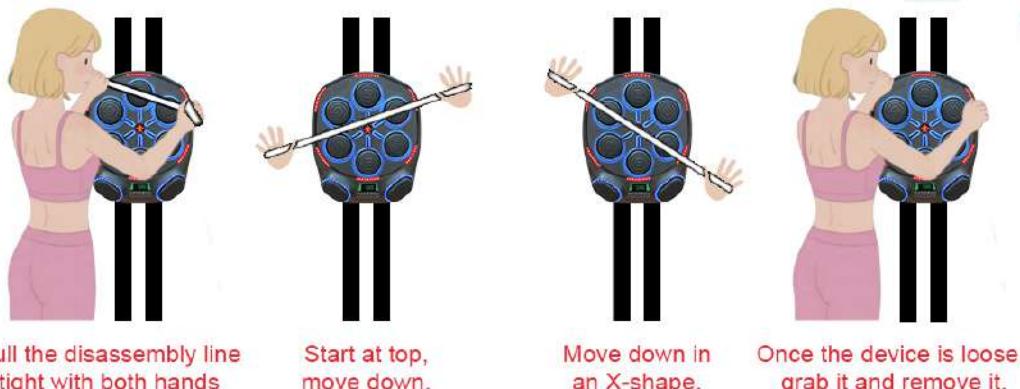

## Customer Service



### 2-YEAR WARRANTY

2-year replacement warranty - Scan QR to add us on WhatsApp for FREE 3-year coverage.



### 30-DAY FREE RETURNS

Free returns within 30 days for any reason - full refund with no questions asked.



### 24/7 ONLINE SUPPORT

For any product issues, Contact us anytime via email or WhatsApp for immediate assistance.

✉ [lluzhouchengmeng@outlook.com](mailto:lluzhouchengmeng@outlook.com)

## Product Information

### BRAND

YIFENGOX

### PRODUCT NAME

Music Boxing Machine

### MODEL

MBC-03

### COLOR

Black

### DIMENSIONS

24.29"×20.35"×4.61"

### WEIGHT

9.17 lb

### MATERIAL

ABS+PC

### TARGET COUNT

8

### BATTERY CAPACITY

5000mAh

### BATTERY LIFE

8h

### AGE RANGE

12+

# Conformity Certificate



This product is certified to comply with the ISO 9001 International Quality Management System Standard

**Product Name:** Music Boxing Machine

**Inspector :** \_\_\_\_\_

QC  
PASS  
01

**Prod.Date :** \_\_\_\_\_

This product has passed inspection and is approved for release.

# Troubleshooting

NO.	Symptoms	Cause Analysis	Method of exclusion
1	No lights and no sound	The product is not powered on	Short press the switch
2	No lights and no sound	Battery drain	Charge
3	Lights flicker	Low battery	Charge
4	Short press the switch can not turn on	The main chip capacitor is short or power due to long-term non-startup	Repeatedly short press the switch
5	Banging sound inside the device	Issued by the internal active stress structure	Normal phenomenon

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.