# **EVO 7**

**User Manual - ENGLISH** 

# Welcome

Thank you for choosing **EVO 7**. The machine with the advocacy of Google Android 2.2 platform supports two major EVDO WCMDA and 3G wireless networks, in addition to cell phone message, voice calls, multimedia message, video playback, camera, bluetooth and WI-FI. Android platform provides Android Market where you can download thousands of widgets. This tablet tries the utmost to help you at work, study and your life.

## Safety Instructions

Please read the simplified rules. Not observing the rules could be dangerous or/and can violate the law. This user manual provides relevant security concerns with more detailed information.

|             | Please do not use the device while driving  |
|-------------|---|
|             | All wireless devices are subject to interference and influence the performance.   |
| <b></b>     | Inside hospital the device should be switched off. Please observe the limits of any relevant provisions of the medical equipment. |
| $\triangle$ | In the plane should be switched off. Please observe the relevant provisions of any restrictions.                                  |
|             | Please switch off the device inside the gas station. Don't use this device near fuels or chemicals.                               |
|             | The device should be shut down near a blasting site. Please observe the relevant provisions of any                                |

|              | restrictions.  |
|--------------|--|
| <b>(</b>     | Use qualified service only by qualified service                      |
|              | personnel to repair/install/fix this equipment.                      |
|              | Only use the approved accessories and battery. Please                |
|              | do not connect with the others products.                             |
| •••          | For water resistance: This equipment is not watertight.              |
|              | Please keep the dry.   |
|              | Making backup device: Keep stored all the necessary                  |
|              | informations for making backup or keep a copy of the written record. |
|              | To connect with other equipment: Please read the                     |
|              | device user guide for the safety instructions. Please                |
|              | don't connect the product if it is not supporting.                   |
| <b>C</b> sos | Emergency call: Enter the emergency number and then                  |
|              | click talk to inform your present position. Please don't             |
|              | hang up without permission.  |
|              |  |

# **Contents**

| 1.0 Your device  | 4  |
|--|----|
| 1.1 Install/Remove USIM/SIM/UIM card and MicroSD card. | 5  |
| 1.2 For charging battery                               | 5  |
| 1.3 Start the equipment                                | 6  |
| 1.4 Home Page of the Device                            | 6  |
| 1.5 Transferring files to MicroSD card (Memory Card)   | 7  |
| 1.6 To make a phone call                               | 7  |
| 1.7 Contact  | 9  |
| 1.8 To send a message                                  | 10 |
| 1.9 Browser  | 11 |
| 2.0 Set an E-mail account                              | 13 |
| 2.1 Sending and Receiving e-mail                       | 13 |
| 2.2 Login Gmail  | 14 |
| 2.3 Market   | 15 |
| 2.4 Using Camera and Video cam                         | 15 |
| 2.5 Multi-media File Management                        | 17 |
| 2.6 Music Playback                                     | 18 |
| 2.7 Sound Recorder                                     | 19 |
| 2.8 Wi-Fi  | 19 |
| 2.9 Bluetooth  | 20 |
| 3.0 Mobile Network                                     | 21 |
| 3.1 Sound and Display                                  | 22 |
| 3.2 Other Settings                                     | 22 |
| 3.3Calculator  | 23 |
| 3.4 GPS  | 24 |
| 3.5 Google Map   | 24 |

# 1.0 Your device

# Front panel:



# Rear panel:



#### Side panel:



## 1.1 Install/Remove USIM/SIM/UIM card and MicroSD card

- To install place the metal contacts facing down, carefully slide the USIM/SIM/UIM card and MicroSD card into the slot and push gently until it clicks into place.
- To remove gently press down on the USIM/SIM/UIM card and MicroSD card so that it pops out from the slot, and carefully pull the card out.

Note: Please do not take the USIM/SIM/UIM card and MicroSD card out from the equipment suddenly while still in use as it may cause data loss or cause the system to shutdown.

# 1.2 For charging battery

- An USB Charger (USB cable plus charging head) is provided with the device for charging the battery.
- 2. Please connect an USB charger to the device's charging port.
- 3. Use approved charger only. Using other equipments may void your warrantee and also damage your device.

Note: You can connect to a computer using the USB cable provided for also recharging batteries but the charging effect will be lower.

#### 1.3 Start the equipment

Start device: Please press and hold the Power button. When you
feel the vibration prompt release power button.

Note: When you first start the device, it will prompt you to verify the screen. You only need five touches with your finger in a specified position, that will complete the calibration.

#### 2. Shut down device:

- Press a power button several seconds;
- From the options menu choose Power off
- A screen prompts you to verify. Select OK to shutdown or CANCEL to stop the shutting down process. If you select OK the screen will become dark and the mobile phone will shut down.

Note: To restart put a pin inside the small hole.

# 1.4 Home Page of the Device

As the following figure shows:



- To open applications, press on the label ... 1.
- 1. Press the **Home Key** to display the Home screen.
- 2. Press the **return key** to return to the previous screen or step.

Note: Press and hold a widget on the home screen to move it.

#### 1.5 Transferring files to MicroSD card (Memory Card)

- To transfer files from the computer memory cards, connect the 1. device to your computer via an USB cable. The status column will display USB connected
- 2. Press on USB connected and then press Turn on USB storage
- 3. Then press **OK** to connect to computer.
- 4. To disconnect from the computer press Turn off USB storage

#### Note:

- While on USB storage, some applications will stop and may not be available until you turn off USB storage.
- When connected to computer DO NOT unplug the USB cable without first turning off USB storage. It may cause your device harm.

## 1.6 To make a phone call

From the home screen press . 1.





2. Dial the number.

#### Note:

To call a contact, select the name from the contacts list.



- When received a telephone call, the device will display the name, number and contact information on it, and also according to cell phone set bell prompt and vibration prompt.
- If the call numbers are not stored in the contacts list, you will only see the call number and the default portrait icon.

#### 1.7 Contact

To make new contacts:

Press **contacts** and then press .

- 1. Press new contacts.
- 2. Enter the name, phone number, email address and a picture.
- 3. Click **done** to store contacts, or click **Revert** to withdraw.



## Import the contact.

- 1. Press contacts and then press
- 2. Enter Import/Export and then press your desired option.
- Press Import from SD card then vcard file will automatically import all contacts.
- Press Import from SIM/USIM card to import all contact information from your sim.

#### Search contact:

- 1. Press contacts and then press .
- Press Search icon and input the contact name. Similar contact names will be shown below.

Note: After finding the contact, click on the contact. You can call the number or email.

## 1.8 To send a message

From the menu, press **messaging** > **new message**, As the following figure shows:



# File message (message)

- 1. Press the **To** field to input contact information.
- You can enter a name, phone number or email address, matching contacts appear on screen. Touch a contact to add it.

- 3. Click to open contact search screen and click any number to add to recipient bar. Please use commas between each recipient.
- Click Compose to start composing message. After your text exceeds a certain amount, a counter will appear at the top right corner indicating words and text limitation countdown.
- 5. After you finish typing, click **Send.**

# Establishing and sending multi-media MMS

- 1. On message screen click **New message** to start composing.
- Insert recipient number or e-mail on the To\_\_\_bar.
   Matching contacts will appear under the bar for you to
   select. Click to open contact search screen and click any number or e-mail address to add to recipient bar. Please use commas between each contact.
- Click Compose to start composing message.
- Click Menu→Attach.
- Select from the attachment list: Pictures, Videos, Audio/Music, Slideshow.
- 6. Click Send after you finish composing the multi-media MMS.

Note: The maximum content of MMS depends on your operator. You might be unable to send or receive messages exceeding a certain limitation.

# 1.9 Browser Open the browser

1. Click on the **Browser** shortcut on the home screen.



- 2. Click on link bar to insert a web link
- 3. Click ⇒ .

Tip: press Menu for more functions.



#### **Quick Search**

You can use Google Search on main page to search information on the web.


- 1. Click Google Search tool.
- 2. Insert words you want to search in Google Search bar.
- 3. Click Q.

## 2.0 Set an E-mail account

- 1. Click →e-mail
- 2. Insert e-mail address and password.
- Click Next.
- 4. Insert Account Name and your name.
- Click Finish.

## 2.1 Sending and Receiving e-mail

#### Edit and send an e-mail

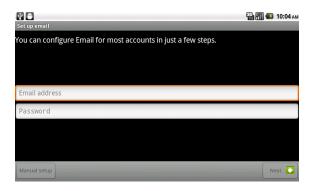

- 1. Click →e-mail and select an account
- 2. Click Menu→Compose.
- 3. Insert recipient e-mail on To bar.

- Insert Title.
- 5. Compose mail content.
- Click Send.

#### Add attachments

- Press Menu→ Add attachments
- Select a file to attach.

### Receiving an e-mail


When the device connects to network, the mailbox will automatically receive e-mail.

- On Homepage, click →e-mail and select an account.
- Press Menu→Refresh.

# 2.2 Login Gmail

- On Homepage, click Gmail, and insert account and password.
- Click Login.
- 3. Send and receive mail.

Note: If you do not have Gmail account, press Signup on the screen. Make sure the network is connected before you open Gmail.

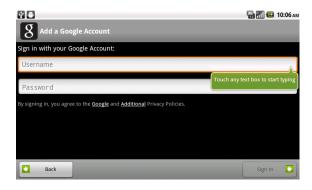

#### 2.3 Market

Click **Menu** tab → **Market**, if you have already logged in to Gmail, you will be automatically transferred to the market interface. If you did not, login or sign in following Gmail instruction. Please refer to related details in the Gmail section in the chapter.

Note: Please connect your device to 3G or WI-FI connection.

# **Download applications**

On market screen, browse applications that interest you, click them to download and install.

On Homepage, click 
→ Market.

# 2.4 Using Camera and Video cam

# Capture photos

- 2. Focus on your object with the lens
- 3. Click to capture.

Note: Please do not move the SD card immediately after taking the photo.



# Capture a video

- 1. Switch to video mode
- 2. Click 
  → Videocam
- 3. Focus on your object with the lens
- 4. Click to capture.
- 5. Click to stop

Note: Please do not move the SD card immediately after capturing the video.



2.5 Multi-media File Management View photos

- 1. Click → Gallery
- 2. Click a photo to view it on the screen.
- Slide the touch screen horizontally to switch forward and backward.
- Press Slideshow to demonstrate all pictures in the folder as a slide.
- 5. To share or edit pictures, click on Menu.

#### View Videos

Click → Gallery.

- Click on a video.
- 3. You can operate the following while watching the video.
- 4. Click to play backward/pause/forward.



# 2.6 Music Playback

# Open music player

- Click → Music application to enter music screen.
- Select music.

Note: Before you open music player, save audio files to SD card. To know more about storage card, please read chapter 1. Press and hold on a song to set as ringtone.

#### 2.7 Sound Recorder

- Click → Recorder application from the main menu.
- 2. Click to start recording.
- Click to stop.
- Two options will pop up after you stopped recording, click Save to save the audio file or Cancel.

Note: If you return to play the recorded audio, click to play.



#### 2.8 Wi-Fi

- 1. Open Wi-Fi
- 2. Click → Setting→Wireless & Networks

- Select Wi-Fi to turn on Wi-Fi function.
- Click Wi-Fi settings. Then the device displays all discovered Wi-Fi network names and security settings (open or locked).
- Click on one of the Wi-Fi network to connect. When you choose an open network, the device automatically connect the network. If you choose a locked one, security PIN is required before connection. Wi-Fi icon will appear when connected to network and display signal strength.



Note: When the battery is low, in order to protect data of the system,

# 2.9 Bluetooth Connect to Bluetooth

- 1. Click → Settings→Wireless & Networks
- Click Bluetooth to open it. The Device automatically scans discoverable Bluetooth devices and display Bluetooth icon on the status bar ( ).

- Click Bluetooth settings, and select a discovered device to match with.
- Enter matching code. When the devices are connected and matched, the status bar show a transferrable icon can start exchanging data.



Note: When the battery is low, in order to protect data of the system, Bluetooth might be unavailable.

#### 3.0 Mobile Network

- Press → Setting→Wireless Control→Mobile Network.
- Mobile Data Click to start connection. After 3G network icon appears ( ), you can start using network service.
- 3. Data roaming click to connect to data services while roaming.
- Network Mode mode priority.

  Select CDMA/EvDo or GSM/WCDMA as

- 5. GSM settings Set functions including Access Point Name, Use Only 2G Networks, and Network Operator, etc.
- CDMA settings Set functions including Access Point Name. etc.

Note: The device automatically selects network according to your personal identification card (USIM/SIM/UIM).

# 3.1 Sound and Display Set your ringtone

- 1. Click → Settings
- 2. Click Sound→ Phone Ringtone.
- 3. Select a ringtone and click OK.

## Screen brightness

- 1. Click → Settings
- 2. Click **Display**→**Brightness**
- Brightness control: drag the rolling bar to the left (-) or to the right (+).
- Click OK.

Note: You can also select auto brightness adjustment to adjust brightness according to the current condition.

# 3.2 Other Settings

#### Unmount Applications

You can only uninstall downloaded applications.

1. Click → Settings → Applications → Manage Applications

- 2. Click on the application you intend to uninstall.
- 3. On the information screen, click Uninstall.

#### Factory Data Reset

Factory data reset erases all downloaded applications and data on the device.

Note: Please make a backup for all important data before you reset the device.

- 1. Click →Settings.
- 2. Click SD card and device storage.
- Click Factory data reset → Reset the device, then click clear all contents.

## 3.3Calculator

- 1. Click → Calculator
- 2. Start calculation.



Advanced calculator panel

- Click → Calculator.
- 2. Then click Menu→ Advanced panel
- Return to calculator to start

# 3.4 GPS Launch GPS satellite

- Click 
  → Settings → Location and security settings.
- Click Use GPS Satellite settings to open GPS satellite navigation.
   The status bar will display GPS on ( ) and ( ) when there is signal.

Note: When the battery is low, in order to protect the system data from getting damaged, GPS function will be closed.

#### 3.5 Google Map

- 1. Click on Google Map to start the application.
- 2. You can use the following applications through Google map:
  - My Location Click to locate yourself.
  - Navigate Click Navigate. Enter your starting point and destination to start navigation.
  - Search Enter a desired destination and click OK to find the location of your target location.
  - Map Mode Select Map mode to choose among Street mode, satellite mode, or transportation mode.

Note: Please connect to internet before you open the map. Some countries and regions maybe unavailable on the map.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: EVO 7(FCC ID:A2CEVO7) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use on the body is 0.859W/kg.

This device was tested for typical body-worn operations with the back of the handset kept 0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.