

T285

User manual

Contents

| | |
|--|-----------|
| ROAD SAFETY | 6 |
| 1 About your Mobile Phone..... | 8 |
| 1.1 Appearance | 8 |
| 1.2 Key instructions | 9 |
| 1.3 Icons..... | 10 |
| 2 Getting started | 11 |
| 2.1 The Battery | 11 |
| 2.1.1 Install & remove a battery | 11 |
| 2.1.2 Charging | 12 |
| 2.2 SIM card installation..... | 13 |
| 2.3 Memory card installation | 14 |
| 2.4 Storage Management | 15 |
| 2.5 Power on and off | 16 |
| 3 Call functions | 16 |
| 3.1 Make a call..... | 16 |
| 3.1.1 Make domestic call..... | 17 |
| 3.1.2 Make extension call..... | 17 |
| 3.1.3 Make international call..... | 17 |
| 3.1.4 Make call from Phone book..... | 18 |
| 3.1.5 Redial call by recent call lists... | 18 |
| 3.2 Answer call | 18 |
| 3.3 Reject call | 18 |

| | | |
|----------|-----------------------------|-----------|
| 3.4 | Call options | 19 |
| 4 | Menu functions | 19 |
| 4.1 | Messages..... | 19 |
| 4.1.1 | Write message..... | 19 |
| 4.1.2 | Inbox..... | 20 |
| 4.1.3 | Drafts | 20 |
| 4.1.4 | Outbox..... | 20 |
| 4.1.5 | Sent message..... | 21 |
| 4.1.6 | Service messages | 21 |
| 4.1.7 | SMS setting | 21 |
| 4.1.8 | SMS Service | 22 |
| 4.2 | Multimedia..... | 22 |
| 4.2.1 | Camera | 22 |
| 4.2.2 | Image viewer | 22 |
| 4.2.3 | Video recorder..... | 23 |
| 4.2.4 | Video player | 23 |
| 4.2.5 | Audio player | 23 |
| 4.2.6 | Sound recorder..... | 24 |
| 4.2.7 | FM Radio..... | 25 |
| 4.2.8 | File manager | 26 |
| 4.3 | Organizer | 26 |
| 4.3.1 | STK | 26 |
| 4.3.2 | Calendar | 26 |

| | | |
|----------|---------------------------------|-----------|
| 4.3.3 | Alarm..... | 26 |
| 4.3.4 | Calculator..... | 27 |
| 4.4 | Settings | 27 |
| 4.4.1 | Display..... | 27 |
| 4.4.2 | Phone setting | 27 |
| 4.4.3 | Call settings..... | 28 |
| 4.4.4 | Network setting | 30 |
| 4.4.5 | Security Setting | 30 |
| 4.4.6 | Connectivity | 32 |
| 4.4.7 | Restore Factory settings | 33 |
| 4.5 | Phonebook | 34 |
| 4.5.1 | Contacts..... | 34 |
| 4.5.2 | Add new contact..... | 35 |
| 4.5.3 | Delete ALL Contacts | 35 |
| 4.5.4 | Copy All | 35 |
| 4.5.1 | Move All | 35 |
| 4.5.2 | Preferred Storage..... | 36 |
| 4.5.3 | Memory Status | 36 |
| 4.6 | User profiles..... | 36 |
| 4.7 | Call history..... | 36 |
| 4.8 | Fun & Game..... | 37 |
| 5 | Battery information..... | 37 |
| 6 | Safety information..... | 38 |

| | | |
|----------|--|-----------|
| 6.1 | Operating environment | 38 |
| 6.2 | Electronic devices | 39 |
| 6.2.1 | Pacemaker | 39 |
| 6.2.2 | Hearing aids | 40 |
| 6.2.3 | Other medical devices | 40 |
| 6.2.4 | Vehicles..... | 40 |
| 6.3 | Potentially dangerous situations | 41 |
| 7 | Care and maintenance | 41 |

Preface

Thank you very much for your choice of this product designed by our company!

Our Mobile Phone complies with the Telecommunication industries standards Europe.

The product described in this guide is approved for use on the GSM networks.

GSM network is a global cellular communications system of international standards.

Allow you to receive an international telephone call used as in your homeland.

However, before using these advanced network functions, you must firstly apply for these required services.

In order to better use your mobile phone, we suggest you to carefully read this statement to know all the functions well.

Note: Due to the cellular network settings and the services provided, some functions may be unavailable, please query local service providers.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

ROAD SAFETY

Always keep your hands free to operate the vehicle while driving. Park the vehicle before using your Mobile Phone.

SWITCH OFF IN AIRCRAFT

Using of wireless telephones in aircraft may disrupt the operation of the aircraft. It is dangerous and illegal. Insure switching off the Mobile Phone before going aboard.

SWITCH OFF IN HOSPITALS

Follow any restrictions or rules. Switch off the Mobile Phone near medical equipment.

SWITCH OFF WHEN REFUELING

Switch off the Mobile Phone at a refueling point or any fuel or chemicals

places.

SWITCH OFF NEAR BLASTING POINT

Don't use the Mobile Phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

INTERFERENCE

All wireless Mobile Phones may be susceptible to interference, which could affect the performance.

USE NORMALLY

Use in the normal position explained in the product documentation. Don't touch the antenna unnecessarily.

ENHANCEMENTS AND BATTERIES

Use only the approved enhancements and batteries. Do not connect incompatible products.

EMERGENCY CALLS

Ensure the Mobile Phone is switched on and in service. Enter the emergency number, and then press the  key. It will give your location. Do not end the call until the permission.

1 About your Mobile Phone

1.1 Appearance



Note :If the specifications subject to change without notice, product images only for reference purposes , so please see the subject produce.

| | | |
|----------------|----------------------------------|----------------------------|
| | Model | K2852 |
| | Size | 106.5*46.5*13.5mm |
| | Weight | 70g(battery included) |
| BATTERY | Type | Li-ion battery |
| | Standard Voltage | 3.7 V |
| | Restrictions on Charging voltage | 4.2 V |
| | Rated capacity | BL-5B (600mAh) |
| CHARGER | Model | K2852 |
| | Input | 100-240V |
| | Output | DC 5.0V |
| Earphone cable | Specification | 3.5mm stereo plug earphone |
| IO | Specification | Micro USB (5PIN) |

1.2 Key instructions

| Press... | To... |
|---|---|
|  | <ul style="list-style-type: none"> • Make a call. • Answer a call. • Access Dialed calls in standby mode. |
|  | <ul style="list-style-type: none"> • Power the phone on or off (by pressing and holding the key for about 3s). • End or reject a call. • Return to the standby mode. |

| Press... | To... |
|---|---|
|  | <ul style="list-style-type: none"> Press up to access the Audio player Press ok button to access Menu Press left to access the Write message Press right to access User profile |
| 0 ← 9 wxyz | <ul style="list-style-type: none"> Enter numbers, letters, and symbols. Speed-dial phone numbers in standby mode (by pressing and holding the desired key 2-9 for about 3s). Select a submenu item labeled with the corresponding number. |
| * + | <ul style="list-style-type: none"> Enter * (by pressing the key) or enter P (by pressing and holding the key) in standby mode. Display the symbol list in any input mode. |
| 1 # | <ul style="list-style-type: none"> Enter #. Switch the mode between the General and meeting mode (by pressing and holding the key for about 3s). Unlock the keypad lock Switch between input methods in text editing mode. |

1.3 Icons

Status Icons

| | |
|---|------------------------------------|
|  | Network Signal |
|  | Auto Keypad Lock |
|  | Alarm Clock is activated |
|  | New Message or Message Memory Full |

| | |
|--|---------|
|  | Ringing |
|--|---------|

2 Getting started

2.1 The Battery

The Li-ion battery can be charged and discharged hundreds of times. Please use the approved batteries, and only use the battery charger approved by the Mobile Phone producer to charge your battery.


2.1.1 Install & remove a battery

Remove:

- (1)Slide forward the bottom off the back cover to remove.
- (2) Lift the battery from its slot and take it out.

Install:

- (1) Place the battery into the battery slot.
- (2) Raise the back cover from the slot between battery cover and rear housing.

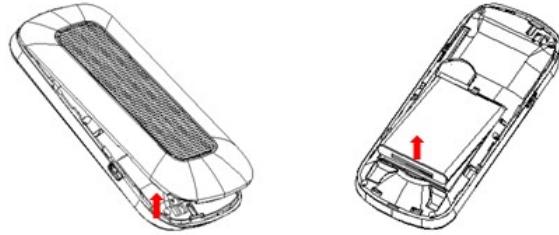

Warning:

- (1) **There may be the risk of explosion if the battery is replaced by the wrong type.**
- (2) **Dispose of used batteries according to the guidelines.**

2.1.2 Charging

To plug in the power charger, the charger cable plug at the bottom of the Mobile Phone

Note:

1. It is beneficial to the battery to charge it until full at the first three times.
2. When charging, don't remove or take out off the battery to avoid the

battery circuit to burn out.

3. While charging, it is normal that the Mobile Phone and charger will become hot.
4. If the battery is completely empty, it may take a period of time before the charging icon appears on the display.

Warning: Provides charging temperature range -5 °C to 55 °C, over this range, please do not use the charging equipment. And be sure to use the charger provided by the supplier. Use of an unapproved charger may be dangerous and breach of warranty of the equipment approval and terms.


Notice:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

2.2 SIM card installation

Turn off the Mobile Phone, and take out the battery.

Keep the gold color side of the SIM card downward, and slide it gently to the right place.

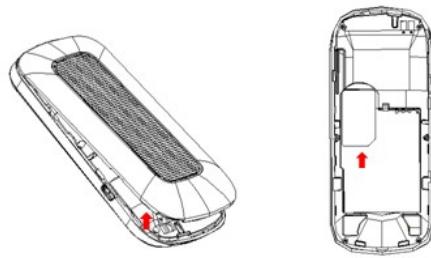


2.3 Memory card installation

Power off the Mobile Phone, and take out the battery or any other electrical supply.

Keep the golden color side of the Memory card downward, and push it gently to the right place.

Before take out off the memory card, be sure to Power off the Mobile Phone and remove the battery first.

Use the USB cable for connection to a PC to exchange data from or to the memory card in the Phone.

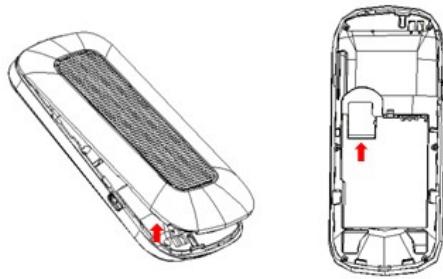

2.4 Storage Management

Manage the memory card storage space.

1. The computer and synchronize

Note: This Mobile Phone supports USB boot function; all operations are on the computer need to use the card reader.

You can enter after the discovery has a number of preset folders, for normal use, set the relevant documents were deposited with the corresponding directory, that is, which corresponds to MP3 folder My music, photos corresponding album Folder, corresponding folders, pictures corresponding Images folder. Sound recording, self-Tone Audio corresponding folder.

2. Format

If you format the memory card, all files saved in it will be lost. By two

ways you can format your Memory card:

Format by Mobile Phone: enter File Manager—>select Memory card
—>select Format.

Format by computer: Please complete the format work as following steps:

(1) Right-click "My Computer" and choose "management", after entering the option "store" -> "Disk Management";

(2) In the memory card on the disk where the right-click and choose "format";

2.5 Power on and off

Press and hold  key to turn on/off the Mobile Phone.

And if you have set PIN or Mobile Phone code, input it correctly.

3 Call functions

3.1 Make a call

When the network supplier's symbol appears when the display monitors, you might dial or answer the mobile phone. Under readiness for action, display monitor top left-hand corner information strip demonstration network signal strength (when has 4 information strip expressed signal is

strongest). After the user inserts SIM cards, may realize the double caliper also to wait for an opportunity.

3.1.1 Make domestic call

Enter the Mobile Phone number including the area code. Press  Key to make a call.

3.1.2 Make extension call

When making an extension call, press and hold ***** **+** to get “P” that is a prefix of extension numbers. It will dial automatically in several seconds since you dialed the mobile phone exchange.
viz.: area code—telephone exchange numbers—P—extension numbers, then press  key.

3.1.3 Make international call

Enter the country code, the area code and the Mobile Phone number, press  key to dial. “+” is needed when input country code. Dial to Hong Kong, Macao and Taiwan Mobile Phone ibid.

3.1.4 Make call from Phone book

Enter the telephone directory tabulation, the telephone number which the choice must dial, press call key to call directly from SIM you want.

3.1.5 Redial call by recent call lists

Press  key to find the SIM recent call lists or the recent call lists, scroll to the number or name, and then press  key to make call.

3.2 Answer call

An incoming call window will be displayed as the Mobile Phone receives a call. Press  key to answer it. If you missed a call, a missed call log will appear after you return to the start screen.

3.3 Reject call

You can press  key to reject an incoming call.

3.4 Call options

In the call, press left soft key "options" to enter the call option, there is OK to answer multi-functional conference needs to support the network, contact your network vendor.

4 Menu functions

4.1 Messages

4.1.1 Write message

Access this menu, user can select to write text message or multimedia message

Access Text Message menu to edit message, press "option" to do as following:

-Send

Select the number from the phonebook and send the text message to him

-Save

Save the message to draft

-Writing language

Change the input language.

4.1.2 Inbox

Access this menu to view the received short Messages. Enter it to read the received Messages. Press left soft key in view Text Message screen to do the following functions

-Reply

-Call Sender

-Forward

-Delete

-Delete All

- Save to Phonebook

- Filter by

-Mark several: User can mark some sms, then move/copy the marked one.

4.1.3 Drafts

Enter it to read the uncompleted short Messages and drafts.

4.1.4 Outbox

Access this menu to view the short messages that don't be sent

successfully.

4.1.5 Sent message

Access this menu to view the sent short Messages. Press left soft key to do forward or delete.

4.1.6 Service messages

Access submenu of service messages, user can view the received service messages. And user can choose whether receive the service message or not, under service messages setting.

4.1.7 SMS setting

User can check or set below operation:

- Memory status**
- Save messages**
- Preferred Storage**

Select to save in phone or SIM.

4.1.8 SMS Service

User can check the warranty period in this menu.

4.2 Multimedia

4.2.1 Camera

From the main menu, select **Multimedia> camera**.

Press left soft key to do the "options":

Press the direction key to take the photo.

Press UP on the direction key to enlarge the view

Press Down on the direction key to minify the view

Press Left/Right on the direction key to adjust the white balance.

Before taking picture ,press option to set the camera parameter:

camera settings, photos, image setting, switch camera, white balance, effect settings, scene mode, storage, restore default in order to carry out a more detailed set of parameters.

4.2.2 Image viewer

Select **Multimedia> image viewer**. You can easily view the album stored in the picture list. You may also choose to view pictures, browse style,

send, rename, delete, delete all files and switch Photo album in the store path.

4.2.3 Video recorder

Access the menu, the screen is in preview state. While preview, press “option” and do as following:

- Camcorder Settings: include Anti-flicker.
- Video Setting
- Video quality
- Storage: set the storage to phone or memory card.

4.2.4 Video player

From the main menu, select **Multimedia>Video player**, you can easily view the saved list of movies, and "options" to choose the video can play, send, rename, delete, and delete all the files, sort by, and storage location of the operation

4.2.5 Audio player

Select **Multimedia/Audio player** item in main menu to enter audio player interface. In playing interface, press “option” to do Play, Details, Add to

ringtones, Refresh List and Settings.

- To start playing, press ►, To pause the playing, press ▶
- To adjust the volume level, press up/down key on the direction key.
- To skip to the next song, press ►
- To skip to the previous song, press ◀

To close the audio player menu and to continue the playback in the background, press the red key on the phone.

4.2.6 Sound recorder

Access this menu, it will display the saved files in the list.

Press “option”, and the sub menu is:

- Record: to record.
- Play: begin to play the selected record file.
- Append: add record to the selected file which should be AMR file.
- Rename: rename the selected file.
- Delete: delete the selected file.
- Delete all files: delete all the record files in the list.
- Settings: set storage and format.
- Use: could be the currently selected audio file, use the User profiles.
- Send: Send the selected record file to MMS and Bluetooth.

4.2.7 FM Radio

The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.

To use the FM radio, do the following:

Connect a compatible headset to the phone.

Select **Menu > Multimedia > FM radio** to launch the FM radio.

On the FM radio screen, you can do as follows:

- Press left and right key on the direction key to change the channels.
- Press up and down key on the direction key to adjust frequency by 0.1 MHz.

Power on: Plug the earphone and power on the FM.

Tune: Store the channels

Channel list: it shows the number and name of the channel stored in the list.

Preset auto search: Search new channel automatically, and it will be stored in channel list.

Loudspeaker: Play the FM radio for loudspeaker.

Background play: Play the FM radio as background music.

4.2.8 File manager

It provides you the functions such as browsing files, checking storage space and formatting function.

4.3 Organizer

4.3.1 STK

This is an available of SIM card; please contact your operator to get more details.

4.3.2 Calendar

Select **Organizer/Calendar** item in main menu. Press the direction key to change the date, and the calendar shown on the screen will be changed accordingly.

4.3.3 Alarm

Set the alarm time and it will remind you by alert tone or vibration when the alarm time comes.

You can set 5 alarms in the Mobile Phone at most.

4.3.4 Calculator

You can carry on simple arithmetic in the cell-phone through this function, including adding, reducing, multiplication, division and percent operation, etc.

After entering the calculator interface, use the simulation keyboard input digit and operation incantation which you need, can receive the result of calculation according to the equal sign.

Note: This calculator accuracy is limited, will have a rounding error

4.4 Settings

4.4.1 Display

This can set up wallpaper and set whether show date& time or not.

4.4.2 Phone setting

- Time and date**

Set the home city, time and date, time and date's format

- Language**

Change the language of the Mobile Phone.

- **Shortcuts**

Set the shortcuts function for the dedicated key

- **Pref. input method**

Select preferred input method.

- **Flight mode**

Select normal or flight mode.

- **UART setting**

UART is abbreviation for Universal Asynchronous Receiver/Transmitter.

- **Mic. Setting**

Select LCD backlight

4.4.3 Call settings

4.4.3.1 SIM call settings

- **Call waiting**

If it is supported by your service provider, call waiting will notifies you of an incoming call even if you are in a call. You can then accept, reject, or ignore the incoming call. To make this function available, please contact local network provider.

- **Call divert**

Call diverting is a network services, it tells your network to divert incoming calls to another number to avoid missing a call.

The following is available: divert All Voice Calls, Divert If Unreachable, Divert If No Answer, Divert If Busy, and Cancel All Divert

- **Call barring**

- Outgoing calls

- Incoming calls

- Cancel all

- Change barring password

- **Line switching**

- You can switch between line 1 and line 2.

- Note: It depends on the service provider whether line 2 is available.

4.4.3.2 Advanced setting

- **Blacklist**

- Show and edit blacklist number to reject the number directly.

- **Auto redial**

- It can dial the same Mobile Phone number automatically after a failing dial with this function.

- **Call time reminder**

There will be a hint sound when the setting time passed during a call.

Off: turn off the function

Single: Input 1-3000(second) between the random numeral.

Periodic: Input 30-60(second) between the random numeral.

- **Auto quick end**

Set hang up the calling between 1-9999s

- **Connect notice**

- **Answer mode**

4.4.4 Network setting

- **Network selection**

- **Preferred Network**

4.4.5 Security Setting

4.4.5.1 SIM security

- SIM Lock

Set the Mobile Phone to ask for your PIN code each time you start your Mobile Phone (if this function is supported by your SIM card).

Note: After three consecutive incorrect PIN code entries, SIM will be blocked, and you need the PUK code to unblock it.

The PIN code and PUK code are usually supplied by the SIM card. If you don't get them, please contact with the supplier. The default PIN code is 1234 usually.

-Fixed Dial

If your SIM support fixed dial, it can limit you to call fixed number. When the function is on, it can only call the Phone numbers in the fixed dial number.

Note: it needs you to input PIN2 code to open or close this function. You can get the PIN2 code from service supplier. If the fixed dial is on, the Mobile Phonebook only show the number of fixed dial.

-Barred dial

- Change Password

You can change SIM PIN code password here.

Note: PIN code must be between 4 and 8 digits.

4.4.5.2 Private protection

Input the password (0000), to select make private protection for Phonebook/Messaging/Call history/Keypad

4.4.5.3 Phone security

- **Phone lock**

Set the Phone lock on or off.

Note: The default password is 1122, please as soon as possible its change as own establishment password.

- **Change password**

Input the Mobile phone lock password (1122), then enter the new password to change

4.4.5.4 Auto keypad lock

Select the time for auto keypad lock.

4.4.6 Connectivity

4.4.6.1 Bluetooth

- **Power**

Bluetooth options on and off.

- **Visibility**

Enter setup options, you can "Visibility (on and off), change device name,

authentication (on and off), audio path (leave in phone, forward to BT headset), FTP settings (shared folder, access right).

● **My device**

In your own device, select Bluetooth devices to enter the option, user can "connect, rename, delete, delete all, service list, Inquiry new device" such an operation.

● **Search audio devices**

According to determine started to search for Bluetooth-free devices, in the search process you can choose to have the search link Bluetooth devices operate, the search process on abolition stop the search.

● **Name**

Bluetooth devices revealed that the Device name, address Bluetooth devices, supported services and other information.

● **Advanced**

Connect with BT headset. User can select storage position under it.

4.4.7 Restore Factory settings

You can reset some of the Mobile Phone settings to their original values by input Mobile Phone lock password (1122).

4.5 Phonebook

You can store the information in phonebook like name, phone number etc.

The phone number can be stored in Mobile Phone or SIM card.

Press right soft key to enter phonebook in standby mode. Select a number, then you can use the SIM to play IP Dial, Send SMS, view, edit, delete.

4.5.1 Contacts

You can store the information in contacts like name, phone number etc.

The phone number can be stored in Phone memory or SIM card.

To do the options as follow:

View: View the contacts

Send text message: Send SMS to the contacts

Call: Make a call to the contacts

Edit: Edit the contacts

Delete: Delete the contacts

Copy: Copy the contacts to phone, SIM cards

Send business card

Add to Blacklist

Mark several: Mark the contacts then you can delete

Phonebook setting

4.5.2 Add new contact

Add a new record to Mobile Phone or SIM cards

If add a new record to Mobile Phone, you can input name, number, home number, company name, email address, office number, fax number and Birthday. Beside these, you can set items as following:

4.5.3 Delete ALL Contacts

-From SIM: Delete all the record from SIM card.

-From Mobile Phone: Delete all the record in Mobile Phone.

4.5.4 Copy All

-From SIM: Duplicates the SIM numbers to Mobile Phone.

-From Mobile Phone: Duplicates the Mobile Phone numbers to SIM card.

4.5.1 Move All

-From SIM: Move the SIM numbers to Mobile Phone.

-From Mobile Phone: Move the Mobile Phone numbers to SIM card.

4.5.2 Preferred Storage

Set the storage place for record. User can also set it while save the record.

4.5.3 Memory Status

User can query the memory capability and already used capability in phonebook of Mobile Phone or SIM card.

4.6 User profiles

User Profiles define how your Mobile Phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profile for your situation. The available modes are General, Silent, Meeting & Outdoor.

In standby mode, you can press and hold key # to switch between meeting mode and previous mode.

4.7 Call history

Select call center from main menu, you can view the information about

call history and the general call settings.

4.8 Fun & Game

There are “F1 race ” game in phone. Please refer to help option of the game for specific operation and instructions.

Game settings:

BGM: To turn on/off the game background music.

Sound effect: To turn on/off the sound effect.

Vibration: To turn on/off the vibration effect.

Volume: To set the game sound.

5 Battery information

Your device is powered by a rechargeable battery.

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, please buy a new battery.

Use only the approved batteries, and recharge your battery only with approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use.

Do not leave the battery connected to a charger. Overcharging may shorten

its lifetime.

If the phone is overused at low battery when charging, there might need a longer time for the charge indicator to be shown on the screen.

Warning

Do not drop, knock, or shake the device. Rough handling can shorten the life of the battery.

Do not make short-circuit occur to the battery.

The battery put in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.

Do not put the battery near flammable or explosive goods.

Do not dispose of batteries in a fire!

Never use any charger or battery that is damaged.

Use the battery only for its intended purpose.

Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

6 Safety information

6.1 Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may

cause interference or danger. Use the device only in its normal operating positions. Do not keep the device near credit cards and other magnetism medium, some accessories can bring magnetism that may be delete the data.

6.2 Electronic devices

Some electronic devices are not adequately shielded from external RF energy.

6.2.1 Pacemaker

Pacemaker manufacturers recommend that a minimum separation of 6in (20cm) should be maintained between a wireless Mobile Phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimize the potential interference, persons with pacemakers should do as below:

Always keep the device more than 6 in (20 cm) from their pacemaker when the device is switched on.

Not carry the device in a breast pocket.

Hold the device to the ear opposite the pacemaker.

If you have any reason to suspect that interference is taking place, switch

off your device immediately.

6.2.2 Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

6.2.3 Other medical devices

Operation of any radio transmitting equipment, including wireless Mobile Phones, may interfere with the functionality of inadequately protected medical devices. Switch off your Mobile Phone in health care facilities when any regulations are posted in these areas instructing you to do so.

6.2.4 Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

6.3 Potentially dangerous situations

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in body injury even death.

Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

7 Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

Keep your Mobile Phone and all accessories out of the reach of small children.

Keep the device dry.

Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.

Do not attempt to open the device other than as instructed in this guide.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not contact the device by wet hands, the electric current may strike and damage it.

Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.

Do not paint the device. Paint can clog the moving parts and prevent proper operation.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

- This manual is accurate when issued. The actual specific content to the mobile phones.
- The Company reserves the right to modify technical specifications without notice.
- Some of the contents of the manual may be different with the phone, according to the software, SIM card and service provider to decide.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.