

# T303

## User manual

## Contents

<b>1</b>	<b>About your Mobile Phone .....</b>	<b>7</b>
1.1	Appearance.....	7
1.2	Technical Information .....	8
1.3	Icons.....	9
<b>2</b>	<b>Getting started.....</b>	<b>11</b>
2.1	The Battery .....	11
2.1.1	Install & remove a battery .....	12
2.1.2	Charging.....	12
2.2	SIM card installation .....	13
2.3	Memory card installation .....	13
2.4	Storage Management .....	13
2.5	Power on and off .....	14
<b>3</b>	<b>Call functions .....</b>	<b>15</b>
3.1	Make a call.....	15
3.1.1	Make a domestic call .....	15
3.1.2	Make an extension call .....	15
3.1.3	Make an international call .....	16
3.1.4	Make a call from Mobile Phone book	
	16	
3.1.5	Redial a call by recent call lists.....	16
3.2	Answer a call.....	16
3.3	Reject a call.....	17
<b>4</b>	<b>Menu functions.....</b>	<b>17</b>
4.1	Contacts.....	17
4.1.1	Add new contact.....	17
4.2	Messages .....	18

4.2.1	Write Message.....	18
4.2.2	Inbox.....	19
4.2.3	Draft.....	19
4.2.4	Outbox.....	20
4.2.5	Sent.....	20
4.2.6	Broadcast message .....	20
4.2.7	Message settings .....	21
4.3	Call center.....	21
4.3.1	Call history .....	21
4.3.2	Call settings.....	22
4.4	Settings .....	24
4.4.1	Pen calibration.....	24
4.4.2	Phone Settings.....	24
4.4.3	Network Setting.....	25
4.4.4	Security Settings .....	25
4.4.5	Connectivity.....	26
4.4.6	Restore Factory settings .....	27
4.4.7	Sound effect.....	27
4.5	Mobile TV .....	28
4.6	Camera.....	28
4.7	Photos.....	29
4.8	Video Player .....	29
4.9	Audio Player.....	30
4.10	Recorder .....	30
4.11	FM Radio.....	31
4.12	File Manager.....	31
4.13	User profiles .....	32

4.14	Calendar.....	32
4.15	Tasks.....	32
4.16	Alarm .....	33
4.17	Calculator.....	33
4.18	Service .....	33
4.19	World Clock.....	34
4.20	E-book reader .....	34
4.21	Google search .....	34
<b>5</b>	<b>Safety information .....</b>	<b>35</b>
5.1	Operating environment .....	35
5.2	Electronic devices .....	35
5.2.1	Pacemaker .....	35
5.2.2	Hearing aids .....	36
5.2.3	Other medical devices .....	36
5.2.4	Vehicles.....	36
5.3	Potentially dangerous situations .....	36
<b>6</b>	<b>Care and maintenance .....</b>	<b>37</b>

## **Legal Information**

PLEASE READ THIS INFORMATION BEFORE USING THE PHONE TO MAKE A BETTER USE OF YOUR PHONE. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE DUE TO YOUR MISUNDERSTANDING OF THIS INFORMATION AND MISACTTING.

We are endeavoring to improve our products and services and we reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user's manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone and keys and contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-dependent features. Please contact your service provider.

### **Important Notice**

#### **Important Safety Precautions**

Do not use the device while driving. In some countries, it is illegal to use such devices while driving.

Switch off when refueling. Do not use the device at a refueling point (service station) or near fuels or chemicals.

Switch off in aircraft. Mobile phones and GSM devices can cause interference. Using them on aircraft is both illegal and dangerous.

#### **Follow Special Regulations**

Special Regulation. Follow any special regulations in force in any area and always switch off your device whenever it is forbidden to use it, or when it may cause interference to the surrounding.

Radio Interference. All mobile phones cause radio interference

within the specified limits of GSM standards.

Qualified service. Only qualified service personnel must repair the equipment. Use only approved accessories and batteries.

Emergency calls. Ensure that the phone is switched on and in service. Enter the emergency number (100 or another official emergency number) and press the "Dial" key.

Use only approved accessories. The use of any other power accessory will violate warranty conditions that apply to the phone.

**Safe Operation Instructions**

Before installing or operating this product, read this manual carefully.

Do not expose unit to rain or moisture.

Do not place unit on or close to any heat source.

# 1 About your Mobile Phone

## 1.1 Appearance



## 1.2 Technical Information

MODEL	Model	T303
	Size	87.5 mm*149mm*11.7mm
BATTERY	Type	Lithium battery
	Standard Voltage	3.7 V
	Restrictions on Charging voltage	4.2 V
	Rated capacity	1000mAh
CHARGER	Model	900
	Input	100-240V
	Output	5.0V
Earphone	specification	Stereo earphone
I/O port	specification	Micro USB

### 1.3 Icons

ICONS	Detail
Icon	Indicates
	Signal strength of SIM Card
	A new text message is received of SIM card
	A new multimedia message is received.
	An alarm is activated.
	There are missed call (s).

Icon	Indicates
	Keypad is locked.
	Battery power level.
	Bluetooth is enabled.
	The headset is being used.
	The general profile is activated.
	The outdoor profile is activated
	The indoor profile is activated
	The meeting profile is activated

## 2 Getting started

### 2.1 The Battery

Your device is powered by a rechargeable battery.

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, please buy a new battery.

Use only the approved batteries, and recharge your battery only with approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Warning

Do not drop, knock, or shake the device. Rough handling can shorten the life of the battery.

Do not make short-circuit occur to the battery.

The battery put in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.

Do not put the battery near flammable or explosive goods.

Do not dispose of batteries in a fire!

Never use any charger or battery that is damaged.

Use the battery only for its intended purpose.

Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

### 2.1.1 Install & remove a battery

#### **Remove:**

- (1)Slide forward the bottom off the back cover to remove.
- (2) Lift the battery from its slot and take it out.

#### **Install:**

- (1) Place the battery into the battery slot.
- (2) Slide the back cover toward the top of the Mobile Phone to lock the cover into its place.

#### **Warning:**

There may be the risk of explosion if the battery is replaced by the wrong type.

Dispose of used batteries according to your guidelines.

### 2.1.2 Charging

To plug in the power charger, the charger cable plug at the bottom of the Mobile Phone

#### **Note:**

1. It is beneficial to the battery to charge it until full at the first three times.
2. When charging, don't remove or take out off the battery to avoid the battery circuit to burn out.
3. While charging, it is normal that the Mobile Phone and charger will become hot.
4. If the battery is completely empty, it may take a period of time before the charging icon appears on the display.

Warning: Provides charging temperature range -5 °C to 55 °C, over this range, please do not use the charging

equipment. And be sure to use the charger provided by the supplier. Use of an unapproved charger may be dangerous and breach of warranty of the equipment approval and terms.

Notice:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

## **2.2 SIM card installation**

Turn off the Mobile Phone, and take out the battery.

Keep the gold color side of the SIM card downward, and slide it gently to the right place.

## **2.3 Memory card installation**

Power off the Mobile Phone, and take out the battery or any other electrical supply.

Keep the golden color side of the Memory card downward, and push it gently to the right place.

Before take out off the memory card, be sure to Power off the Mobile Phone and remove the battery first.

## **2.4 Storage Management**

Manage the memory card storage space.

### **1. The computer and synchronize**

Note: This Mobile Phone does not support USB boot function; all operations are on the computer need to use the card reader. You can enter after the discovery has a number of preset folders, for normal use, set the relevant documents were deposited with the corresponding directory, that is, which corresponds to MP3 folder My music, photos corresponding album Folder, corresponding folders, pictures corresponding Images folder. Sound recording, self-Tone Audio corresponding folder.

## 2. Format

If you format the memory card, all files saved in it will be lost. By two ways you can format your Memory card:

Format by Mobile Phone: enter File Manager—>select Memory card —>select Format.

Format by computer: Please complete the format work as following steps:

(1) Right-click "My Computer" and choose "management", after entering the option "store" -> "Disk Management";

(2) In the memory card on the disk where the right-click and choose "format";

## 2.5 Power on and off

Press and hold  key to turn on/off the Mobile Phone.

And if you have set PIN or Mobile Phone code, input it correctly.

### 3 Call functions

#### 3.1 Make a call

When the network supplier's symbol appears when the display monitors, you might dial or answer the mobile phone. Under readiness for action, display monitor top left-hand corner information strip demonstration network signal strength (when has 4 information strip expressed signal is strongest). After the user inserts SIM cards, may realize the double caliper also to wait for an opportunity.

##### 3.1.1 Make a domestic call

Enter the Mobile Phone number including the area code. Press  Key to make a call.

##### 3.1.2 Make an extension call

When making an extension call, press and hold 0 key to get "P" that is a prefix of extension numbers. It will dial automatically in several seconds since you dialed the mobile phone exchange.

viz.: area code—telephone exchange numbers—P—extension numbers, then press  key.

### **3.1.3 Make an international call**

Enter the country code, the area code and the Mobile Phone number, press  key to dial. "+" is needed when input country code, and it can be got by pressing and holding 0 key. Dial to Hong Kong, Macao and Taiwan Mobile Phone ibid.

### **3.1.4 Make a call from Mobile Phone book**

Enter the phone book, choose the telephone number you want to dial, then left soft key to dial.

### **3.1.5 Redial a call by recent call lists**

Press  key to find the SIM recent call lists or the recent call lists, scroll to the number or name.

## **3.2 Answer a call**

An incoming call window will be displayed as the Mobile Phone receives a call. The number will appear on the window if you have

opened this function. Press  key to answer it.

If you missed a call, a missed call log will appear after you return to the start screen.

### 3.3 Reject a call

You can press  key to reject an incoming call.

## 4 Menu functions

### 4.1 Contacts

Enter into the phonebook menu, the user will see the contact person , the number.

#### 4.1.1 Add new contact

Select the “add new contact” menu

User can store the information in phonebook like name, phone number etc .The phone number can be stored in Mobile Phone or SIM card.

Press the right soft key, there are four items in the option

##### -Select

The user can choose to store the information in mobile phone or SIM card.

##### -Mark several

Marking the contact person in phonebook is a shortcut way to send text message together to the person you have marked.

##### -Phonebook setting

- Speed dial

- **Extra number**

SIM Owner Number: Store the Mobile Phone number. It can store two numbers.

SIM service dialing Number: service dialing number.

**Note:** This function needs the network support

SIM SOS Number: Input SOS number.

**Note:** This function needs the network support.

- **Memory status**

- **Copy contacts**

From SIM to phone: Duplicates the SIM card number to Mobile Phone.

From Mobile Phone to SIM: Duplicates the Mobile Phone number to SIM card.

- **Move contacts**

- **Delete all contacts**

From SIM: Delete all the record in SIM card.

From Mobile Phone: Delete all the record in Mobile Phone.

One by one: Delete the record one by one.

## 4.2 Messages

Access this menu, user can select these items: SMS, MMS, voice mail server and broadcast message.

### 4.2.1 Write Message

Enter the submenu of Write Message, user can edit Text message or Multimedia message .when the message is ready , press “option” to do as following:

**-Send to**

Press "OK", enter the number, or add from the phonebook, then enter into the option menu, choose "send", "save to Draft", "edit recipient".....

**-Input method**

After finished edit the text, user can choose "ABC", "abc", "ES"....

**-Advanced**

In advanced menu, there are six items that is advanced for editing the text. The user can insert object, like "Picture", "my picture" "predefined animation" "melody"...., and also can insert number, name, bookmark.

In text format, the user can set the text size, style, alignment, New paragraph.

**-Save to Draft**

Save the text into the draft.

#### **4.2.2 Inbox**

Access this menu to view the received short Messages. Choose the SMS inbox and enter it to read the received Messages. Press left soft key and do the following functions View, Reply, Call sender, Forward, Delete, Delete all, save to phonebook, mark several, Mark as unread, Advanced.

#### **4.2.3 Draft**

The some SMS which is not been sent is been stored in the "Draft". User can check the SMS in the draft, and do the following options:

**-View:** View the SMS which is not been sent

- Send:** Send the SMS from the draft
- Edit:** Edit the SMS in the draft
- Delete:** Delete the SMS in the draft
- Delete all:** Delete all the SMS in the draft
- Mark several:** Mark the SMS in the draft.
- Advanced:** In the menu, there are 4 options “Copy to phone”, “Move to phone”, “Copy all”, “Move all”. That’s mean the user can make the unsend SMS in draft copy to the phone or move to the phone.

#### **4.2.4 Outbox**

Access this menu to view the sent short Messages. Choose the SIM outbox and enter it to read the uncompleted short Messages and sent Messages, drafts.

#### **4.2.5 Sent**

Check the message which were sent already in the sent box

#### **4.2.6 Broadcast message**

Broadcast public information sent by the network providers. Use Cell Broadcast service, you can receive information on various subjects from network provider. For more available information, please contact your local network providers.

#### 4.2.7 Message settings

Enter the submenu of SMS setting, choose Text message or Multimedia Message then press “option” to do as follow:

##### -Profile Settings

Contact with local network provider to get the SC address. After entering the submenu, the setting list will be displayed. The number of the list is different according to the network and the type of SIM card, Select the mode and press “edit” to set the profile name, SC address, valid period and message type.

##### -Common settings

Set the delivery report and reply path.

##### -Memory Status

Check memory space of messages in Mobile Phone or SIM.

##### -Preferred Storage

Select to save in phone or SIM.

### 4.3 Call center

Select call center from main menu, you can view the information about call history and the general call settings.

#### 4.3.1 Call history

Access this menu, user can select these items SIM call history.

**SIM 1 call history:** You can view the information about SIM1 call history, including missed calls, dialed calls, received calls, you can delete call logs, call timers, call costs, SMS counter and GPRS counter.

**SIM 2 call history:** You can view the information about SIM1 call history, including missed calls, dialed calls, received calls, you can delete call logs, call timers, call costs, SMS counter and GPRS counter.

### 4.3.2 Call settings

Access this menu, user can select these items

#### 4.3.2.1 SIM call settings

**-Caller ID:** There are three options: "Set By Network", "Hide Id", and "Send Id". ID refers to the phone number of your device. When choose Hide ID, the caller will hide his phone number As making the call.

NOTE: This function supports by the local network.

**-Call Waiting:**

To make this function available, please contact local network provider.

**-Call Divert**

Call diverting is a network services, it tells your network to divert incoming calls to another number to avoid missing a call.

The following is available: divert All Voice Calls, Divert If Unreachable, Divert If No Answer, Divert If Busy, Divert All Data Calls, and Cancel All Divert.

**-Call barring**

**-Line Switching**

You can switch between line 1 and line 2.

Note: It depends on the service provider whether line 2 is

available.

#### 4.3.2.2 Advance settings

##### -Black List

User can choose 5 phone numbers that he doesn't want to answer. And select mode on to shield the numbers.

##### -Auto Redial

It can dial the same Mobile Phone number automatically after a failing dial with this function.

##### - IP Dial

You can set the prefix IP number with this function.

In phonebook, you can select one of the phonebook items, and select "IP Call" in options, the prefix IP number will be added automatically to the call number and be sent out.

- **Active SIM:** Activates the current IP number to take the SIM card IP number.

- **Edit:** Edit the current IP number.

- **Call Time Reminder**

There will be a hint sound when the setting time passed during a call.

**Off:** turn off the function

**Single:** Input 1-3000(second) between the random numeral.

**Periodic:** Input 30-60(second) between the random numeral.

##### -Auto quick end:

During the calling, the system hangs up the current mobile phone conversation automatically in the user establishment deadline time.

##### -Reject by SMS

When the function sets, the user can reject the calling by send

SMS.

## 4.4 Settings

### 4.4.1 Pen calibration

You can calibrate the touch screen according to the indication

### 4.4.2 Phone Settings

#### ● Time and Date

Set the home city, time and date, time and date's format.

#### ● Schedule Power On/off

You can set power on/off schedule, and the Mobile Phone will power on or power off according to the settings.

#### ● Language

Change the language of the Mobile Phone.

#### ● Pref. input method Setting

Select preferred input method.

#### ● Display

This can set up wallpaper, screen saver, animated boot, shutdown animation shows the date, the local numbers show.

#### ● Auto update of date and time

Set the state to "on" or "off". If the state is "on", when connect to the network, the date and time will be update.

#### ● Flight mode

Change the mode to fight or normal

#### ● Misc. Setting

Set the LCD backlight.

#### 4.4.3 Network Setting

First choose SIM 1 or SIM 2 network

- **Network selection**
- **Preferred Network**

#### 4.4.4 Security Settings

##### 4.4.4.1 SIM Security

###### - PIN Lock

Set the Mobile Phone to ask for your PIN code each time you start your Mobile Phone (if this function is supported by your SIM card). (The SIM2 outbox has the same function, so we do not do it in explained specially.)

**Note:** After three consecutive incorrect PIN code entries, the code will be blocked, and you need the PUK code to unblock it.

The PIN code and PUK code are usually supplied by the SIM card. If you don't get them, please contact with the supplier. The default PIN code is 1234 usually.

###### -Change PIN

You can change SIM PIN code password here.

Note: the three codes are numbers between 4 and 8 digits.

The default password is 1122.

##### 4.4.4.2 Data security

The default password is 1234.

#### 4.4.4.3 Phone security

- **Phone Lock**

Set the Phone lock on or off.

Note: Please as soon as possible its change as own establishment password.

- **Change password**

The old password of the device is **1122**.Enter the old password, use can set a new password himself for the phone.

#### 4.4.4.4 Auto keypad lock

You can set the auto lock time in the submenu of this function, and then the key will automatically be locked if there is no more action of the Mobile Phone.

There are five choices. "None":no keypad lock

"5 sec": The keypad will lock after 5 sec when no action on the mobile phone. The same setting as other times

When the phone is locked, the user can press the green key on the phone, then click the yellow signal to unlock the phone.

#### 4.4.5 Connectivity

##### 4.4.5.1 Bluetooth

**Power:** Bluetooth options on and off.

**Visibility:** enter setup options, you can "Visibility (on and off), change device name, authentication (on and off), audio path

(leave in phone, forward to BT headset), FTP settings (shared folder, access right) "options settings.

**My device :** In your own device, select Bluetooth devices to enter the option, user can "connect, rename, delete, delete all, service list, Inquiry new device" such an operation.

**Search audio devices:** According to determine started to search for Bluetooth-free devices, in the search process you can choose to have the search link Bluetooth devices operate, the search process on abolition stop the search.

**Name:** Bluetooth devices revealed that the Device name, address Bluetooth devices, supported services and other information.

#### **4.4.5.2 Data account**

- GSM data
- GPRS

#### **4.4.6 Restore Factory settings**


You can reset some of the Mobile Phone settings to their original values by input Mobile Phone lock password (**1234**).

#### **4.4.7 Sound effect**

Sound effect is setting for the effect of audio player. User can set Equalizer effect like dance/classical/Treble/party...  
User also can set the reverb effect,3D surround.

## 4.5 Mobile TV

In standby mode, tap Mobile TV. Set your location in the list .press OK on the screen and it will scan the TV channel automatically.

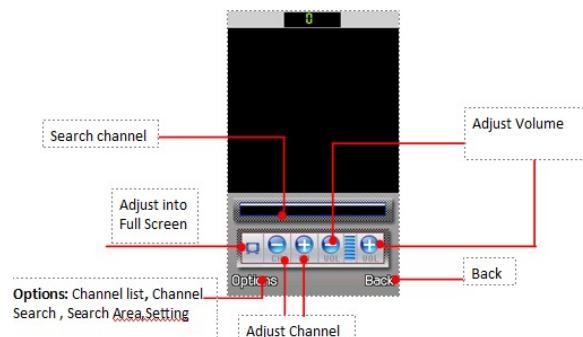

## 4.6 Camera

From the main menu select [Multimedia] / camcorder, press the camera icon to take photo. Touch the icon at the left corner of the screen, the user can set image setting, white balance, scene mode, storage, restore default, to restore the default values in order to carry out a more detailed set of parameters. And the user can change the camera to the video recorder there.

## 4.7 Photos

Select submenu album, you can easily view the album stored in the camera in the picture list, it may also choose to view pictures, browse style, send, rename, delete, delete all files, entire albums of pictures in order and switch Photo album in the store path. One can view the picture by 1 to 3 keys to the picture to enlarge, reduce, rotate operation, under the specific circumstances of the operation and success of the factors related to the size of the picture.

## 4.8 Video Player

Select video player, you can easily view the saved list of movies, press "options" to do the follow:

- **Play:** play the video
- **Use as:** make the video as a caller video
- **Send:** The user can send the video to others using MMS , Email or Bluetooth
- **Rename:** The user can rename the video
- **Delete**
- **delete all the files**
- **Sort by:** The user can sort the videos in the list by name, type, time, size.
- **Streaming URL:** User can input the video web address to view the video on line.
- **Network profiles**
- **Storage:** Use can choose to storage the video in phone or T-card.

To start playing, press  , To pause the playing, press 

To adjust the volume level, use the volume key on the side of the phone or press

## 4.9 Audio Player

Select Multimedia/audio player item in main menu to enter audio player interface. In playing interface, press “List” to enter the list of song, then press “option” to do the work such as Play, Details, Add to ringtones, Refresh List and Settings.

To start playing, press  , To pause the playing, press 

To adjust the volume level, use the volume key on the side of the phone

To skip to the next song, press 

To skip to the previous song, press 

To close the audio player menu and to continue the playback in the background, press the red key on the phone.

## 4.10 Recorder

Access this menu, Press “option”, and the sub menu is:

**-New record:** Press “OK” to start recording . To use the

Graphical keys ,  or  or  on the display to record and to play the record sound.

**-list:** List all the sound record in the phone or t-flash card

Enter the ‘List’ menu, there are some option .User can use the options like the option in video player.

**-setting:** User can store the file in the phone or t-flash card

And User can set the file format and audio quality.

## 4.11 FM Radio

Plug the earphone in the phone, Enter FM radio, press the option.

Use “auto search” to search channels

To change radio frequency in 0.1MHz steps, briefly press

►► or <<

**-Channel list:** it shows the number and name of the channel stored in the list.

**-Manual input:** You can input your favorite channel manually.

**-Auto search:** Search new channel automatically, and it will be stored in channel list.

**-Settings:** Enter this menu to open or close background play and loud speaker, set Record format or select record storage.

**-Scheduler:** select a certain time point

**-Record:** The channels will be stored in channel list.

**-Append:** add record to the selected file which should be AMR file.

**-File list:**

**-Schedule FM record:** FM recording time settings, select a certain time point and a channel recording.

## 4.12 File Manager

It provides you the functions such as browsing media files, checking storage space and formatting function.

When browsing the media files, you can operate the selected files such as copy, Move, delete, rename etc.

## 4.13 User profiles

Profiles define how your Mobile Phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more. Each of the available profiles can be left at their default setting or customized to suit your needs. Select and customize the most suitable profile for your situation. The available modes are General, Meeting, Outdoor, Indoor, and Headset.

In standby mode, you can press and hold key # to switch to silent mode.

## 4.14 Calendar

Access this menu, the calendar will be shown on the screen.

Press the “Options” to do the following:

- View:** View the event the user edited in the calendar.
- View all:** View all the events the user edited in the calendar
- Add event:** Add a new event
- Delete event:**
- Jump to date:**
- Go to weekly view**
- Print**

## 4.15 Tasks

User can add new task, read the old one or delete all tasks. After setting a task, the Mobile Phone will remind user the information at the time appointed.

## **4.16 Alarm**

Set the alarm time and it will remind you by alert tone or vibration when the alarm time expires.

You can set 5 alarms in the Mobile Phone at most.

## **4.17 Calculator**

You can carry on simple arithmetic in the cell-phone through this function, including adding, reducing, multiplication, division and percent operation, etc.

After entering the calculator interface, use the simulation keyboard input digit and operation incantation which you need, can receive the result of calculation according to the equal sign.

Note: This calculator accuracy is limited, will have a rounding error

## **4.18 Service**

This function allows you to acquire or visit diversified services on the Internet through message or network. Please contact your network operator for more information.

- a. Homepage: Start a connection to the selected URL set.
- b. Bookmarks: Access or edit a bookmark.
- c. Recent pages: Browse a saved URL.
- d. Offline pages: Check the history web addresses.
- e. Input address: Enter the address.
- f. Service inbox: Enable a trusted server to send messages to the phone, which is saved in the Service Inbox.

g. Settings: Set parameters of WAP browser. Please consult your network operator  
For details of the parameters,

- Select SIM: This option includes “always inquire, SIM1 and SIM2”.
- Profiles: Edit and enable the profile function.
- Browser options: Set the wait time and whether to show images.
- Service message settings: Set the service message, white list and SL.
- Clear cache: Clear the cache. It may reduce speed of internet connection when there are too much data stored in the cache.
- Clear cookies: Clear the cookies

#### **4.19 World Clock**

User can view the local time of some cities around the world.

#### **4.20 E-book reader**

You can read TXT format file. While reading, press “Option” to do the work such as Find, Jump to, Go to bookmark, Add bookmark etc

#### **4.21 Google search**

You can use your phone to get on the Internet via a network

## 5 Safety information

### 5.1 Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. Do not keep the device near credit cards and other magnetism medium, some accessories can bring magnetism that may be delete the data.

### 5.2 Electronic devices

Some electronic devices are not adequately shielded from external RF energy.

#### 5.2.1 Pacemaker

Pacemaker manufacturers recommend that a minimum separation of 6in (20cm) should be maintained between a wireless Mobile Phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimize the potential interference, persons with pacemakers should do as below:

Always keep the device more than 6 in (20 cm) from their pacemaker when the device is switched on.

Not carry the device in a breast pocket.  
Hold the device to the ear opposite the pacemaker.  
If you have any reason to suspect that interference is taking place, switch off your device immediately.

### **5.2.2 Hearing aids**

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

### **5.2.3 Other medical devices**

Operation of any radio transmitting equipment, including wireless Mobile Phones, may interfere with the functionality of inadequately protected medical devices. Switch off your Mobile Phone in health care facilities when any regulations are posted in these areas instructing you to do so.

### **5.2.4 Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

## **5.3 Potentially dangerous situations**

Switch off your device when in any area with a potentially

explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in body injury even death.

Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

## 6 Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

Keep your Mobile Phone and all accessories out of the reach of small children.

Keep the device dry.

Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

Do not store the device in cold areas. When the device returns to

its normal temperature, moisture can form inside the device and damage electronic circuit boards.

Do not attempt to open the device other than as instructed in this guide.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not contact the device by wet hands, the electric current may strike and damage it.

Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.

Do not paint the device. Paint can clog the moving parts and prevent proper operation.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service

**FCC Statement:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: T303, K3050B (FCC ID: A2DA2T303G) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the Head is 0.574 W/kg and when properly worn on the Body is 0.608 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 15 mm from the body.

To maintain compliance with FCC RF exposure 1.5 cm requirements, use only accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain any metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.