

INSTRUCTION SHEET

TRANSMITTER SHOULD MATCH RECEIVER.

FUNCTION INSTRUCTION OF TRANSMITTER:

TRANSMITTER CONTROL THE RECEIVER INSTALLED AT POWER GRADER SERIES. THE TRANSMITTER SENDS OUT ACTION INSTRUCTION VIA RECEIVER, TO ORDER THE ACTUATOR MOVING FORWARD OR BACKWORD, IN TURN, TO MAKE THE HARROW ASCEND OR DESCEND VIA RELATIVE ORGAN, TO MEET REQUIREMENTS OF FURROWING DEPTH.

MANIPULATION:

IN THE TRANSMITTER'S 10-METER WORKING RANGE, PRESS (BUT DON'T RELEASE) THE UP OR DOWN BOTTOM, TO CHECK THE ACTION OF THE HARROW, RELEASE THE BOTTOM WHILE ITS POSITION MEETS REQUIREMENT.

NOTE:

1. PLEASE CHANGE THE BATTERY IN TIME.
2. USING IN RAIN IS PROHIBITED.
3. KEEP OFF FROM FIRE AND WATER

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any interference, for example RADIO or TV interference, caused by unauthorized modifications to this

equipment. Such modifications could void the user' authority to operate the equipment.