

RF2.4G wireless keyboard instruction

RF2.4G wireless keyboard dongle:

When turn on, press FN+ESC for 2 seconds and the blue LED will blink, then insert USB dongle to computer, it will pair automatically

1. LED light

Blue LED light :

Uppercase & Lowercase status:

caps blue LED on means Uppercase status

caps blue LED off means Lowercase status。

Caps number status:

Number blue LED on means number function。

Number blue LED off means special function。

Low voltage tips: when the voltage is as low as 2.1V, blue LED flash。

2. pairing function

Insert USB dongle, press ESC+K, LED flash, when pairing is successful, LED is off.

3. sleeping function(saving power mode) :

5 minutes without using the keyboard, sleeping function is automatically on, click on any keycaps, it can connect automatically

4. keycaps function: the same as layout

Battery Type: Two AAA Batteries

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.