

Windows Mobile Phone
User Manual

Dear Customer,

Thank you for purchasing YEZZ WP 47 Full Touch Screen Mobile Phone. Kindly read this user manual carefully to learn about key functional characteristics and operational methods of this mobile phone.

YEZZ WP 47 is a smart phone based on Windows Phone 8.1 operating system. With applications pre-installed and others that you can download from internet such as Store which will take you to an excellent experience of communication and entertainment.

Contents

1.	POINTS OF ATTENTION ON SAFETY	5
1.1	SAFETY ALERT AND CAUTIONS	5
1.2	PROTECTING YOUR BATTERY	6
1.3	CLEANING AND MAINTENANCE	8
2.	GETTING STARTED	9
2.1	PHONE OVERVIEW	9
2.2	OPEN THE BATTERY COVER	10
2.3	INSTALL SIM CARD	10
2.4	INSTALL MEMORY CARD	11
2.5	POWER ON/OFF	11
2.6	BATTERY CHARGING	11
3.	BASIC OPERATION & KNOWLEDGE	12
3.1	USING TOUCH SCREEN	12
3.2	USING KEYS	12
3.3	POWER ON/OFF	12
3.4	MICROSOFT ACCOUNT	13
3.5	ENTER START SCREEN	13
3.6	SCREEN LOCK & DISPLAY OFF	13
3.7	PERSONALIZE THE START SCREEN	13
3.8	KIDS CORNER	14
3.9	CHANGE YOUR THEME	14
3.10	TAKE A SCREENSHOT	14
3.11	STATUS BAR	14
3.12	USING SENSORS	15
3.13	ONEDRIVE	15
3.14	CONTACT	16
3.15	CALL	16
3.16	MESSAGING	16

3.17	MULTIMEDIA	17
3.18	DOWNLOAD FROM STORE	17
3.19	OFFICE	17
3.20	FCC CAUTION.....	19

1. Points of attention on safety
1.1 Safety Alert and Cautions



IMPORTANT! Please read these instructions carefully and follow them implicitly in case of any dangerous or illicit situations.



Note driving safety

It is strongly recommended that you do not use a mobile phone when driving. Please use the personal hand free package when a call is inevitable.

Please put your mobile phone in the mobile phone holder safely, and don't put it at a passenger's seat or any other place that may risk a drop of your mobile phone in the case of collision or emergency brake.



Switch off your mobile phone on the airplane

Interference caused by mobile phones affects aviation safety, and thus it is illegal to use it on the airplane. Please make sure your mobile phone is switched off when you are on a plane.



Switch off your mobile phone in blasting operation area

You should strictly obey relevant laws and regulations and switch off your mobile phone in or near blasting operation area.



Switch off your mobile phone near dangerous area

Your cell phone is not allowed to switch on when the refueling and chemical substance area is nearby.



In a hospital

When using it in a hospital, you should be subject to the relevant rules specified by the hospital. Make sure your mobile phone is switched off when medical equipment is nearby. Any wireless transmission equipment, mobile phones included, will affect its performance. Other electronic equipment may be affected as well. If you have any question in this regard, please consult relevant doctor or equipment supplier directly.



Interference

Any interference caused by wireless equipment can do damage to its

performance.

Qualified services

Only qualified services are allowed to install or repair mobile phones. If you install or repair it by yourself, you may break the guarantee rules.

Accessories and batteries

Only manufacturer recognized accessories and batteries can be used.

Reasonable use

It should be used normally. It is absolutely forbidden to put it on the condition that with an extremely high temperature (over 60 Celsius degrees), for example, do not put it under the window where it can be exposed to the sunshine directly. Remember to use wet or antistatic cloth, instead of using any cloth with static electricity to clean it.

Emergency call

Make sure your mobile phone is powered on and is in the service, if you would like to make an emergency call number such as 911, pressing the dial key and confirm your location, simply explain what has happened, and don't terminate the call without any permission.

Note: Like any mobile phone, it may not be supported due to the network coverage and wireless signal transmission. What's more, some networks even don't support the 112 emergency call services. Therefore, the communication under emergent situations (such as first aid) should not be completely depended on mobile phones. You can consult and check with your local network suppliers.

Notes:

- All screen shots in this guide are simulated, Actual displays may vary.
- Instructions to perform tasks in this guide may change depending on the software version on your phone.
- Unless specified otherwise, all instructions to perform tasks in this guide assume that you are starting from the home screen.

1.2 Protecting Your Battery

Warn reminders about battery:

Please don't store your mobile phone battery at an extremely high or low temperature, for it will affect the service life of the battery, and shorten the standby time. The service life of the mobile phone battery is subject to a certain limit. It is recommended that you

would better change a battery from the original supplier if the performance of the battery has declined after using it for a period of time.

Points of attention on use of battery:

- Be sure to switch off the mobile phone before you remove the battery.
- Please use it carefully. A short circuit will occur if the positive pole (+) and the negative pole (-) of the battery is connected with a metal object (for example, a coin or clip), it may do damage to both the battery and the metal object. Make sure that no metal object will be connected simultaneously with the positive pole and the negative pole of the battery after it is removed and put in a bag.
- Don't throw the battery into the fire, or use it under an extremely high temperature condition.
- Don't dismantle or modify the battery.
- Don't put battery in an occasion with strong mechanical impact, or use a hard object to penetrate the battery.
- Battery should be put in a cool and dry place to avoid direct sunlight. It should not be placed with a high temperature (over 60 Celsius degrees) environment.
- If battery gives out any peculiar smell or getting overheated, you should stop using it.
- If the battery is found to have any crack, deformation, damage of other type, or electrolyte leakage, it should be stopped using immediately.
- Please clean your skin or clothes immediately with soap and clear water if they contact leaking electrolyte, and wash your eyes completely with clear water if any electrolyte splashes into.
- In case of any injury caused by incorrect charge, only original battery is allowed to be charged.
- Don't use the li-polymer battery when the temperature is extremely low, for the maximum standby/call time is not available at a low temperature.
- Don't clean the battery with water or organic solvent, or immerse the battery in water.
- Make sure the battery is fully charged if it has been out of use for a long period.


- It is recommended that the rejected battery be returned to the mobile phone manufacturer or placed in a designated public area for rejected battery recycling. Don't mix it with other garbage or throw it freely.
- 1.3 **Cleaning and Maintenance**
 - Please don't leave the phone, the battery and the charger in the bathroom and other high humidity places, and prevent them from rain.
 - Please clean the phone, the battery and the charger using soft and dry cloth.
 - Please don't wipe the phone using alcohol, thinner or benzene and other chemical reagents.
 - The socket with dirt may cause poor contact and power-off. Please clean it regularly.

2.1 Phone Overview




2.2 Open the battery cover

Push the battery cover upwards.

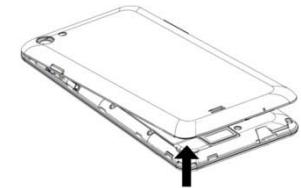

2.3 Install SIM Card

This phone supports double SIM/USIM cards, before you power on the phone, make sure there is at least one SIM/USIM card is inserted in either USIM/SIM card slot.

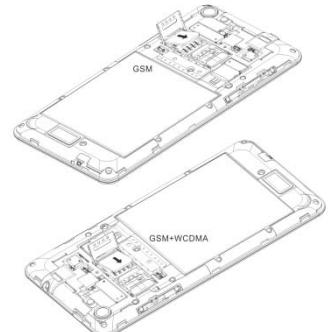


Note:

Please insert or remove the cards when the phone is power off, or the phone may be damaged.

2.4 Install Memory Card

Aim at the T-Flash card slot and push the T-Flash card gently, and the card will be inserted correctly.

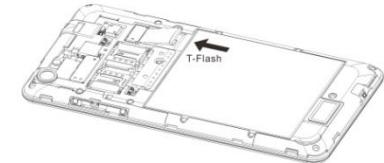

Note:

- If the memory card is failed, please check whether it is correctly placed at good contact of metal point.
- Please insert or remove the T-Flash card when the phone is power off, otherwise the T-Flash card or the phone might get damaged and the data on the T-Flash card could be lost.

2.5 Power on/off

In power off status, long press the power key on right side for about 2 seconds to power on your phone. In power on status, long press power key for about 2 seconds to power off your phone.

2.6 Battery Charging

You can charge the battery by connecting the phone either to a pc USB port or to the provided standard charger use the provided standard USB cable.

Note: In order to ensure normal operation of the phone, please make sure to use the designated charger.

3. Basic operation & knowledge

3.1 Using Touch Screen

Tap To act on items on the screen, such as application, settings icons and options, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch down your finger on them and then lift your finger without change the touch down position in a short time.

Tap & hold Touch down your finger on the screen without lifting up or moving for about 2 seconds. This action will pop-up an special options list or active some special actions.

Drag Touch down your finger on screen and move without lifting up to scroll options, switch screens and other contents displayed on screen.

Flick Drag quickly and release, To scroll through a list or move quickly, flick across the touch screen. When you flick a long list, tap the screen to stop it from scrolling.

Pinch In some applications (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

3.2 Using Keys

Power key: Press the power key to lock/unlock your screen. Press and hold Power key to power on/off the phone.

Volume key: Press the volume keys to change the ring volume (on the home screen) or the earpiece volume (during a call). Press the volume button will cancel ringtones when incoming calls.

Search key: Press search key to open bing search or Cortana.

Win key: Press Win key to close any menu or app and return to the start screen. On the start screen, tap an app to open it. Press and hold Win key to enter to tools feedback hub.

Back key: Opens the previous screen you were working in. If the onscreen keyboard is open, closes the keyboard.

3.3 Power on/off

Power on the phone
Press and hold the power key until the phone vibrates.

Power off the phone

Press and hold the power key, and drag the lock screen down.

3.4 Microsoft account

With a Microsoft account, you can access all Microsoft services with a single username and password on your computer or phone.

To create a Microsoft account later, open a Microsoft app or service on your phone. On the start screen, swipe left, and tap **Settings > email+accounts > add an account**.

3.5 Enter start screen

When you sign in, you will enter the start screen. Then you can pin your favorite apps, websites, and much more to the start screen, and move or resize tiles as you like.

To switch between the start screen and the apps menu, simply swipe left or right.

3.6 Screen Lock & Display off

On the start screen, swipe left, tap **Settings > lock screen > Screen times out after**, and select the length of time after which the keys and screen are locked automatically.

To protect your phone against unauthorized use, you can define a security code, and set your phone to lock itself automatically when you're not using it.

1. On the start screen, swipe left, and tap **Settings > lock screen**.

2. Switch **password** to **On**, and type in a security code (at least 4 digits).

3. Tap **Require a password after**, and define the length of time after which the phone is locked automatically.

Press the power key, drag the lock screen up, and type in your security code to unlock your phone.

3.7 Personalize the start screen

You can set your most-used apps on the start screen. You can pin your favorite apps to the start screen, and move or resize tiles as you like.

To pin an app, swipe left to go to the apps menu. Tap and hold the app, and tap **pin to start**.

To move an icon, tap and hold the icon, drag and drop it to the new location, and tap the screen.

To resize, tap and hold the icon, and tap the arrow icon. You can change the size of the icon, the bigger the icon is, the more info it can show.

To unpin the icon, tap and hold the icon, and tap .

3.8 Kids corner

Switch the kid's start screen on

On the start screen, swipe left, and tap **Settings** > **kid's corner**, then switch **Kids Corner** to **On**. Choose which content your kids can use.

Go to your own start screen

Press the power key twice, and swipe up on your own lock screen. If you've set a password, type it in.

Go back to the kid's start screen

On your own lock screen, swipe left, and on the kid's lock screen, swipe up.

3.9 Change your theme

You can change the display colors to match your taste and mood.

1. On the start screen, swipe left, and tap **Settings** > **start+theme**.
2. Tap **Background** or **Accent color**.

3.10 Take a screenshot

You can capture your screen by pressing the power key and Volume up key at the same time.

3.11 Status bar

The Status bar appears at the top of every screen. It displays icons indicating your phone's status and notifications.

Icon	Description
	Signal strength
	Battery power level
	The battery is charging.
	Your phone is roaming and not on your home mobile network.
	Vibrate mode is switched on.

	Silent mode is switched on.
	Airplane mode is switched on.

To open the Notifications panel:

- Drag the Status bar down from the top of the screen.

3.12 Using sensors

Proximity Sensor detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call. (While talking on the phone, the sensor detects talk activity and locks the keypad to prevent accidental key presses).

Light Sensor lets you use the ambient light level to adjust the screen brightness/contrast.

Gravity sensor detects your phone's acceleration direction and takes responding actions according to the running application.

- Rotate the screen display when you rotate the device while using some features. To set the interface to keep the orientation when you rotate the device, select **Settings -> Screen rotation**, Switch **Rotation lock** to **On**.
- Take actions according to the gravity's real time orientation angle, typically used in games.
- Responding to your actions such swing the device in some applications.

3.13 OneDrive

OneDrive is cloud storage for all your documents and photos, so you can access, share, or restore them if needed. You can also set it to back up your stuff automatically, so when you take a photo or a video, it's copied to your cloud album.

With OneDrive, you can easily access your photos, documents, and other stuff you have uploaded from any of your devices.

Before you update or download content, you need connect to the internet and then sign in to your Microsoft account.

There are several places where you can access your stuff on OneDrive. You can save photos to OneDrive in the Photos hub, or manage your office documents in the Office hub.

3.14 Contact

Contacts gives you quick and easy access to the people you want to reach. When you first turn on your phone and sign into your account, any contacts existing in account are downloaded to your phone. After that, your contacts are synchronized: any changes you make to your contacts on the phone or the web are made in both places, the next time you sync. Contacts from accounts are also synced in this way.

Information about your contacts is shared with other applications, such as Gmail, Messaging, and so on.

If you have more than one account with contact information, Contacts joins duplicates into a single entry. You can also manage that process manually.

3.15 Call

Make a call:

Tap  on start screen or  on the apps menu.

- Tap  to enter dial board screen, enter the phone number and tap **call** button to make a call.
- Tap  to enter **contact** list, tap the contact and then tap **mobile phone** after entering another screen.

Answer/Reject a call:

When a call comes in, tap **answer** to answer a call, tap **ignore** to reject an incoming call, tap **text reply** to send a text message and then reject the call.

During a call conversation, press the side volume key to adjust volume, tap  at bottom to hold the call, tap  to open the loudspeaker, etc.

3.16 Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS) with your friends on their mobile phones.

You can send text (SMS) messages of up to 160 characters to another mobile phone. If you keep typing after the limit, your message will exchange to two message automatically.

Multimedia (MMS) messages can contain text and a picture, a recorded voice, an audio file, a video, or a picture slideshow.

Tap  on start screen or  on the apps menu to

access message.

When new message received, a popup message will be shown on the notification bar, drag down the bar and tap on the message to read.

3.17 Multimedia

Camera is a combination camera and camcorder that you use to shoot and share pictures and videos. Pictures and videos are stored on the phone's SD card or phone.

Photos is used to view pictures and play videos that you've taken with Camera, downloaded, or copied onto your SD card or phone. You can perform basic editing tasks on pictures and set them as your wallpaper or contact picture.

Music collects all audio files from your SD card or phone to play.

Video collects all video files from your SD card or phone to play.

3.18 Download from Store

To download from Store, you need to be signed in to your Microsoft account on your phone. When you're signed in, you are offered content compatible with your phone.

You can search for and download content directly to your phone, or browse Store content on your computer and send links from there to your phone by text message.

Using services or downloading content may cause the transfer of large amounts of data, which may result in data costs.

Download an app, game, or other item

You can download free apps, games, or other stuff, or buy more content for your phone.

1. Tap **Store**.
2. Tap an item to view its details.
3. If the item has a price, tap **buy**, or to try the item for free for a limited time, tap **try**. If the item is free, tap **install**.
4. If you're not signed in to your Microsoft account, sign in now.

5. Follow the instructions shown on your phone. When the download is complete, you can open or view the item, or continue browsing for more content. The content type determines where the item is stored in your phone: music can be found in the Music hub, videos can be found in the Video hub, games can be found in the Games hub, and apps can be found in the apps menu.

3.19 Office

Microsoft Office Mobile

You can work through Microsoft Office Mobile when you away from your office.
Go to the Office hub to create and edit Word documents and Excel workbooks.
In the office hub, tap **Office**, you can create, view or edit Microsoft Office documents.

Continue with a document on another device
When working on an Office document, tap ...> **save as...** > **Save to** > **OneDrive**. You can save your Office document on OneDrive and continue your work on another device.
You can now open the document from OneDrive on another device and continue where you left off.

3.20 FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.0 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.