

User Manual

Contents

1. Getting to know your phone...1	5. Message.....4
1.1 Your Phone	5.1 Write message
1.2 Status icons	5.1.1 New SMS
1.3 Installing SIM card and battery2	5.1.2 New MMS.....4
1.4 Installing Storage card.....2	5.2 Inbox.....4
1.5 Battery charging.....2	5.3 Outbox
1.6 Power on/ off.....2	5.4 Drafts
1.6.1 Power on	5.5 Sentbox.....5
1.6.2 Power off	5.6 Message setting
1.7 Using shortcut keys.....3	5.6.1 Templates.....5
2.Using Call Function.....3	5.6.2 Voice mail server.....5
2.1 Making a call.....3	5.6.3 Broadcast message.....5
2.2 Answering or rejecting a call... 3	5.6.4 Settings
2.2.1 Answer a call.....3	5.6.5 Message capacity.....6
2.2.2 Reject a call	6. Fun&Games.....6
2.3 Adjusting call volume.....3	6.1 MSN.....6
2.4 Ending a call.....3	6.2 Facebook
3. Phonebook.....3	6.3 Yahoo.....6
3.1 View a contact	6.4 Twitter
3.2 Adding a new contact.....3	6.5 Sokoban.....6
4. Call history.....4	7. Profiles.....6
4.1 Dialed calls	7.1 Normal
4.2 Received calls.....4	7.2 Silent.....6
4.3 Missed calls	7.3 Meeting
4.4 Rejected calls	7.4 Indoor.....6
4.5 Delete all	7.5 Outdoor.....6
4.6 Call timers.....4	8. Multimedia.....6
4.7 Call cost (need the network support)	8.1 Camera
.....4	8.2 Audio player
4.8 GPRS counter.....4	8.2.1 Background audio player

8.3 Video player.....	6	11.4.2 Contrast.....	9
8.4 Image browser.....	7	11.4.3 Backlight.....	9
8.5 Recorder.....	7	11.4.4 Keypad backlight time	9
8.6 FM radio.....	7	11.4.5 Animation effect	9
9.Organizer.....	7	11.5 Security settings	9
9.1 Alarm	7	11.5.1 PIN.....	9
9.2 eBook	7	11.5.2 PIN2	10
9.3 Calendar	7	11.5.3 Privacy.....	10
9.4 Calculator	7	11.5.4 Auto keypad lock.....	10
9.5 World clock.....	7	11.5.5 Lock screen by end- key	10
10.File manager.....	7	11.5.6 Power-on password	11
11.Settings.....	7	11.6 Connection management.....	11
11.1 Dual-SIM.....	7	11.6.1 Network account.....	11
11.2 Call settings	7	12.Services.....	11
11.2.1 Network selection.....	7	13.Safety Precaution.....	11
11.2.2 Call divert.....	8	13.1 Usage environment	11
11.2.3 Call barred	8	13.2 Medical devices.....	12
11.2.4 Call waiting (Need network support)	8	13.2.1 Pacemaker	12
11.2.5 Hide ID (Need network support)	8	13.2.2 Hearing aids	12
11.2.6 Select line	8	13.2.3 Emergency calls	12
11.2.7 Flight mode	8	13.3 Cautions for battery charging	13
11.2.8 Others.....	8	13.4 Cautions for battery usage	13
11.3 Phone settings	9	13.5 Cautions for spare parts usage	14
11.3.1 SOS number	9	13.6 Other safety information	14
11.3.2 Time & date.....	9		
11.3.3 Select language	9		
11.3.4 Shortcut settings.....	9		
11.3.5 Auto power on/off	9		
11.3.6 Power management	9		
11.3.7 Restore factory settings	9		
11.4 Display settings	9		
11.4.1 Wallpaper settings.....	9		

1. Getting to know your phone

1.1 Your Phone



1.2 Status icons

Icon	Function description
	Represent current SIM1 and SIM2 network signal. The more bars, the stronger the signal
	Flight mode
	Battery status, more bars indicate more battery capacity left
	Unread SMS
	Clock has set
	Bluetooth function is activated

	Profile has set as Silent Mode
	Profile has set as Meeting Mode
	Profile has set as Indoor Mode
	Profile has set as Outdoor Mode

1.3 Installing SIM card and battery

- (1) Hold on **【End Key】** for about three seconds to switch off the phone.
- (2) Remove the battery cover.
- (3) Remove the battery.
- (4) Follow the sign for SIM1 and SIM2 on the phone to install SIM1 and SIM2. Please make sure that the golden contacts of the card face into the phone and the notched corner has the same direction with the card slot, then push the other side of the card gently until it fixes itself in the card slot.
- (5) Replace the battery with its golden contact part facing the set phone battery contact piece, and then replace the battery cover.

1.4 Installing Storage card

- (1) Hold on **【End Key】** for about three seconds to switch off the phone.
- (2) Remove the battery cover.
- (3) Remove the battery.
- (4) Follow the arrow direction of "OPEN" on the T-Card slot cover, open card slot cover, put the T-Card into the slot vertically, make sure that the gold contacts of the card face upwards, until the card fixes itself in the card slot.
- (5) Follow the arrow direction of "LOCK" on the T-Card slot cover, pull card slot cover to lock the card slot.

1.5 Battery charging

Charged by the travel charger

- (1) Install the battery correctly into the phone.
- (2) Insert the lead of the travel charger to connecting slot of the phone, and then connect the charger to a standard power socket.

When charging is complete, unplug the charger from the standard power socket first, and then disconnect the phone and charger.

1.6 Power on/ off

1.6.1 Power on

Hold on **【End Key】** for three seconds to switch on the phone.

1.6.2 Power off

Hold on 【End Key】 for three seconds to switch off the phone.



Warning:

Don't switch the phone on in areas where wireless phone usage is prohibited or where it may cause interference or danger, and also make sure that you haven't activated the function "Auto power on/off".

1.7 Using shortcut keys

Pressing some keys directly from the Home Screen provides direct access to common phone functions.

Key	Operation	Function
Call key	press briefly	Enter Call History
1 Key	hold on	Enter voicemail box for SIM1 or SIM2

2. Using Call Function

2.1 Making a call

- (1) On the Home Screen, input the area code and phone number.
- (2) Select <Options→Call→Voice call→SIM1/SIM2> to select SIM1 or SIM2 to call.

2.2 Answering or rejecting a call

2.2.1 Answer a call

When there is an incoming call, you can press 【Call Key】 to answer.

2.2.2 Reject a call

When there is an incoming call, you can press 【End Key】 to reject it.

2.3 Adjusting call volume

During a call, you can press 【Navigation Key】 to adjust the earphone volume.

2.4 Ending a call

Press 【End Key】 to end the call.

3. Phonebook

3.1 View a contact

Enter the phonebook, the phone is defaulted to show contact list with all entries. Press 【Left Key/Right Key】 to switch between different groups.

3.2 Adding a new contact

On the Contacts list, select <Options→New> to create a new contact.

- ❖ **Phone:** You can input the contact name, mobile phone, home phone, etc. You can also set special image and ring for the contact entry.

- ❖ **SIM1:** The input record will be saved to SIM1, with each name one phone number.
- ❖ **SIM2:** The input record will be saved to SIM2, with each name one phone number.

4. Call history

Enter the main menu, and then select [**Call history**] to enter the call list.

4.1 Dialed calls

Display recent calls dialed.

4.2 Received calls

Display recent calls received.

4.3 Missed calls

Display recent calls unpicked up.

4.4 Rejected calls

Display recent calls rejected.

4.5 Delete all

Delete all the call entries.

4.6 Call timers

Select the desired SIM Card, and then you can view all relevant information about the SIM Card.

4.7 Call cost (need the network support)

- ❖ **Total cost:** Record total call charges for SIM1 and SIM2.
- ❖ **Max cost:** You can set the desired upper limit for call costs.
- ❖ **Price per unit:** Record the cost rate for SIM1 and SIM2.
- ❖ **Reset cost:** Reset the total call charges as zero.

4.8 GPRS counter

You can view the detail about GPRS flowrate.

5. Message

5.1 Write message

5.1.1 New SMS

On the Home Screen, press **【Left Soft Key】** and select [**Message→Write message→New SMS**] to edit a new SMS directly.

After writing an SMS, click **<Send>** to send the message.

5.1.2 New MMS

On the Home Screen, press **【Left Soft Key】** and select [**Message→Write message→New MMS**] to create a new MMS.

5.2 Inbox

Store all received SMS and MMS.

5.3 Outbox

Store all SMS and MMS failed to be sent.

5.4 Drafts

Save edited SMS and MMS haven't sent.

5.5 Sentbox

Store all the SMS and MMS successfully sent out. If you want the sent messages be saved automatically, please select

[Message→Options], then select [Settings→SMS→Save sent messages→Save].

5.6 Message setting

On the Home Screen, press 【Left Soft Key】 to enter the main menu, then select [Message→Options] to enter the message setting menu.

5.6.1 Templates

While editing messages, you can directly cite the preset common phrases. Select <Edit> to set the common phrases by yourselves.

5.6.2 Voice mail server

This function works like an answering machine, which can transfer a missed call to your personal voice mail, allowing the caller to leave a voice message and notify you by an SMS. Voice Mail is a part of the bundled software provided by network operator, therefore, you need to register to active this function, and manually set the phone. Please contact with your network operator for more details.

 **Caution:**

It's workable to transfer the voice call into the voice mail (The number the call will leave a message) by setting "Divert calls".

5.6.3 Broadcast message

You can receive broadcast text messages with various contents via network service, such as news, weather or traffic information. For more details, please consult your network operator.

5.6.4 Settings

❖ SMS

- **SIM1 msg center:** While sending messages, you must set the service center number provided by network operator. Most SIM cards defaulted contain the service center number. You can also gain this number directly from the network operator.

If you modify or delete the service center number, an SMS might not be sent successfully.

- **SIM2 msg center:** Please refer to [SIM1 msg center].
- **Message validity period:** Allows you to set the length of time during which your SMS will be stored in the message center. The validity period depends on the network operator.
- **Status report:** Select [On], then the text message center will inform you when you successfully sent a message.
- **Save sent messages:** You can select whether to save the sent message or not.
- **Preferred storage:** You can select to save the SMS to the SIM card or the phone first.

- ❖ **MMS**
- ❖ **Broadcast message**

5.6.5 Message capacity

You can view memory capacity status for SMS and MMS via this function.

6. Fun&Games

- 6.1 MSN**
- 6.2 Facebook**
- 6.3 Yahoo**
- 6.4 Twitter**
- 6.5 Sokoban**

Push all the boxes  to the destination , then you can go to the next game level, press **【Navigation Key】** to move the snail.

7. Profiles

7.1 Normal

- ❖ **Activate**: Activate the chosen profile.
- ❖ **Customize**: Set the options as required.
- ❖ **Rename**: Modify the name of the selected profile.

7.2 Silent

For the settings, please refer to "Normal".

7.3 Meeting

For the settings, please refer to "Normal".

7.4 Indoor

For the settings, please refer to "Normal".

7.5 Outdoor

For the settings, please refer to "Normal".

8. Multimedia

8.1 Camera

Enter the main menu, and select **[Multimedia→Camera]** to enter the camera preview screen, press **【OK Key】** to take a photo.

8.2 Audio player

On Home Screen, press **【Left Soft Key】** to enter the main menu, and select **[Multimedia→Audio player]** to enter the Audio Player screen.

- ❖ Press **【OK Key】** to play or pause
- ❖ Press **【Left/Right Key】** to skip to last /next one
- ❖ Press **【Up/Down Key】** to adjust the volume

8.2.1 Background audio player

While playing a song, press **【End Key】** to quit the Playing screen to enter the background playing mode.

8.3 Video player

Enter the Main menu, and select **[Multimedia→Video player]**.

- ❖ Press **【OK Key】** to play or pause
- ❖ Press **【Left/Right Key】** to skip to last /next one
- ❖ Press **【Up/Down Key】** to adjust the volume

8.4 Image browser

The function provides a prompt access to view the photos and pictures.

8.5 Recorder

On Home Screen, press **【Left Soft Key】** to enter the main menu, select **[Multimedia→Recorder]**, and choose **<Options→Start recording >** to start recording. Select **<Pause>** to have the recording pause for a while, select **<Stop>** to cease recording. After ceasing the recording, the recorded file will be automatically save in the folder **[Audio]**, select **<Options→Record file list>** to check.

8.6 FM radio

On standby mode, enter the Main menu, then select **[[Multimedia→FM radio]**.

- ❖ Press **【Down Key】** to activate or deactivate the radio
- ❖ Press **【Left/Right Key】** to adjust the frequency
- ❖ Press **【*/# Key】** to adjust the volume

9. Organizer

9.1 Alarm

On the Home Screen, press **【Left Soft Key】** to enter the main menu, and select **[Tools→Alarm]**, then you can set the alarm name, time, ring and mode.

9.2 eBook

You can view file in TXT format by Ebook and copy the TXT file to the **[Ebook]** folder in the memory card from your PC.

On the Home Screen, press **【Left Soft Key】** to enter the main menu and select **[Tools→eBook]** to enter the Ebook screen you read last time. Select **<Back>** to enter the Ebook list and reselect the desired file to read.

9.3 Calendar

Enter the main menu, and select **[Tools→Calendar]** to enter the Calendar screen.

9.4 Calculator

Directly input numbers, press **【Navigation Key】** to select your desired operation symbols (+, -, /, X). Press **【OK Key】** to get the answer.

9.5 World clock

This function allows you to check the standard time in different areas of the world.

10. File manager

This menu allows you to manage files stored in the phone or storage card.

11. Settings

11.1 Dual-SIM

- ❖ **Standby mode:** You can select the standby mode for SIM card, either to have one SIM card standby, or to have both SIM cards standby simultaneously.
- ❖ **Reply by original SIM:** You can activate the function to reply from current SIM card for call, SMS and MMS.
- ❖ **Set SIM name:** You can name the Card as you want.

11.2 Call settings

11.2.1 Network selection

- ❖ **Auto select:** The phone can automatically search and register available networks.

- ❖ **Manual select:** Enable this function, the phone will search for the network, and list all searched networks, then you need to choose the one needed to register.

11.2.2 Call divert

Based the set diverting conditions, incoming calls will be forwarded into voice mail or other numbers.

11.2.3 Call barred

This function helps you to restrict the incoming and outgoing calls.

Select the desired call and press <OK>, then you can select [Activated], [Off] or [Query status]. Select [Activated], the phone will need network support current setting.

⚠ Caution :

- 1 . Some network operators forbid the function. For more details, please contact your network service provider.
2. The network operator will provide you the initial network password while you apply for this service.

11.2.4 Call waiting (Need network support)

- ❖ **Activated:** If you set the function on, the network will alert you that there is an incoming call. You can keep current call and answer another one.
- ❖ **Off:** Cancel call waiting function, then the new incoming calls won't be answered while you're on the phone already.
- ❖ **Query status:** Select it to view current status of this function.

11.2.5 Hide ID (Need network support)

- ❖ **Hide ID:** While calling, the recipient won't see your phone number.
- ❖ **Display own ID:** While calling, your phone number will be visible for the recipient.
- ❖ **Display ID by network:** While calling, whether your phone number will be visible or not for the receiver depends on the network presetting.

11.2.6 Select line

You can choose Line 1 or Line 2 as you need.

11.2.7 Flight mode

- ❖ **Activate:** Activate flight mode, then all network service won't be available.
- ❖ **Select when power on:** You can select whether to activate flight mode when power on.

11.2.8 Others

❖ **50 secs warning**

If you activate the function, an elapsed time reminder will be heard at the 50th second of every minute during your call, so that you may end the call timely to save the phone fare.

❖ **Vibration when connected**

The phone will vibrate to prompt you when the recipient answers your phone.

❖ **Answer/Reject mode**

- **Reply SMS after reject:** You can select whether to reply an SMS after rejecting a call.

❖ **Auto redial**

If you set this function on, the phone will redial the number after an unsuccessful call,

11.3 Phone settings

11.3.1 SOS number

You can set SOS number.

11.3.2 Time & date

- ❖ **Set time:** Directly input the time or press **【Up /Down Key】** to set it.
- ❖ **Set date:** Directly input the date or press **【Up /Down Key】** to set it.

11.3.3 Select language

You can select the language you want.

11.3.4 Shortcut settings

You can change the responsible shortcuts for **【Navigation Key】** under standby mode.

11.3.5 Auto power on/off

You can set the phone to switch on/off at a scheduled time.

11.3.6 Power management

Display the battery capacity.

11.3.7 Restore factory settings

Reset all parameter values into default status. Please enter the privacy preserving password (Initial password is 1234) to resume factory setting.

11.4 Display settings

11.4.1 Wallpaper settings

Select the default or other pictures as the wallpaper of the phone.

11.4.2 Contrast

Press **【Left /Right Key】** to adjust the contrast.

11.4.3 Backlight

Select the desired backlight time.

11.4.4 Keypad backlight time

Select the desired keypad light time.

11.4.5 Animation effect

- ❖ **Power on display:** You can select the preset animation or others as the Power on animation for your phone.
- ❖ **Power off display:** You can select the preset animation or others as the Power off animation for your phone.

11.5 Security settings

In order to secure the information, you can set PIN code, PIN2 code and power-on password.

11.5.1 PIN

PIN code is the personal identification number for SIM card. If never be modified, the initial password set by network operator should be 1234 or 0000. If activated the power-on PIN code, then you have to input the PIN password each time you switch the phone on. You can modify the PIN code to prevent your SIM card being used by others.

 **Caution :**

If you input your PIN code incorrectly three times in succession, the SIM card will be locked automatically, and prompting to enter PUK code to unlock it. Therefore, please do remember the PIN code, if you modify it.

PUK code (PUK1) is made up by 8 digits, unmodifiable. When the phone is

locked by PIN code, please enter correct PUK code to unlock the phone. If you incorrectly input the PUK code ten times in succession, then the SIM card cannot be used any more. Some PUK codes are provided together with the SIM card, some should be gained from the network service provider. If you don't know the PUK code while your PIN code is locked, please never input the code casually. In this case, please call the hotline of the service provider for your SIM card, after simply checking about the user identity, you can gain the PUK code for free to unlock your phone.

 **Caution :**

Please be careful when use this function. If you forget PUK code, please consult your network operator. If you incorrectly input the PUK code ten times in succession, the SIM card will be scrap.

Select the desired SIM type and have the following options:

- ❖ **Activated:** You should input PIN code each time switching the phone on.
- ❖ **Modify:** You should activate PIN code before modifying it.
- ❖ **Off:** You should input the correct PIN code before deactivating it.

11.5.2 PIN2

PIN2 code is the personal identification code required for some certain functions (such as set fixed number, set phone fare, etc).

PIN2 code is another password provided together with SIM card by service provider. If wrongly input it for three times in succession, the phone will be locked until correct PUK2 code entered, for detailed operation, please refer to PIN code and PUK code.

 **Caution :**

If you incorrectly input the PUK2 code ten times in succession, you will not be able to use SIM card. Please be careful when use this function.

11.5.3 Privacy

Secured by phone password, the phone will be protected from other unauthorized users. When password function has been activated for call logs or message, you have to enter correct password on corresponding main menu or sub-menu. The defaulted password is "1234".

11.5.4 Auto keypad lock

After activating this function, the phone will be locked automatically if the time you set is arrived, so as to avoid error operations.

- ❖ **Manual lock keypad:** On the Home screen, press **【Left Soft Key】**, then press **【* Key】** to lock the keypad manually.
- ❖ **Manual unlock keypad:** On the Home screen, press **【Left Soft Key】**, then press **【* Key】** to unlock the keypad manually.

11.5.5 Lock screen by end- key

Once activated this function, when the backlight is on, press **【End Key】** to turn off

the backlight and auto lock the keypad.

11.5.6 Power-on password

You should set the power on password when you use this function for the first time. After activated this function, you should input password each time you switch the phone on.

Caution:

Power-on password doesn't have the limitation for wrongly inputting. Please remember carefully about the Power on PWD, otherwise, the phone won't be switched on normally once password forgotten.

11.6 Connection management

11.6.1 Network account

You can select the desired network account, and add the desired account by yourself as well.

12. Services

On the Home screen, press **【Left Soft Key】** and select **[Services]**.

- ❖ **SIM1:** By selecting this option, your mobile phone will directly visit the preset or defaulted homepage.
- ❖ **SIM2:** By selecting this option, your mobile phone will directly visit the preset or defaulted homepage.

Caution :

- 1 . Your network service provider may not support some functions. In order to ensure the browser work normally, please confirm first that your SIM card supports and have the Internet function activated.
2. If you browse the web page, flowrate fee will be charged.

13. Safety Precaution

13.1 Usage environment

Please remember to obey relevant rules and regulations whenever use your phone. This will prevent bad effect from you and the environment.

- ❖ Switch off your phone near explosive places, such as gas station, bunkers, chemical factories or blasting scene, and adhere to any safety signs and instructions there. Breaking any rules may cause explosion or injury.
- ❖ Phone using in plane will interfere with the flight operation and bring dangers. Therefore, please do switch off your phone before boarding, and make sure it is power off during the whole flight.
- ❖ Please keep the phone in its special bracket while you're driving. Please don't put it on a seat or in places where it could fall off when the car encounters collision or break. In order to ensure safe driving and avoid road accidents, please don't use the phone when driving. If you must use it,

please use the phone's hands-free asset or park at roadside before making or answering a call.

- ❖ Please put the phone away from the high temperature environment, for explosion might be caused when the battery is of excess high temperature.

13.2 Medical devices

Please switch off your phone in areas near the electronic medical equipments that obviously requires switching the phone off (Such as heart pacemakers, hearing aids, etc). Most medical devices can shield the phone's RF signal, but some can't. If you have any doubts or need to find out more, please consult your doctor or medical device manufacturer.

13.2.1 Pacemaker

Pacemaker manufacturers advise the distance between your phone and heart pacemaker should be 6 inches (15.3 cm) at least, otherwise the phone could interfere with the pacemaker.

The personnel who wears pacemaker should do the followings:

- ❖ Should always keep a distance (at least 6 inches) between the phone and pacemaker, when the phone is switched on.
- ❖ Should not have the phone in a breast pocket
- ❖ Should listen to the phone closer to the ear which is farther from the pacemaker.

 **Caution:**

Please switch off your phone while you feel there is interference, and consult the doctor timely.

13.2.2 Hearing aids

Mobile phone might bring some interference to some hearing aids. If so, please consult the hearing aids manufacturer.

13.2.3 Emergency calls

As the phone uses a radio signal, wireless and ground communication network and personal settings functions like other phones, it is impossible to ensure your phone can be connected successfully in any situation, so please don't rely purely on your phone as the only means of notification in cases of emergency (such as medical first aid).

Make an emergency call

If your phone is switched off, please turn on your phone and check whether the network signal is strong enough.

- (1) Input the local first aid number correctly (such as 120), different areas have different first aid numbers.
- (2) Please press ***the call key*** to call.

 **Caution:**

While making an emergency call, you should try best to provide all important information precisely. At this time, the phone may be the only communication tool, so don't end the call without permission.

13.3 Cautions for battery charging

The phone provides power by using a lithium battery. The standby time and call time will be influenced by the system's environment and phone settings.

- ❖ Please use the approved battery and charger designated for this product. The company will take no responsibility for damage caused by unauthorized battery or charger.
- ❖ The battery icon will start scrolling when the phone is charged in power-on-state.

 **Caution:**

- 1 . If there is no battery left at all, then the battery icon will appear after 2-3 minutes of charging. The battery charging time depends on the status of the phone (whether switched on, making a call), usually, it will take about 2-5 hours.
2. To make the new battery achieve its best capacity, please charge and discharge the phone for twice or three times. Please charge the new battery over 10 hours for the first several times.

- ❖ Don't use wet hands to touch the battery or charger while charging in order to avoid danger.
- ❖ Try not to use the phone while charging.
- ❖ The battery icon stops scrolling while the battery is full, and then you can disconnect the phone from the charger adapter.

13.4 Cautions for battery usage

The battery usage depends on the network, phone setting and usage situation.

- ❖ Never use any damaged battery.
- ❖ The phone will consume a little power if it is near network station. Therefore, the call and standby time depends greatly on the signal strength of honeycomb network and the parameters set by network operator.
- ❖ Only use batteries and charges authorized for this device, otherwise, explosion might be caused. Please disconnect the charger while unused. Do not leave the battery connected to a charger over one week, for overcharging may shorten the life length.
- ❖ Do not connect the anode and cathode of a battery inversely.
- ❖ Do not leave the battery in places with over-high or over-low temperature, otherwise, the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery in room temperature.
- ❖ Do not short-circuit the battery. This may damage the electronic core or internal protected circuit. If you keep the unused battery in the pocket or bags, metal objects (eg. coin, clip or pen, etc) inside might have the anode directly contacted with the cathode of the battery and caused accidental short circuit. Therefore, please carefully and separately store the battery.
- ❖ Don't burn your phone battery or treat it as common rubbish. Please adhere to the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries in time.
- ❖ If your phone, battery or other charging device is accidentally penetrated by water, you must not put it inside any calefaction equipment (such as drier, microwave oven etc.) to dry it. The phone or other products may go wrong,

and may even cause the phone, battery or other charging device to burn, expand and explode.

- ❖ Please deal with the discarded battery according to the relative introduction. The company will take no responsibility for any direct or indirect damage caused by user error.

13.5 Cautions for spare parts usage

- ❖ Please put all spare parts (such as SIM card, storage card, battery etc) out of reach of children, in case danger occurs.
- ❖ Please do switch off the phone and unplug the phone and charger before you removing the battery from the phone.
- ❖ As the phone's spare parts are not waterproof, please keep all spare parts dry.
- ❖ You should pull out the plug of any spare part correctly when you switch off the power, don't drag the power line forcibly.

If the phone, battery, and charger don't operate normally, please contact closest qualified maintenance centres timely.

13.6 Other safety information

- ❖ If you don't use your phone, it's better to switch it off and remove the battery so as to save energy and avoid cellular radiation.
- ❖ Please don't have the volume over loud while using the phone, which might impair your hearing.
- ❖ The unprofessional shouldn't disassemble the terminal and battery of the phone.
- ❖ It is recommended that you should try not to use the holster with magnet button, for the magnet may interfere with the phone signal, and hard iron button may crush the LCD screen. Plastic phone cover will lead to poor volatilization of vapor and have the internal components corrupted, moreover, it can have the phone shell oxidized and faded.
- ❖ If you or your family has a medical record of dizziness or epilepsy, please consult with the doctor first, if you want to play phone games or use the flashlight (the flash doesn't available in all phone models).
- ❖ Please don't put the flashlight too close to the eyes of human beings or animals, as this could do harm to the eyes.
- ❖ Should avoid the phone falling off from high places.

Note:

- 1.The socket-outlet shall be installed near the equipment and shall be easily accessible.
- 2.There may be the risk of explosion if the battery is replaced by the wrong type.
- 3.Dispose of used batteries according to your guidelines.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

Specific Absorption Rate (SAR) information:

This wireless phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device types: Z1 (FCC ID: A4JZ1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.70W/kg and when properly worn on the body is 0.81W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its

assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.