

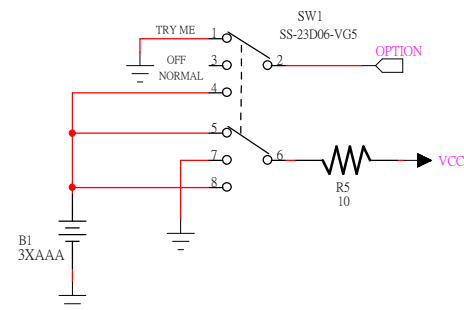


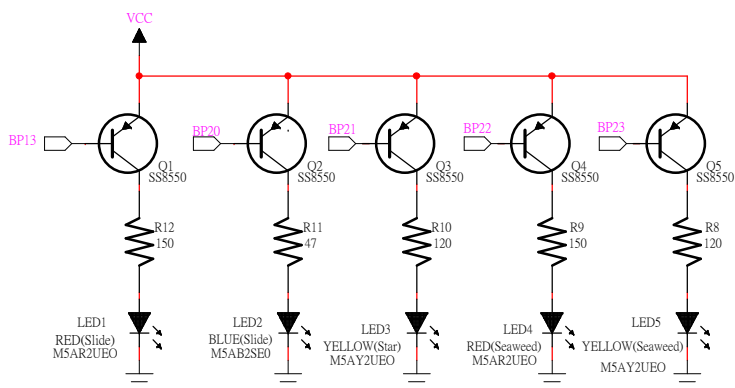

	RS4	RS3	RS2	RS1	RS0
A	F	F	F	F	GND
B	F	F	F	GND	F
C	F	F	F	GND	GND
D	F	F	GND	F	F
E	F	F	GND	F	GND
F	F	F	GND	GND	F
G	F	F	GND	GND	GND
H	F	GND	F	F	F
I	F	GND	F	F	GND
J	F	GND	F	GND	F
K	F	GND	F	GND	GND
L	F	GND	GND	F	F
M	F	GND	GND	F	GND
N	F	GND	GND	GND	F
O	GND	F	F	F	F
P	GND	F	F	F	GND
Q	GND	F	F	GND	F
R	GND	F	F	GND	GND
S	GND	F	GND	F	F
T	GND	F	GND	F	GND
U	GND	F	GND	GND	F
V	GND	GND	F	GND	GND
W	GND	GND	F	F	F
X	GND	GND	F	F	GND
Y	GND	GND	F	GND	F
Z	GND	GND	GND	F	F
XX	GND	GND	GND	F	GND

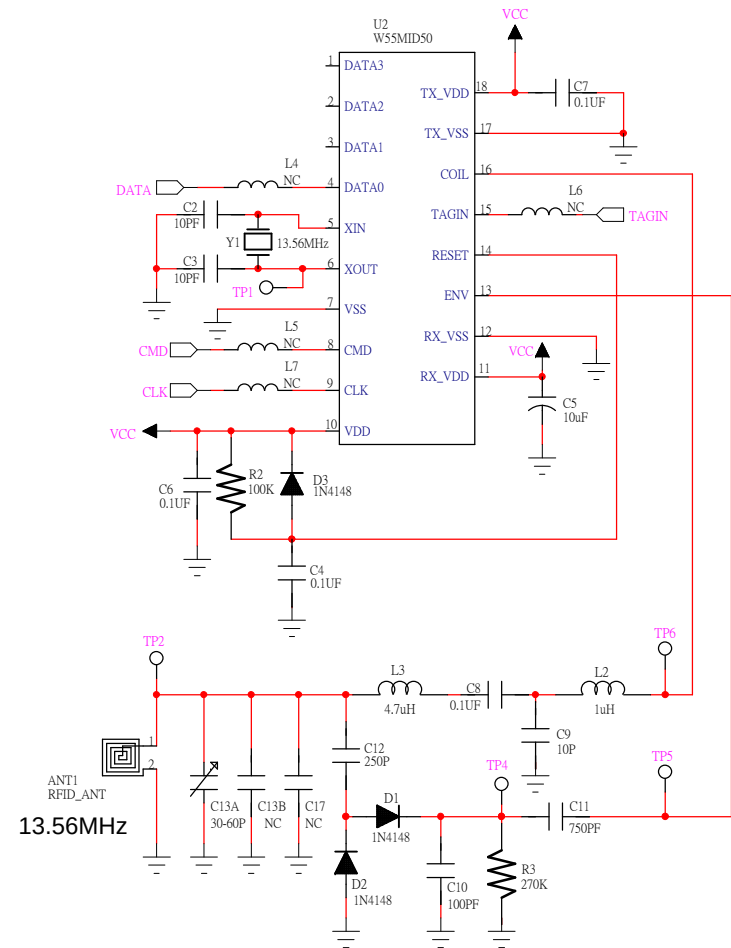

Calibration mode: Connect BP12 to GND then power on the IC, a 125Hz wave will generate on BP13