 
 


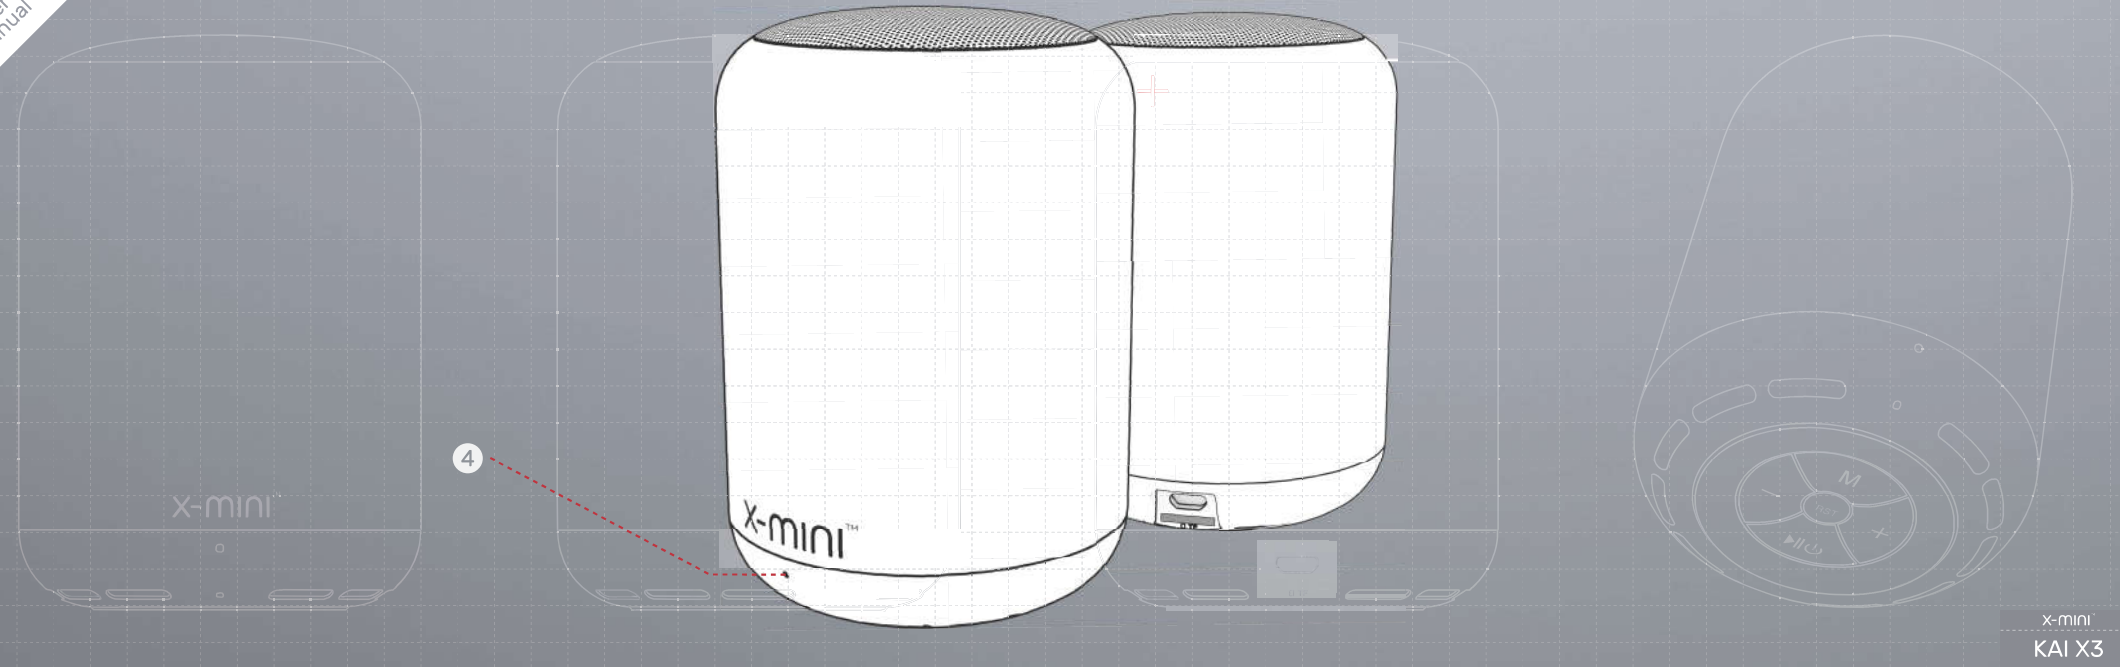


x-mini™
KAI X3

Bottom view

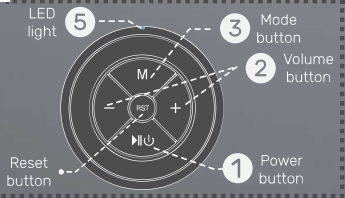

 Back view




micro SD/TF mode:
1. Insert micro SD card before switching speaker on. Press knob to play music through SD mode.
2. Insert micro SD card after switching speaker on. Music will play automatically in SD mode.

*Support various formats in MP3, FLAC, WMA, WAV, APE. For more information, please refer to X-mini™ support.

*Use only Original micro SD cards to avoid damaging the speaker. Warranty does not cover damages resulted from use of non-Original accessories.

 1 Power button




Pairing devices:
Press and hold power button until power on prompt is heard. Search for new Bluetooth device and select X-mini™ KAI X3. The connected prompt is heard once the speaker is paired successfully.

*If pairing is unsuccessful, switch off and on X-mini™ KAI X3 to reattempt.

Disconnecting devices:
Press and hold power button until power off prompt is heard.

 
2 Volume buttons

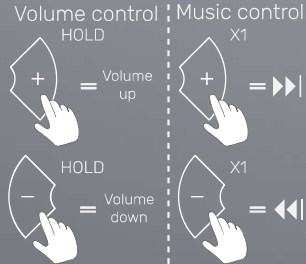

Volume control:
Press and hold + volume button to increase volume
Press and hold - volume button to decrease volume

Music control:
Press + volume button once to change to next song
Press - volume button once to change to previous song

 3 Mode button

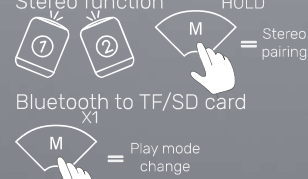

Stereo mode:
Power on two X-mini™ KAI X3s. Press and hold mode button on one X-mini™ KAI X3 (master, left side). Connected prompts are heard once the speakers are paired successfully.

*If pairing is unsuccessful, power off and on both X-mini™ KAI X3s and repeat steps to reattempt.

Disconnecting stereo mode:
Press and hold mode button on either X-mini™ KAI X3.

Mode switch:
Press mode button once to switch between Bluetooth and SD modes.

 
4 Microphone



Answering call:
Press power button once
End call:
Press power button twice

*Functions and indication tones may vary between devices.

5 LED light

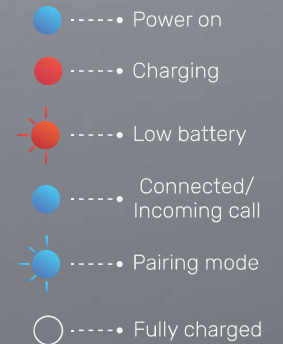

*Audio output gets softer and a warning tone is heard when the battery level of the speaker is low. Recharge before use.