




Instruction Manual

Content

Tablet pc introduction	3
Function keys	4
Interface introduction	5
Language settings	7
Screen brightness settings.....	8
Screen standby settings.....	10
SD card mount & unmount	11
HDMI Device output	13
Camera/camcorder settings	15
USB connection settings	16
WI-FI settings	18
Web browsing	20
APK installer	21
Text reader	23
Task manager.....	25
File manager	27
Music player.....	28
Video player.....	30
Picture browser.....	31
Email settings	32
Clock settings	35
Specification.....	37

Tablet pc introduction

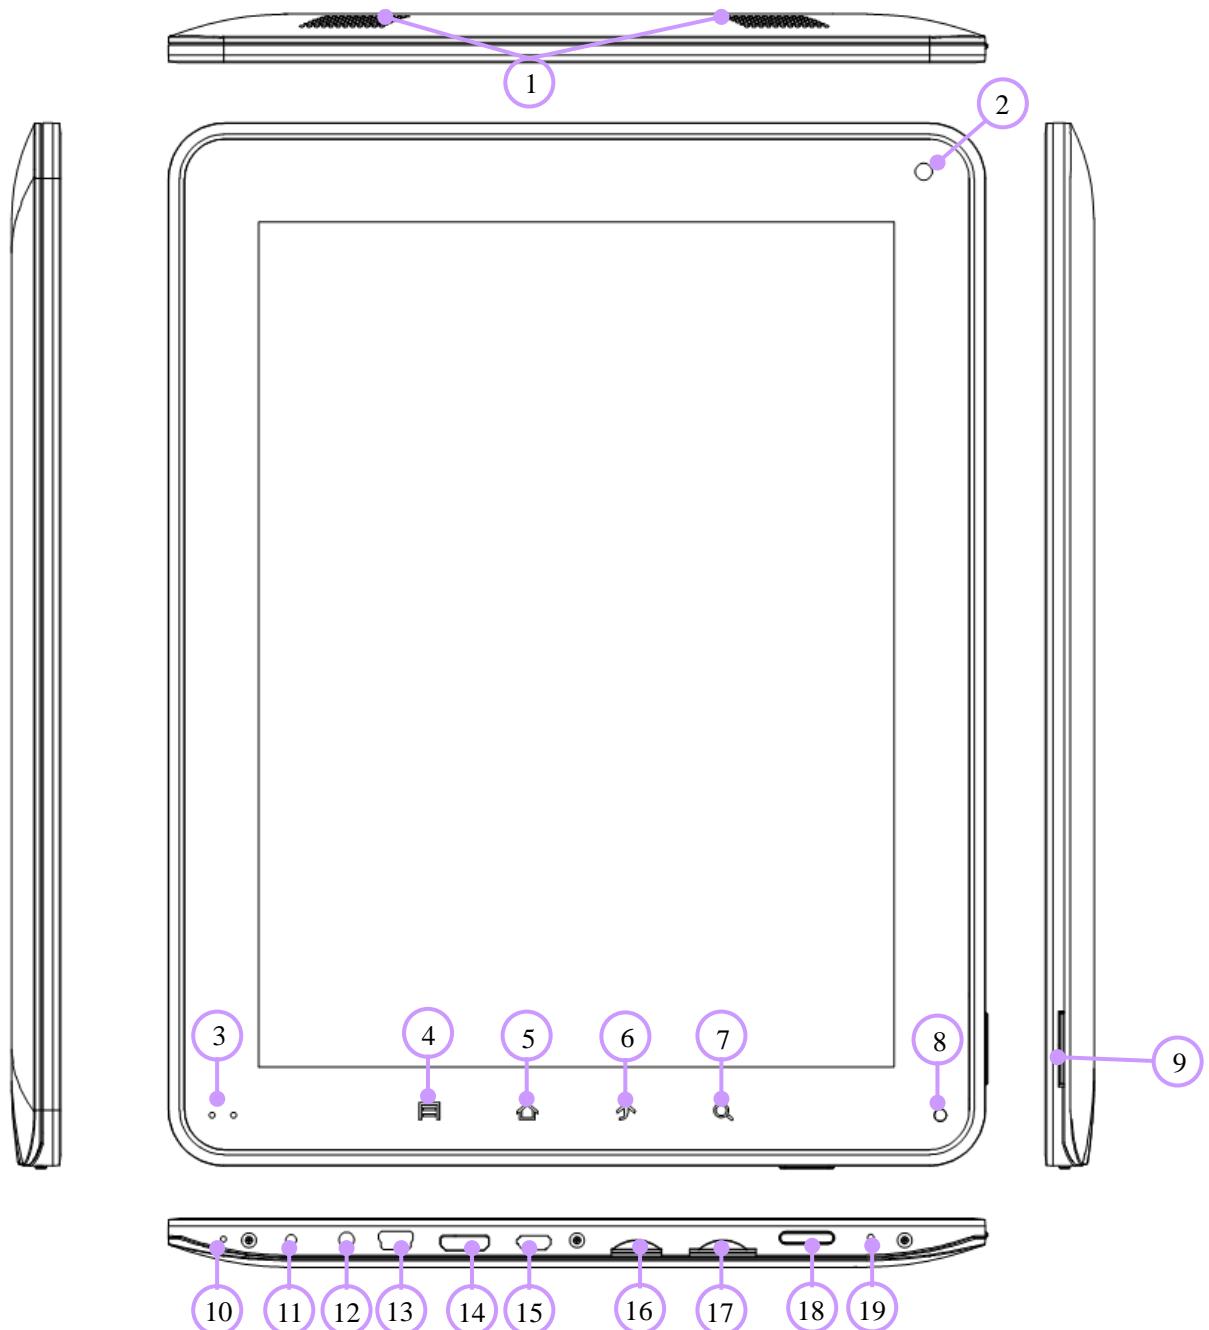

1. Speaker	7. "Search" Key	13. USB Jack	19. Reset Key
2. Camera	8. Sensor	14. HDMI Jack	
3. Indicator Lights	9. Volume+/-	15. Micro USB	
4. "Menu" Key	10. MIC	16. TF Card	
5. "Home" Key	11. Charge	17.3G Card	
6. "Backspace" Key	12. Earphone Jack	18. ON/OFF	

Function keys

Home key

- In option program, menu or webpages, press home key to back the main interface.
- Long press Home key, then display the applications opened recently.

Menu Key

- press Menu Key to display Menu lists.
- Press menu key again to close Menu lists.
- Long press Menu key to open/close virtual key.
- When the screen is locked, press menu key to startup screen; Press it again to unlock the screen.
(If you have set the unlock mode, you should unlock the screen according to your settings.)

Backspace key

- Press backspace key to back to the previous operation or previous interface.

Search Key

- Press Search Key to enter search input interface to browse webpage.

ON/OFF Key

When it is closed:

- Press ON/OFF key, it displays battery charging interface
- Long press ON/OFF key, Tablet PC turns off

When it is open:

- Press ON/OFF key to lock screen and entering sleeping mode.
- Long press ON/OFF key, then it will popup mode selection window, there are silent mode and shut down for option.

Volume Key

- Press + to increase the volume.
- Press – to reduce the volume.

Recovery factory setting

- Press "volume + " button and "reset" button together, it shows red screen, then start recovery factory Settings


Update system version

- Press "volume-" button and "reset" button together, it shows blue screen, then it shows update status.

Accessories

Tablet pc	Power adapter
USB cable	Instruction Manual
Warranty Card	

Interface introduction

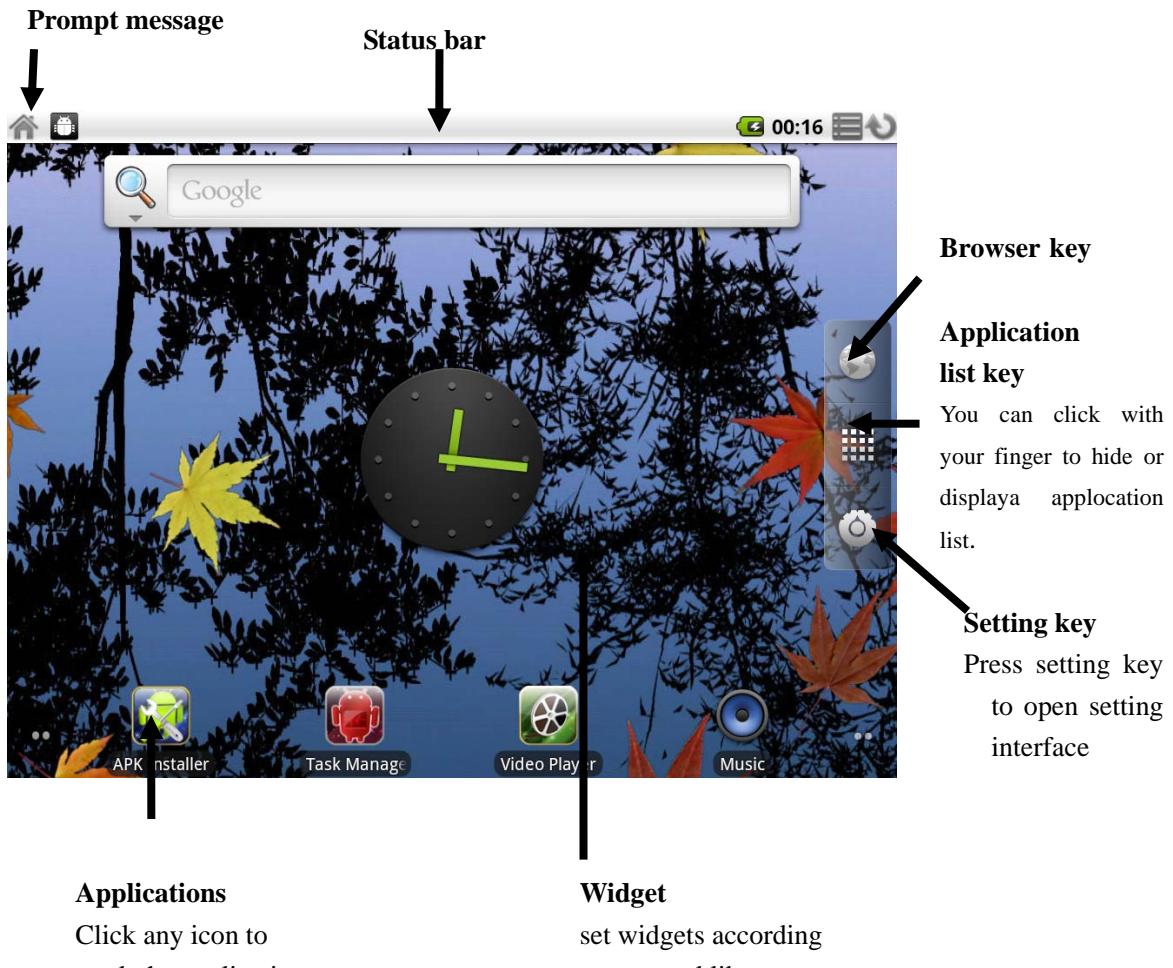

Main interface

Main interface equal to the computer desktop,
You can place application shortcuts and widgets.

Prompt message and connection icons

Pay attention to the status bar on the top of screen, if icons show on the left, it means to remind you playing music or using other operations. On the right of the status bar, there are alarm setting, Wi-Fi connection and battery charge and so on..

Reading tips

When prompting message displayed on status bar, click it and open notification list on the screen with your finger

- Click selection window to open prompt message
- Click clear notification on the top of the tip column to read the full message
- Close the tip column

 
Widgets

Press the space of main interface last 1-2 seconds, then display "Add to main interface", select widgets to add application or other operations.

Application

Press and hold down the application. The delete button will appear in the application list button place. Drag the application to the delete button and you can delete the application.

The status bar icon instructions

	mute		charging
	Uploading & downloading		finished downloading
	3G service connecting & data exchanging		Wi-Fi service connected & available
	Alarm clock		Playing music
	SD card shortage of capacity		Battery power changes

Application list



Click application list key to pop out the application interface. Here will show all the applications.


You can click any application by your finger and enter it.

Press and hold down the application icon and the shortcut will be added to the main interface.


Press "Home" key in the application list interface to back to the main interface.

Language settings

1. Click “Setting” icon.
2. Click “Language & keyboard”.

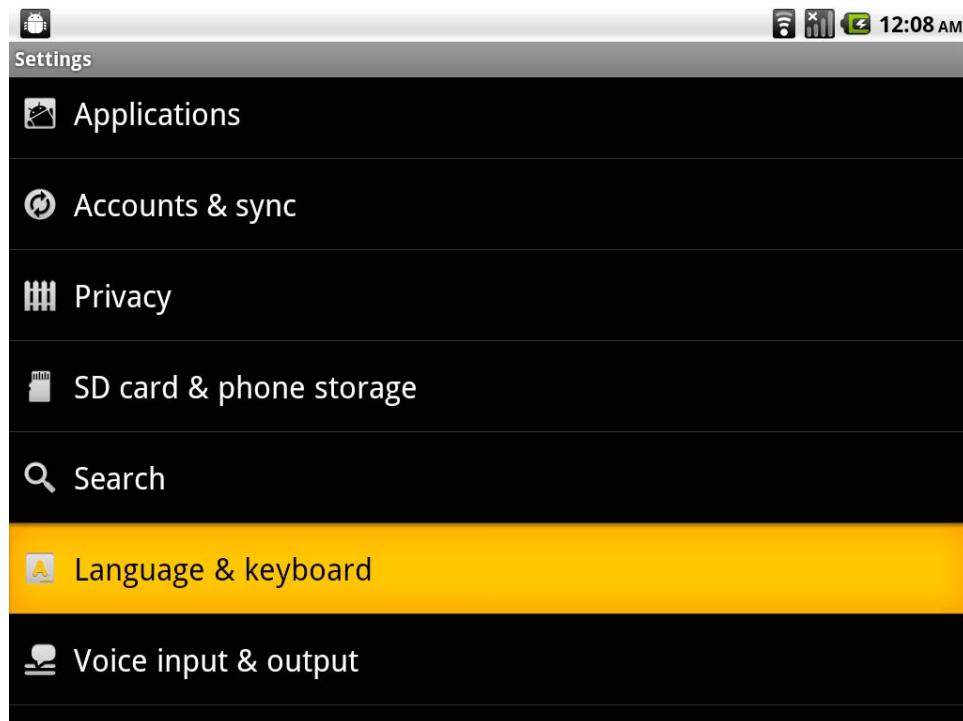

3. Select “Select language”.

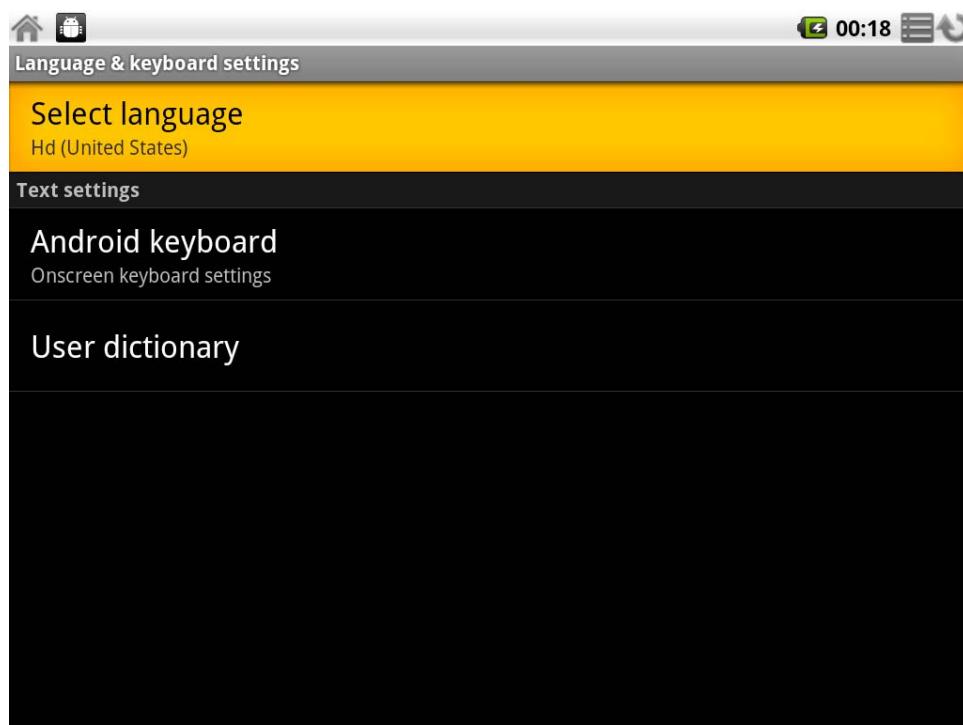


4. Click to select the language in the list.




Screen brightness settings


1. Click “Settings” icon
2. Click “Display”

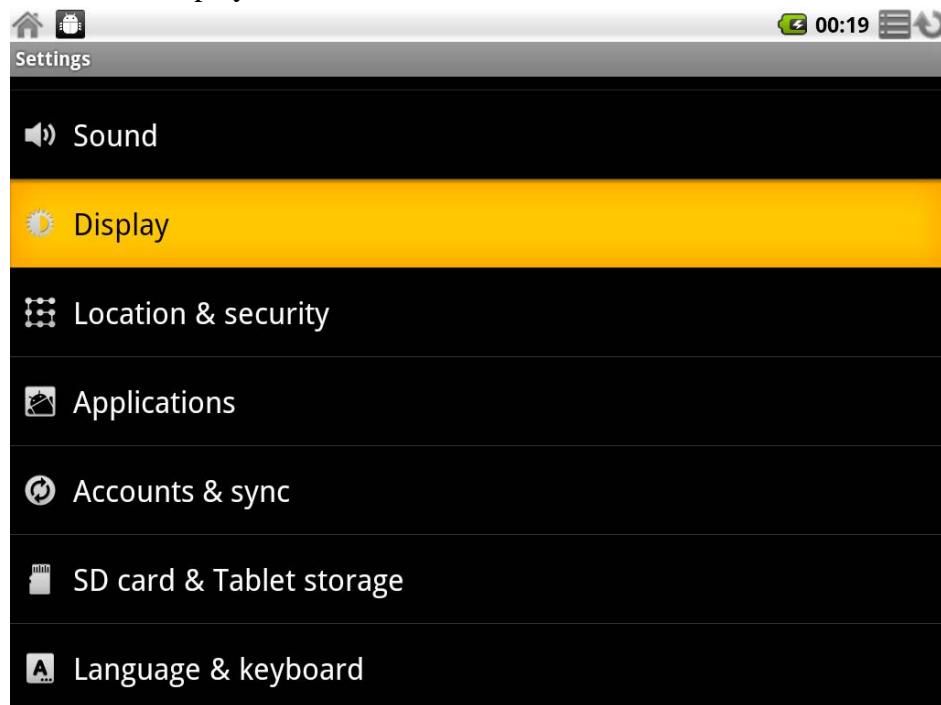

3. Click “Brightness”

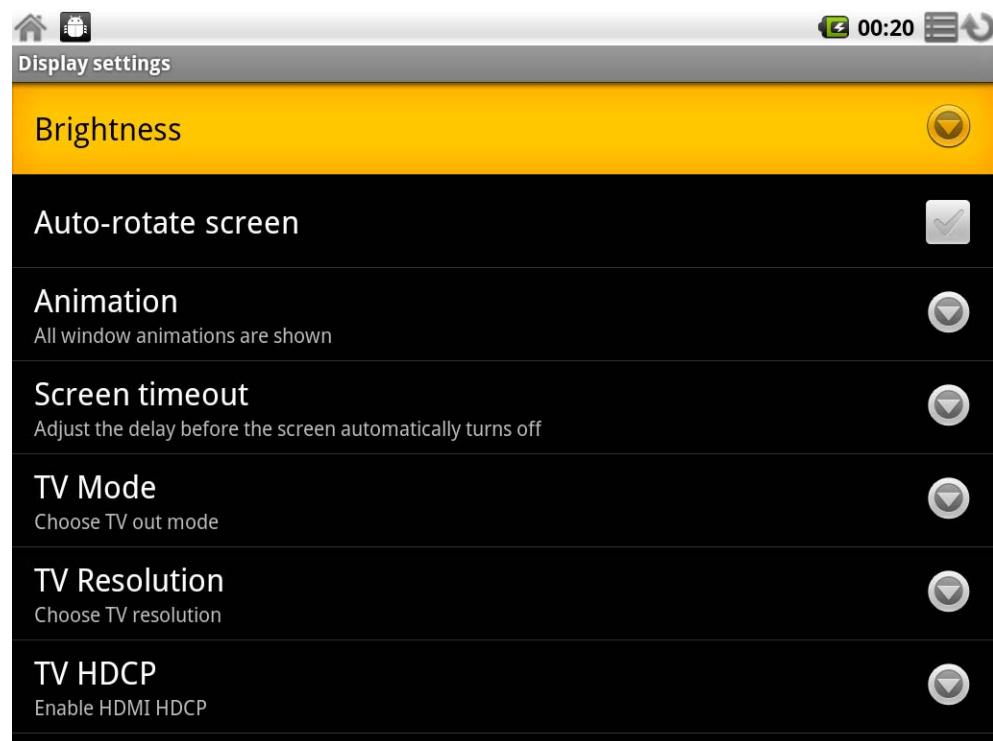


4. The users can adjust the brightness according to the need

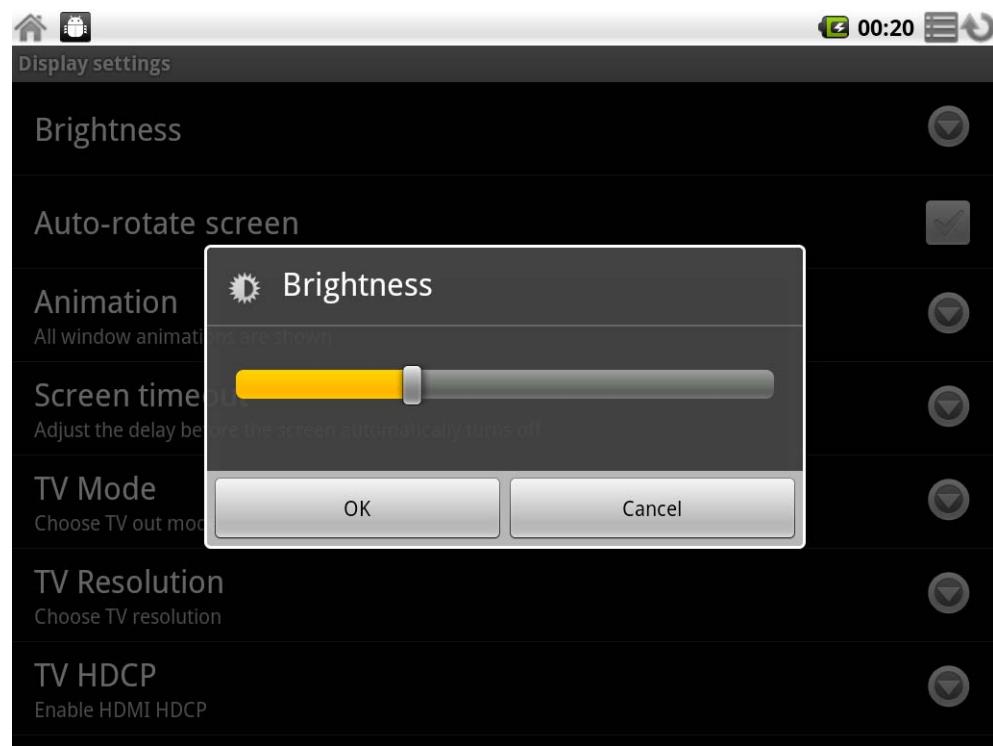


Screen standby Settings


1. Click “Settings” icon
2. Click “Display”

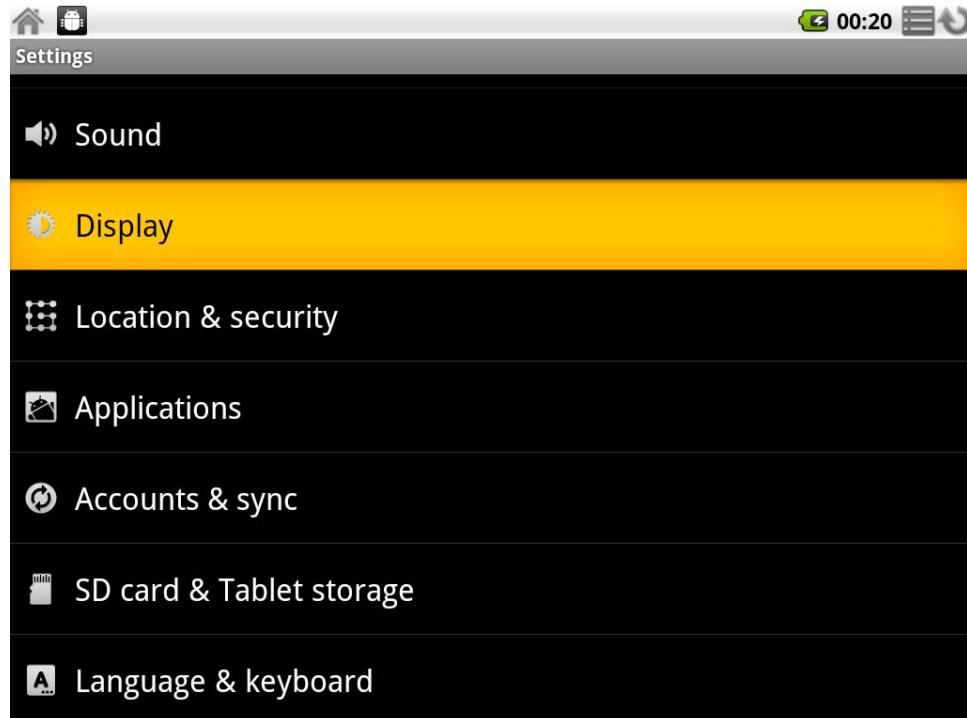

3. Click “screen timeout”

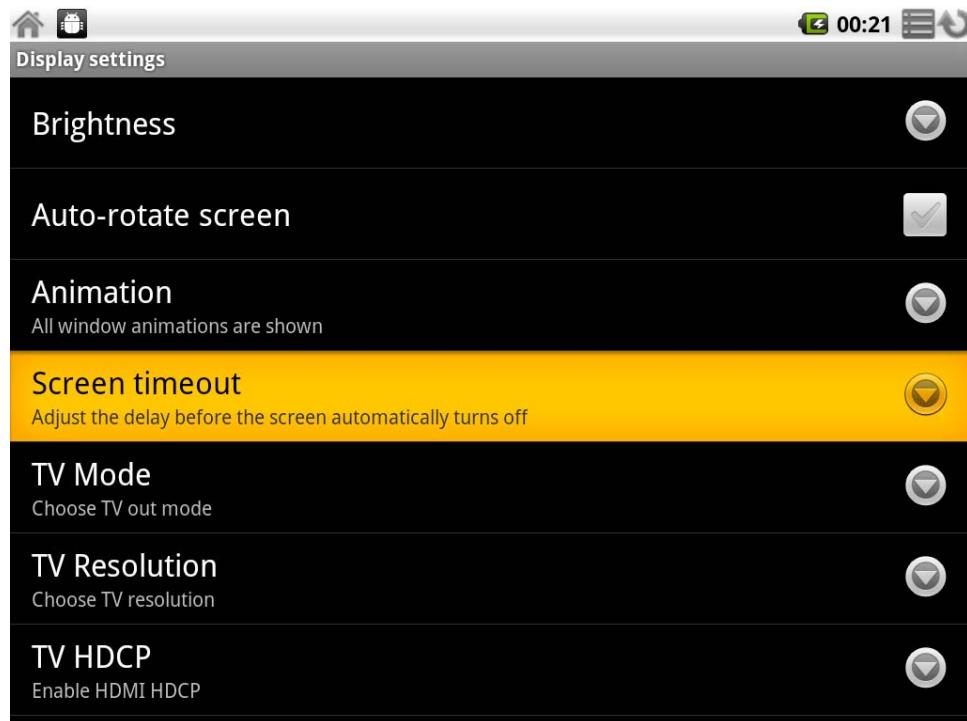


4. You can select the screen timeout according to need.

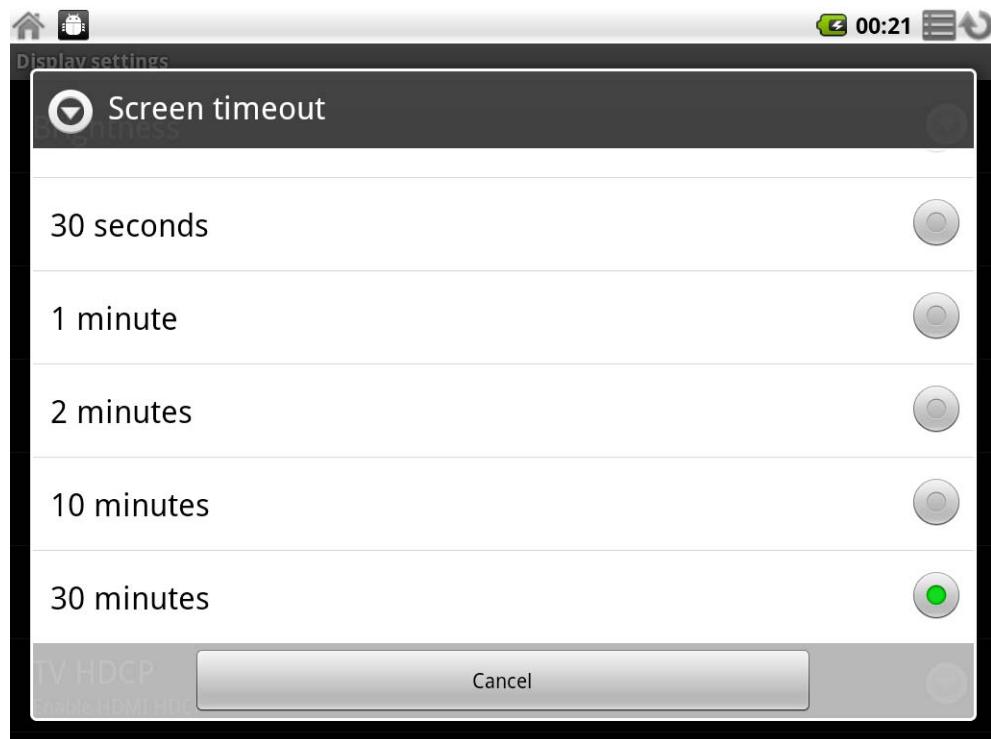

SD card mount & unmount

When SD card is correctly connected with the device,


1. Click "setting" key
2. Click "SD card and MID storage" to check connection status of SD card.

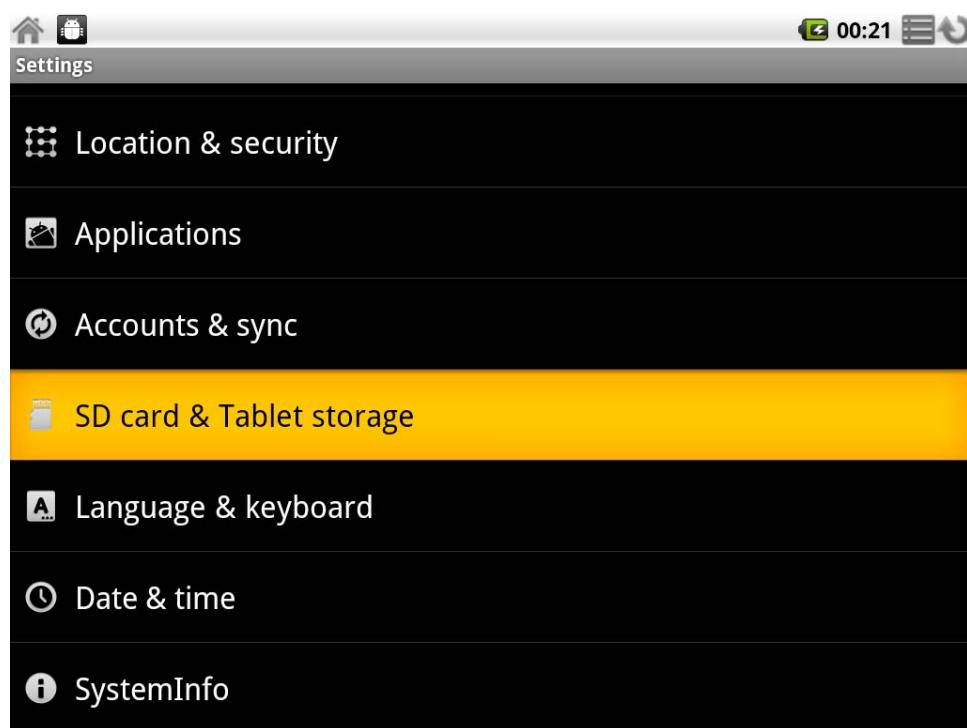

SD card installation


3. Select “Mount SD card” to mount the SD card.

Note: select “format SD card” and format SD card.

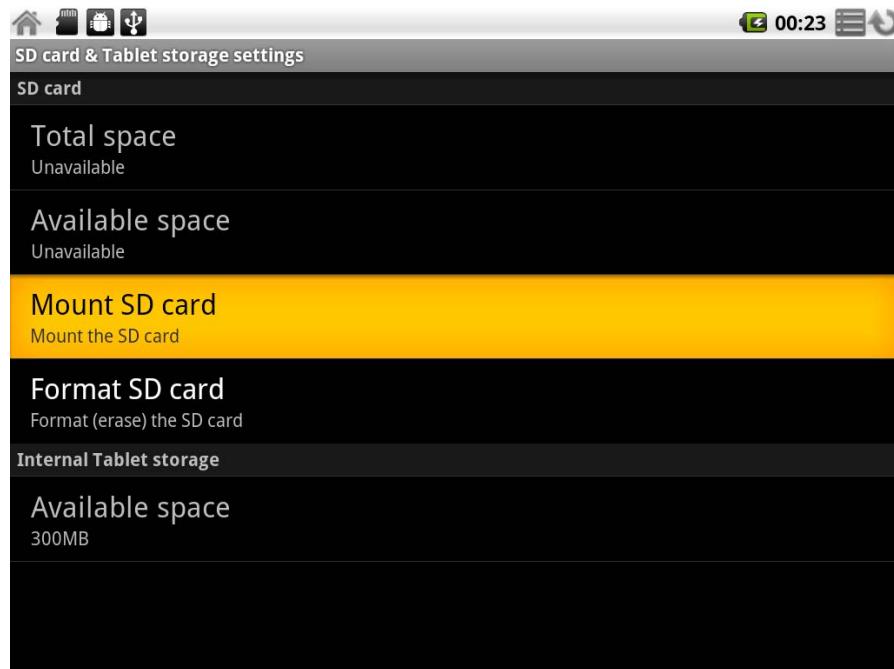


Unmount SD card

4. select “Unmount SD card” and unmount SD card.

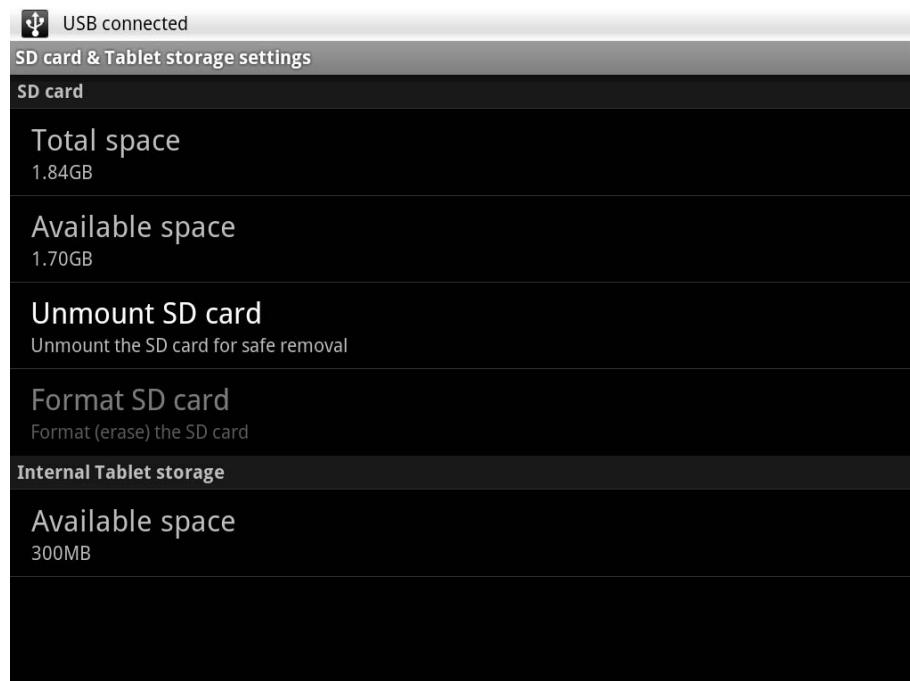


HDMI device output


1. Click setting---Display

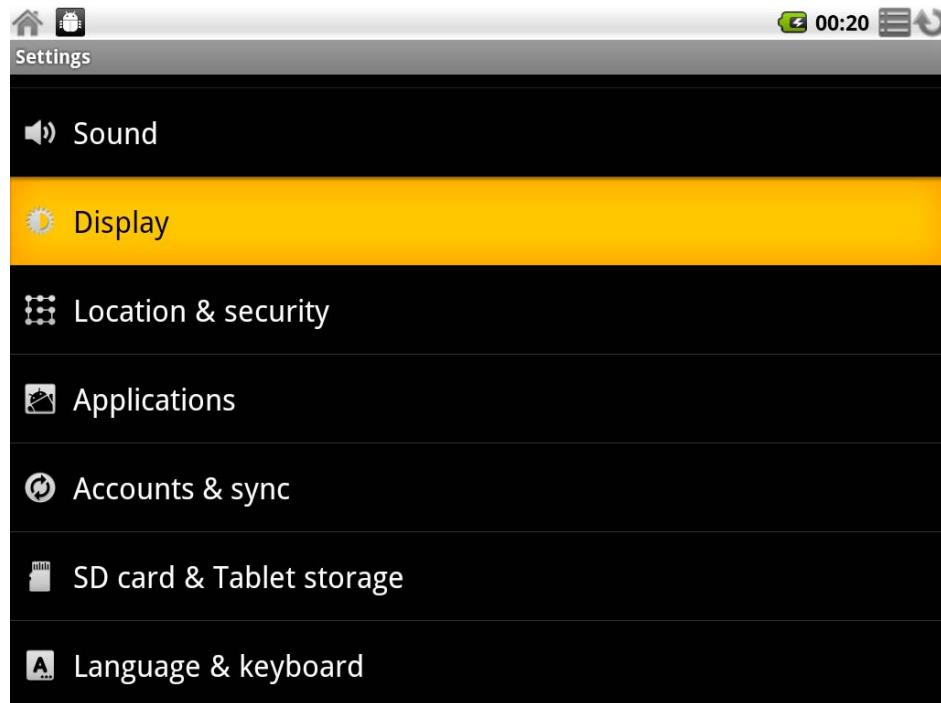

2. On screen interface can find TV output option

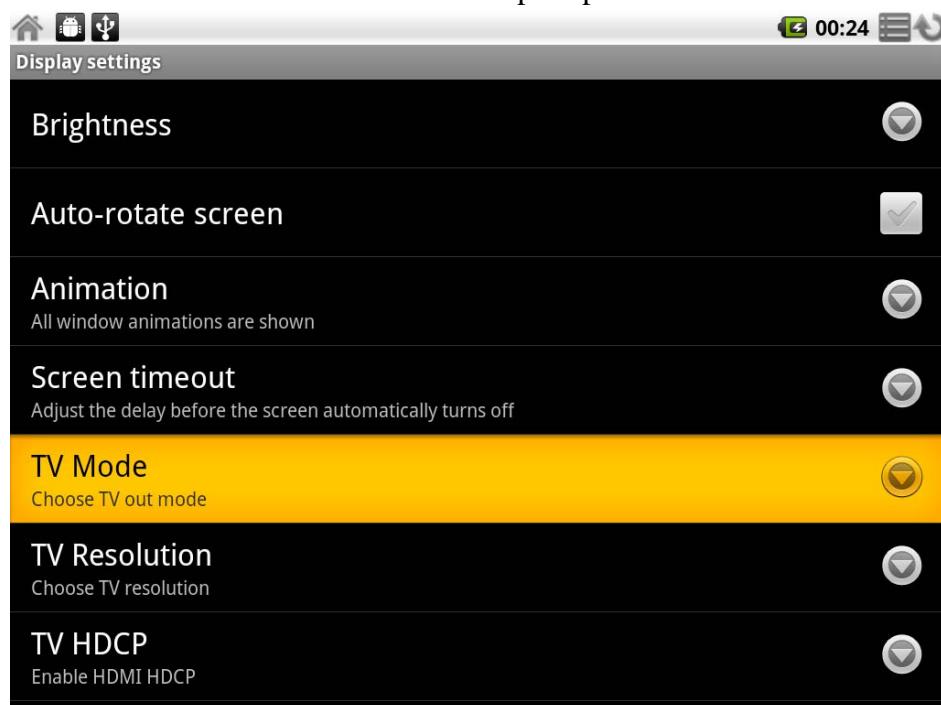


3. Click “TV Mode”, choose vedio output mode.

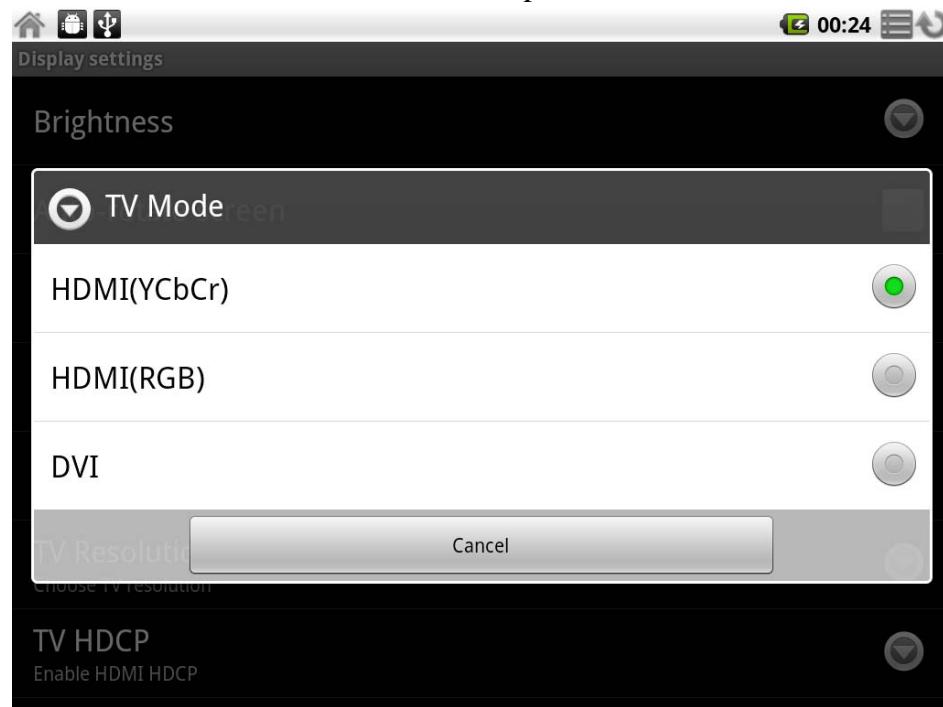


4. Click "TV Resolution", set TV resolution.



5. Click "TV HDCP", choose TV supports HDMI mode or not.

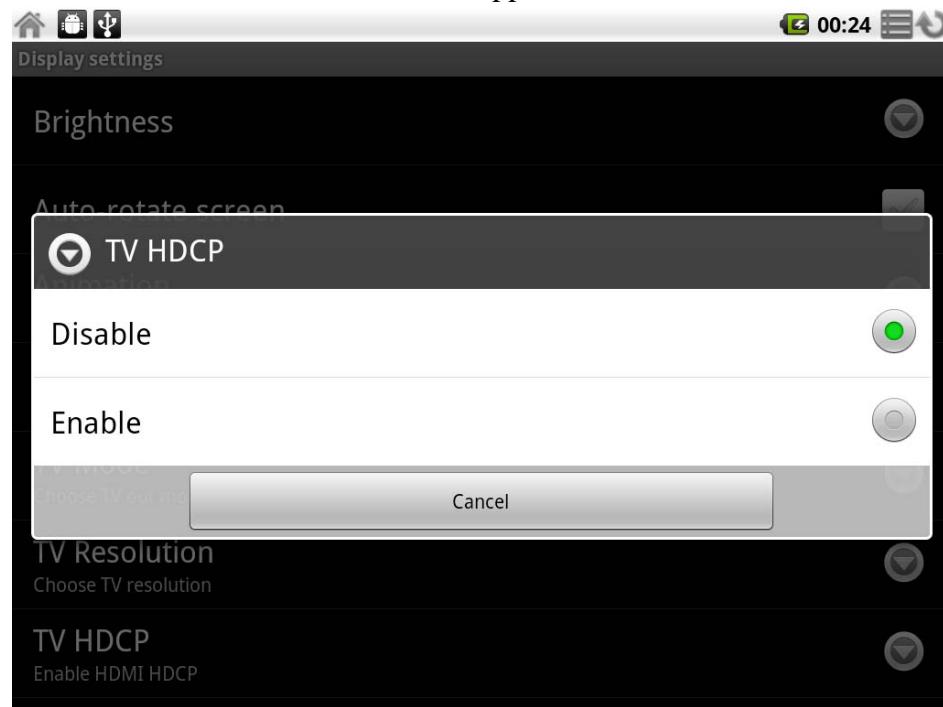


Camera/Camcorder setting

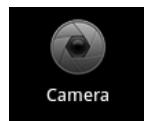

1. Click "Camera icon" in application lists to enter


Note: Please make sure you have inserted SD card when using

Camcorder mode

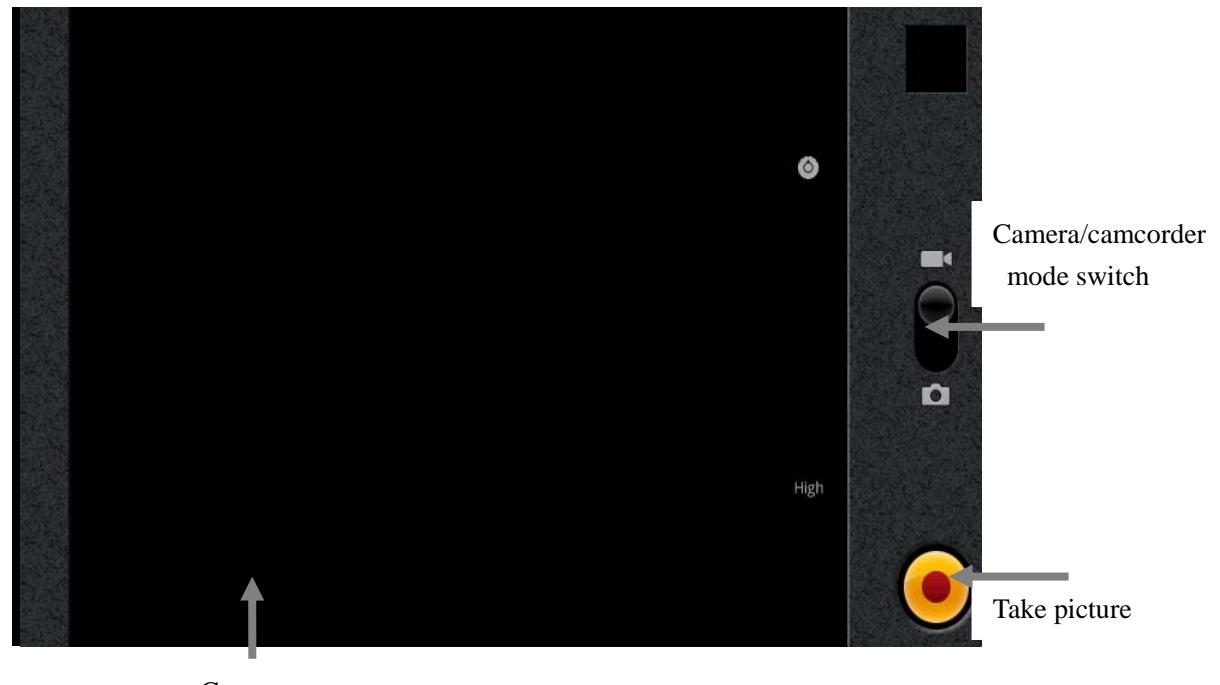


Camera screen

Camera Mode

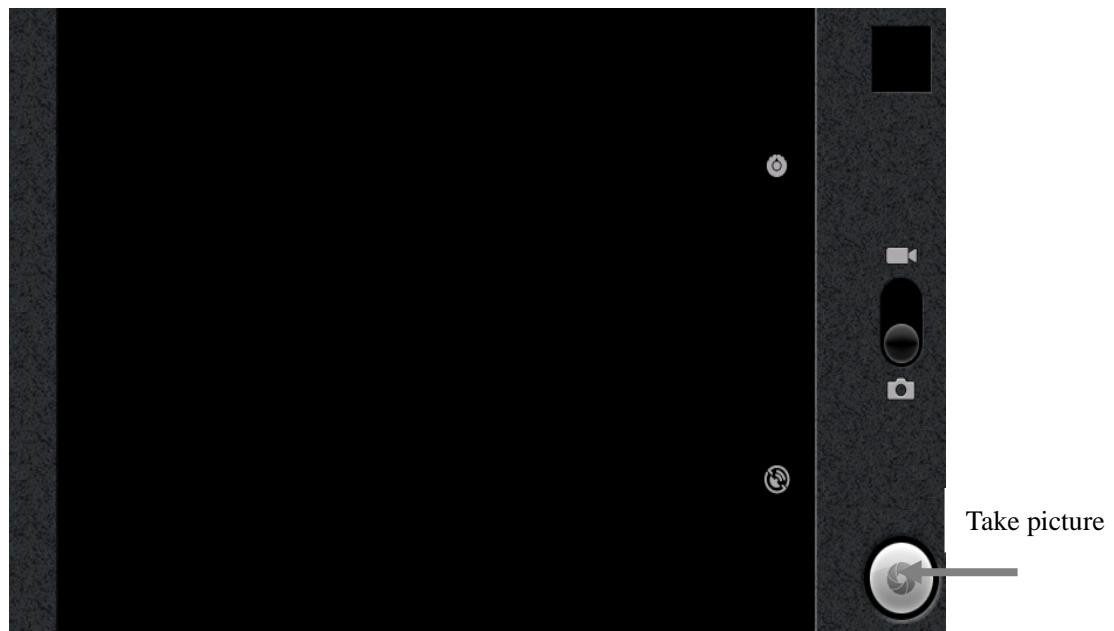


USB Connection Setting


It will display this icon when an USB is disconnected

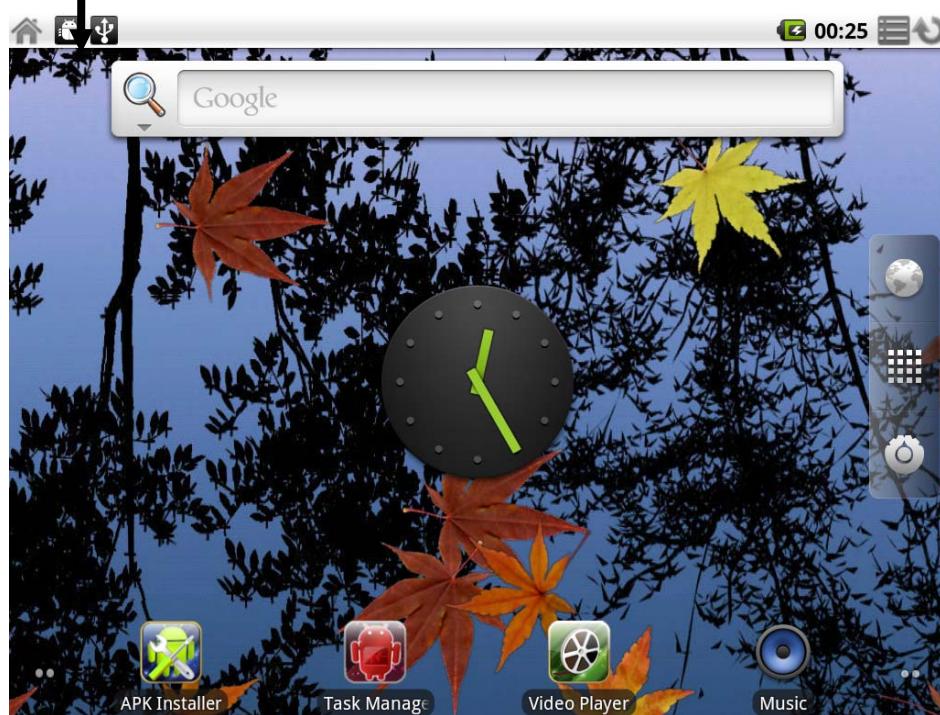


When USB is connected, following works more if need to use files saved in SD card by computer: 1. Press status bar and drag down, then the following information will be showed:

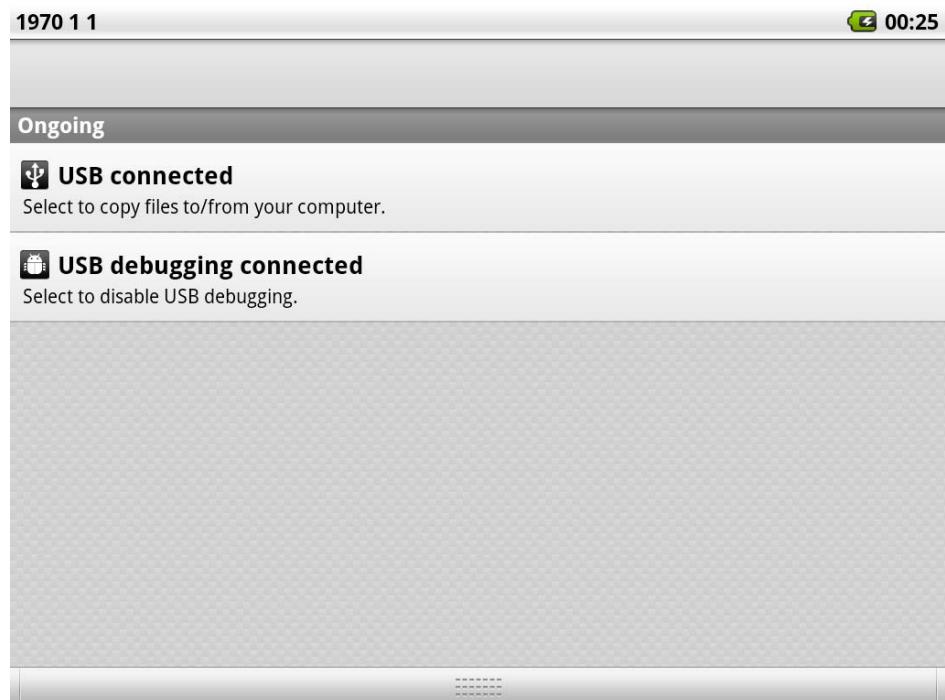

2. Select "USB connected", the following information will be showed:
Attention: One is built-in memory, the other is SD card.

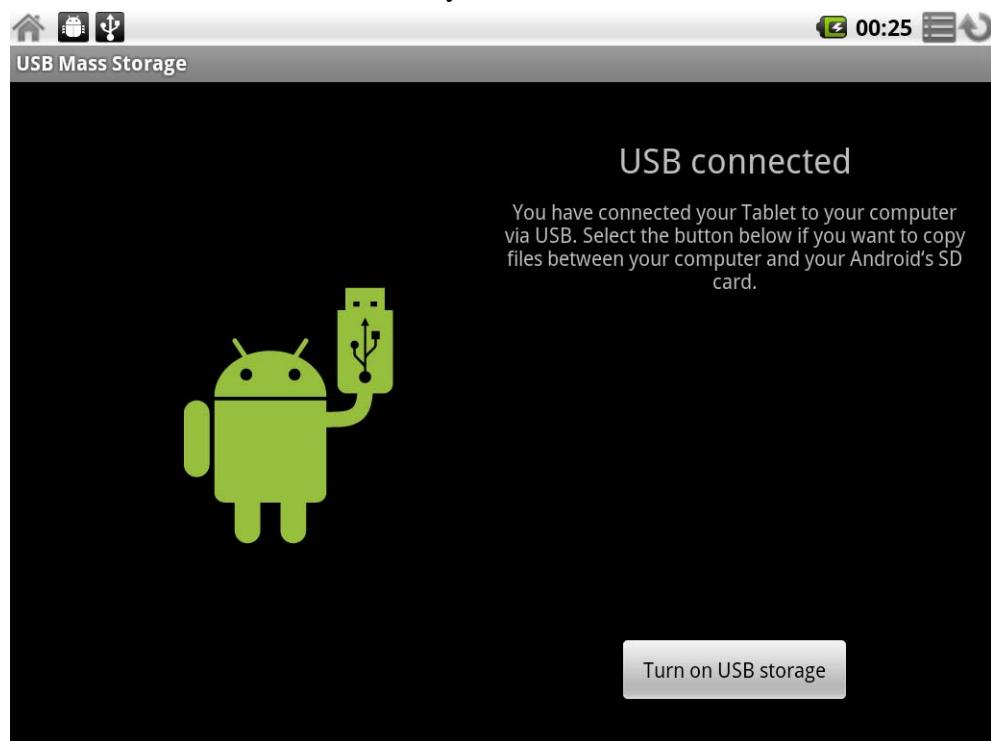

3. Click “open USB storage device” to install, then can use USB device via computer. The picture is for correct connection:

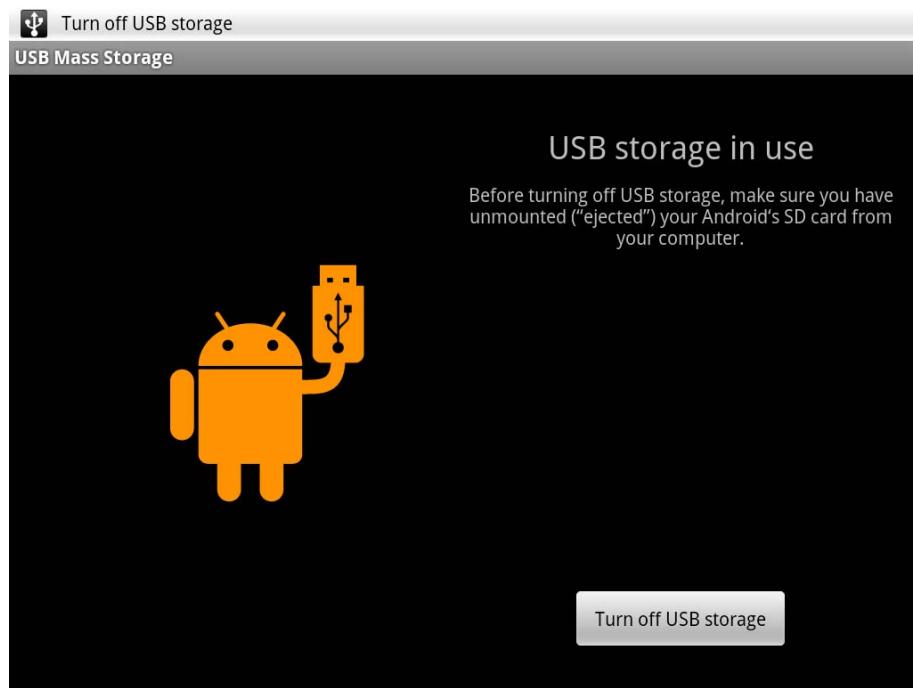


4. When need to remove USB device, click “close USB storage device” to remove safely.

Wi-Fi Setting


Click “WIFI setting” from application lists to enter WIFI setting interface.

Or click menu key to open, then select “Wireless & Networks” enter into WIFI setting interface.


1. Click Wi-fi to open

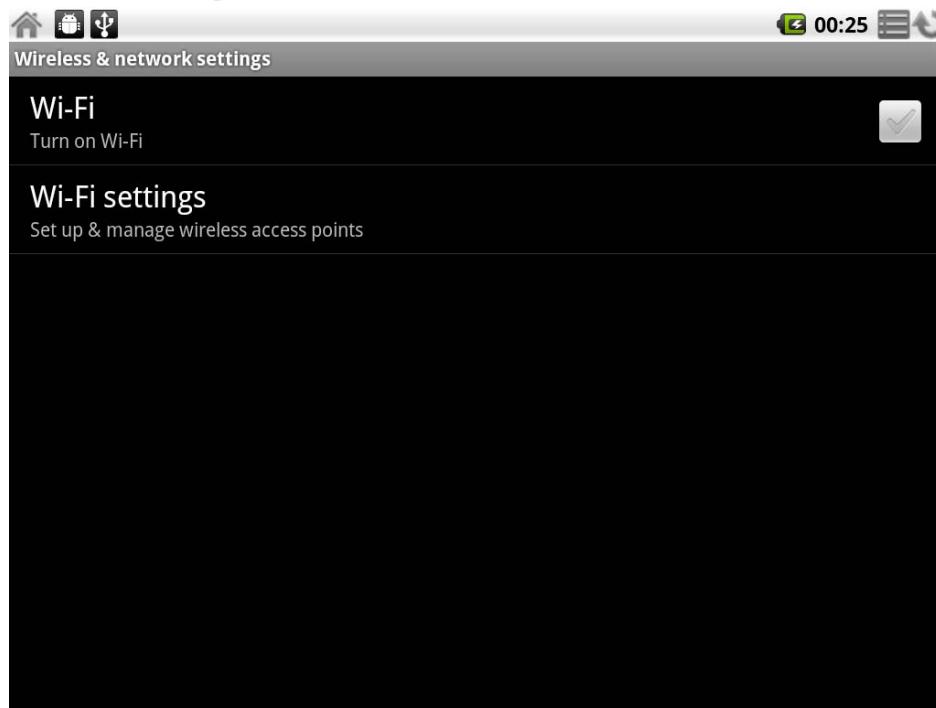


2、Click “Wi-Fi setting”, automatically search the available wireless networks.

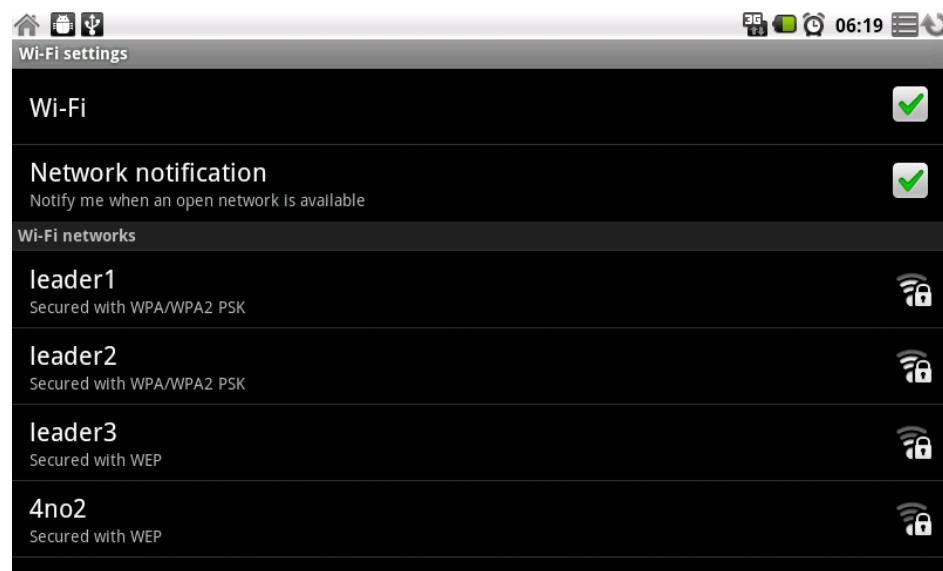

3. Input wireless network password and click “Connect”.

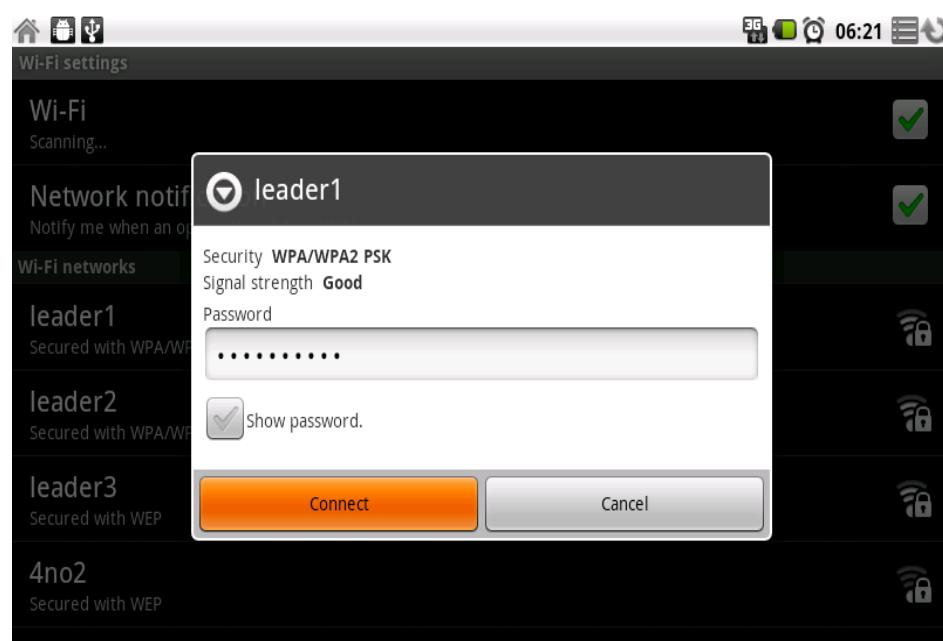

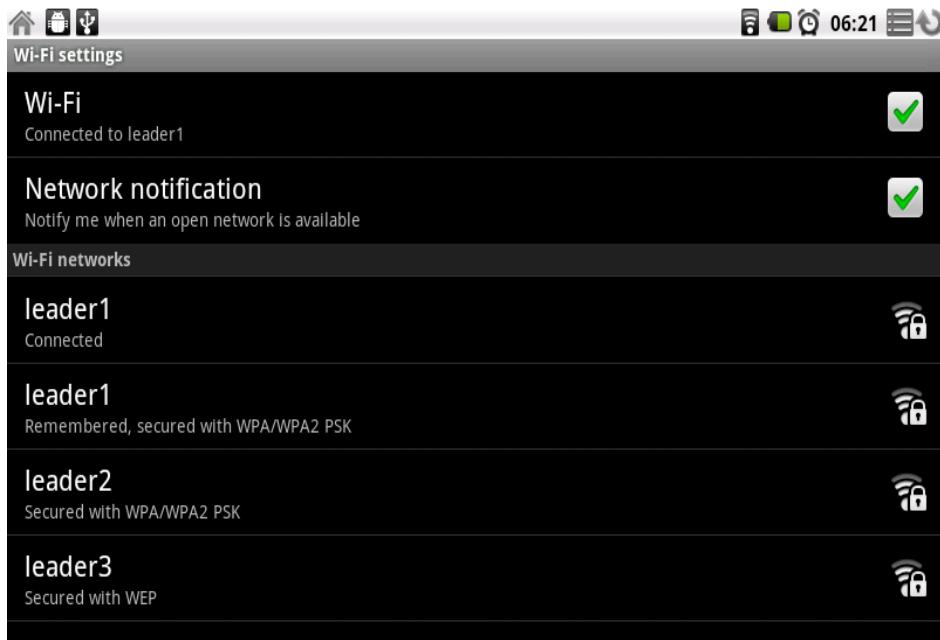

Tablet PC connect to Wi-Fi with the following way:

1. Enter into main interface to click Menu Key
2. Click setting
3. Click “Wireless & networks” key to open “Wi-Fi” network
4. Click “Wi-Fi setting”, automatically search the available wireless networks
5. Select Wi-Fi network to connect
6. input password to enter
7. Click “connect”.

Attention:

Tablet PC will consume much power when connecting Wifi, please close Wifi when don't use it.

Web browsing


Attention: before using browser, please make sure Wifi service is open.


Click “Browser” icon to enter into interface, input website to enjoy internet

APK installer




1. Enter into APK installation interface


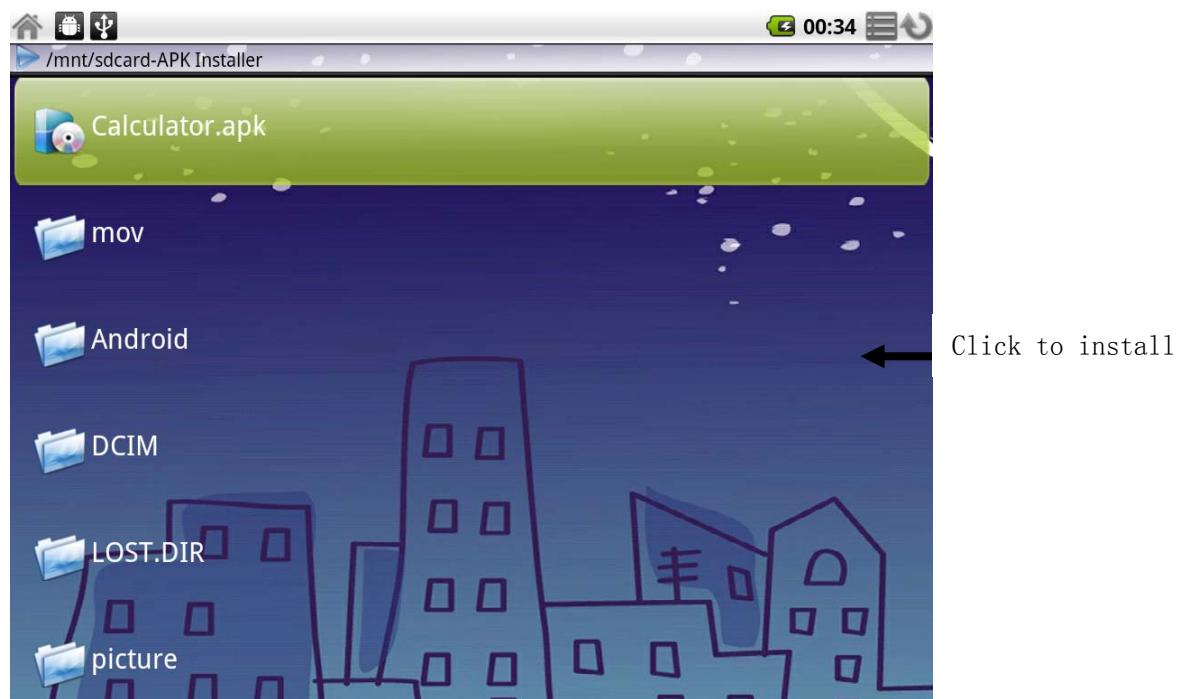


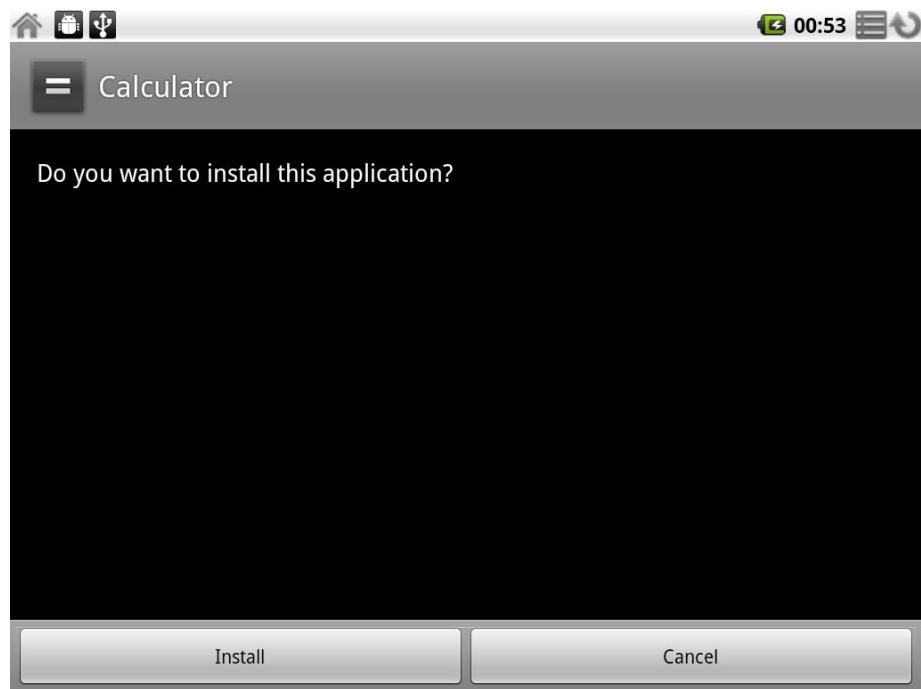

2. Enter into APK un-installation interface

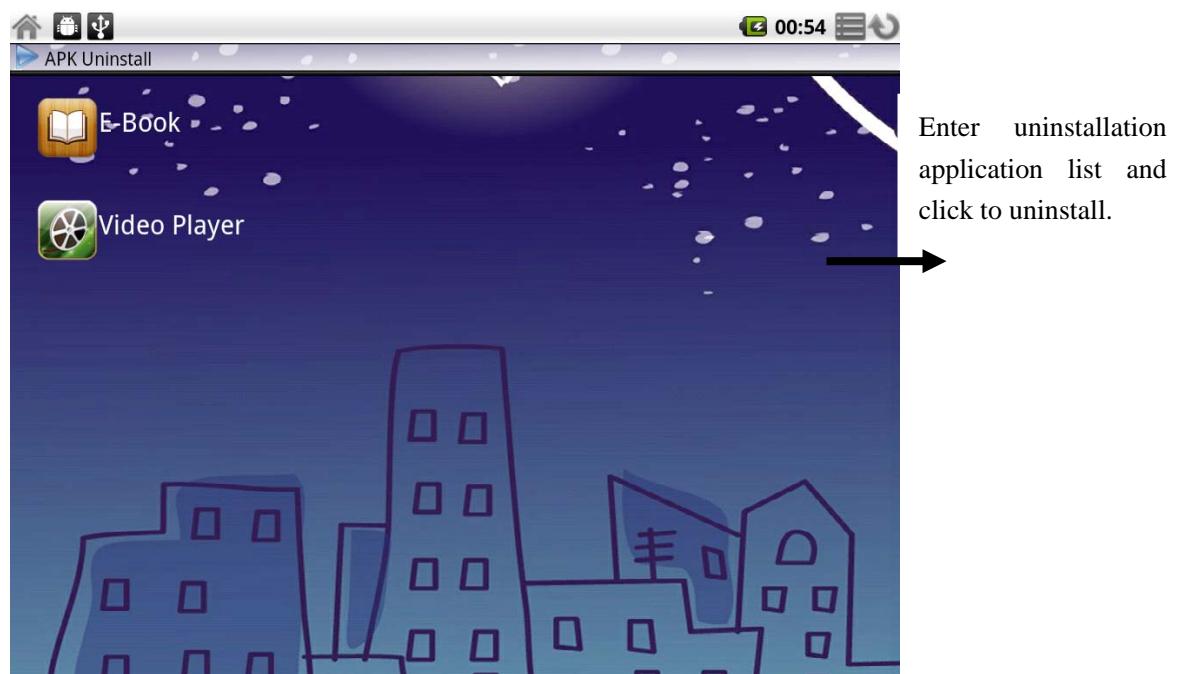

Text Reader

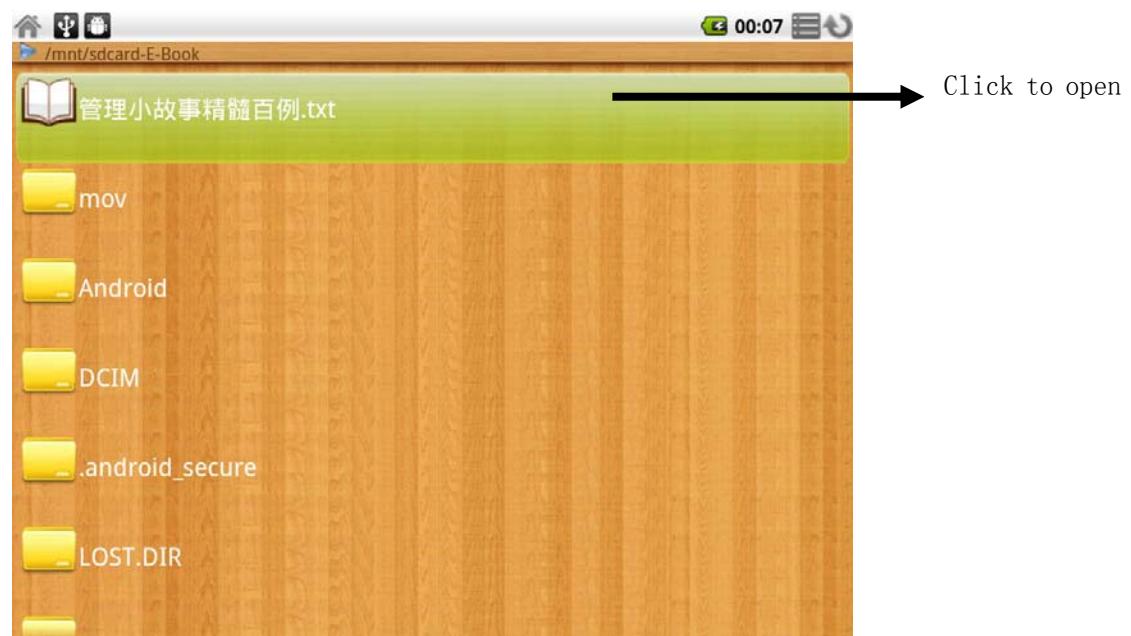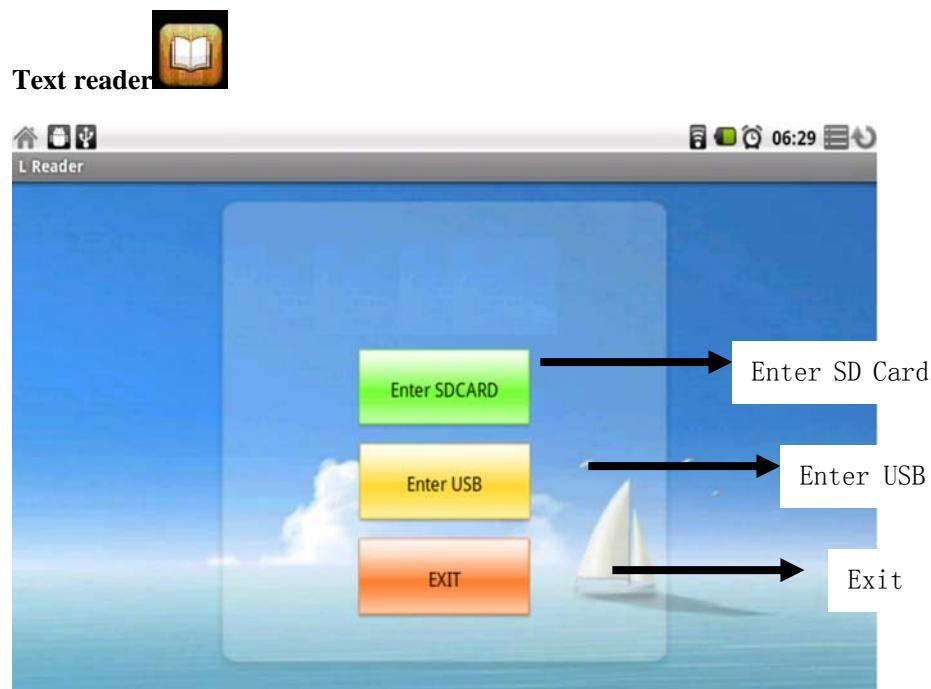



Click “Add Bookmark” to add the bookmark.




Click “Open Bookmark” to jump to the bookmark position.




Jump or long press bookmark to jump.
Delete
Cancel


Task Manager

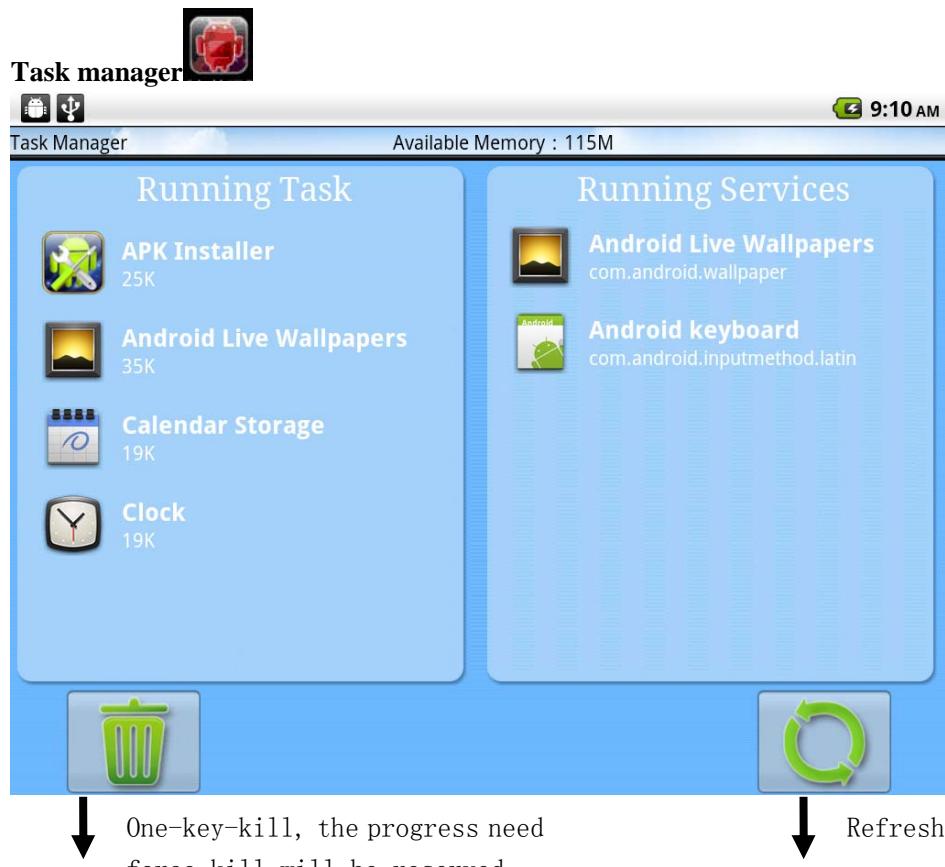


Click list

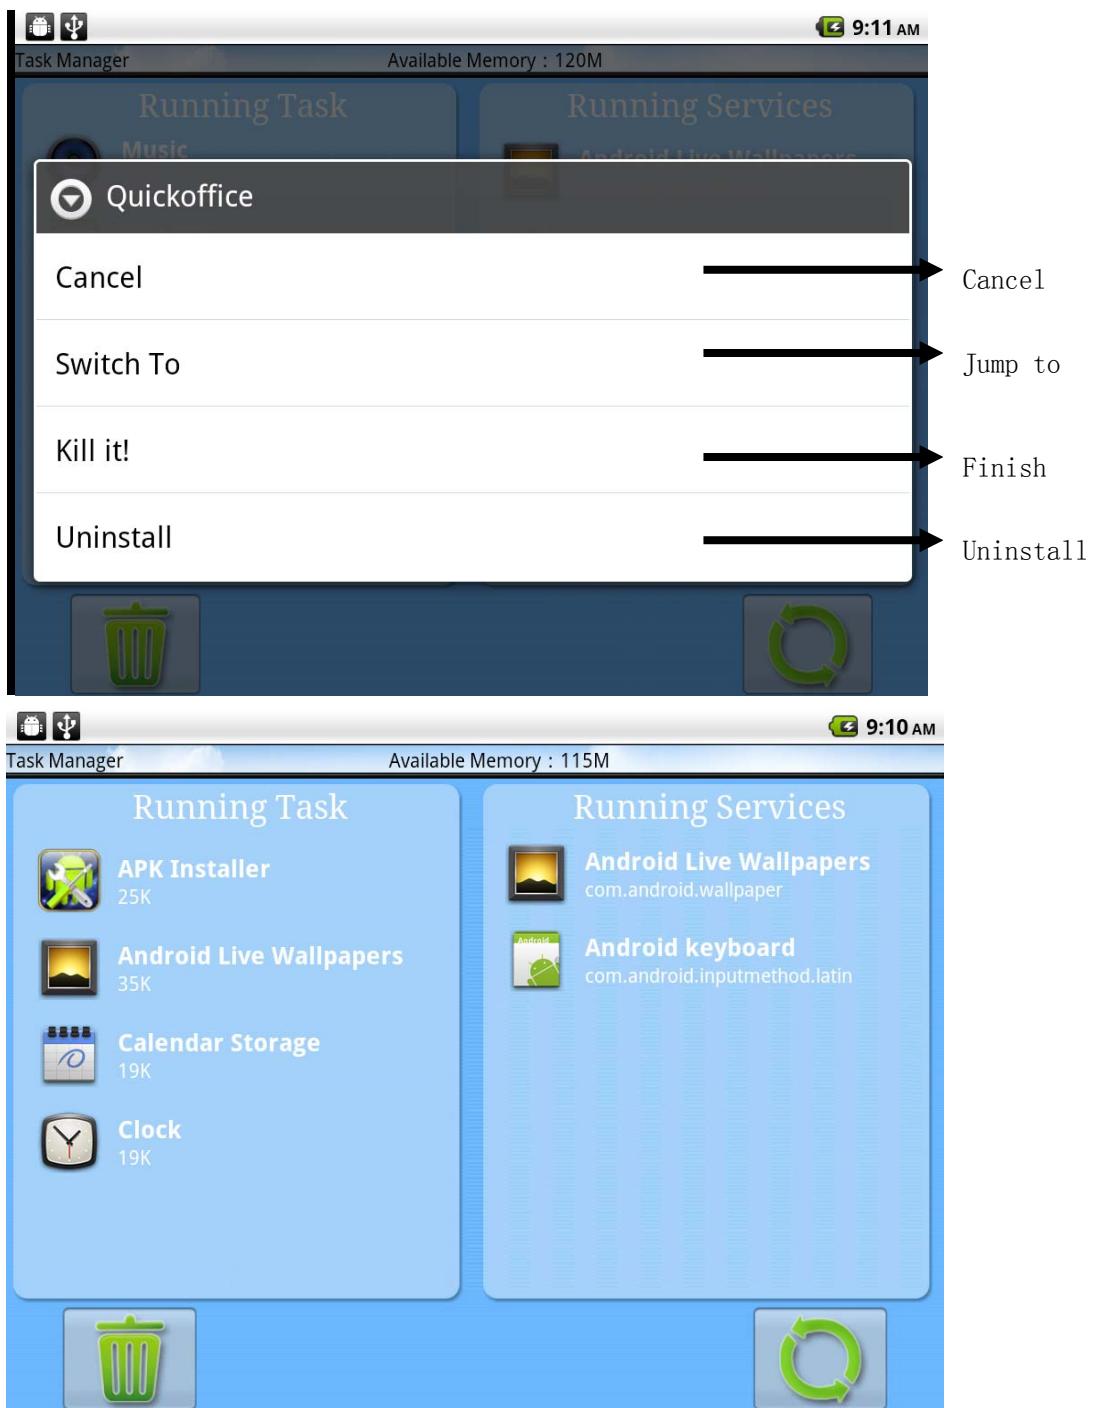


File Manager

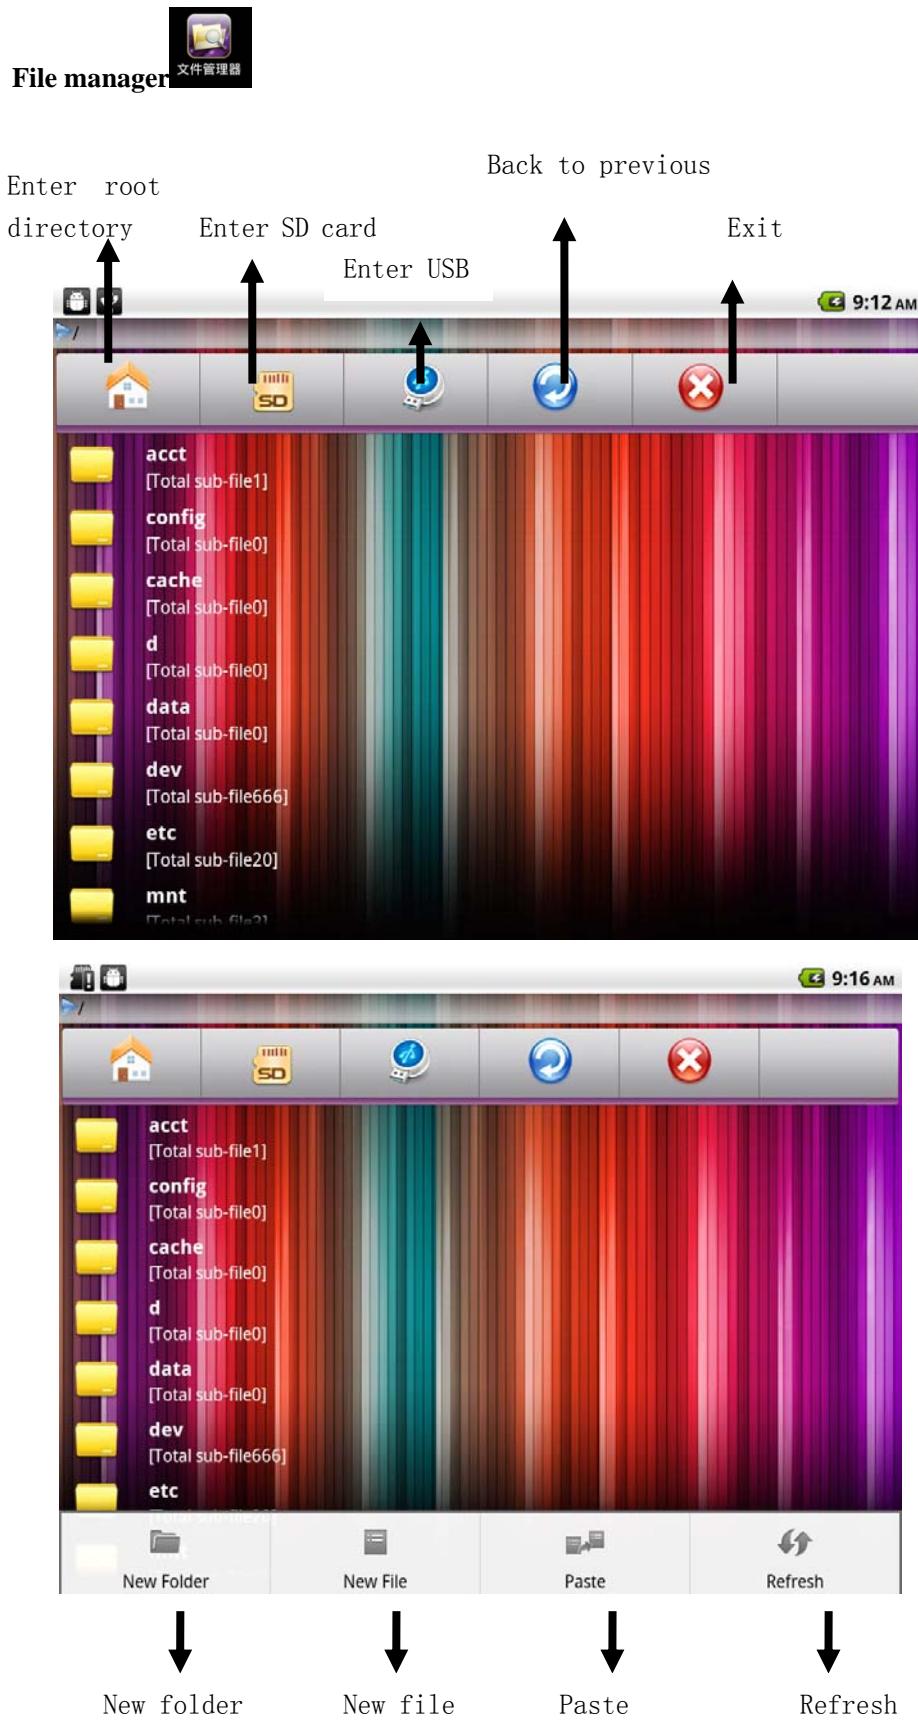


Click list

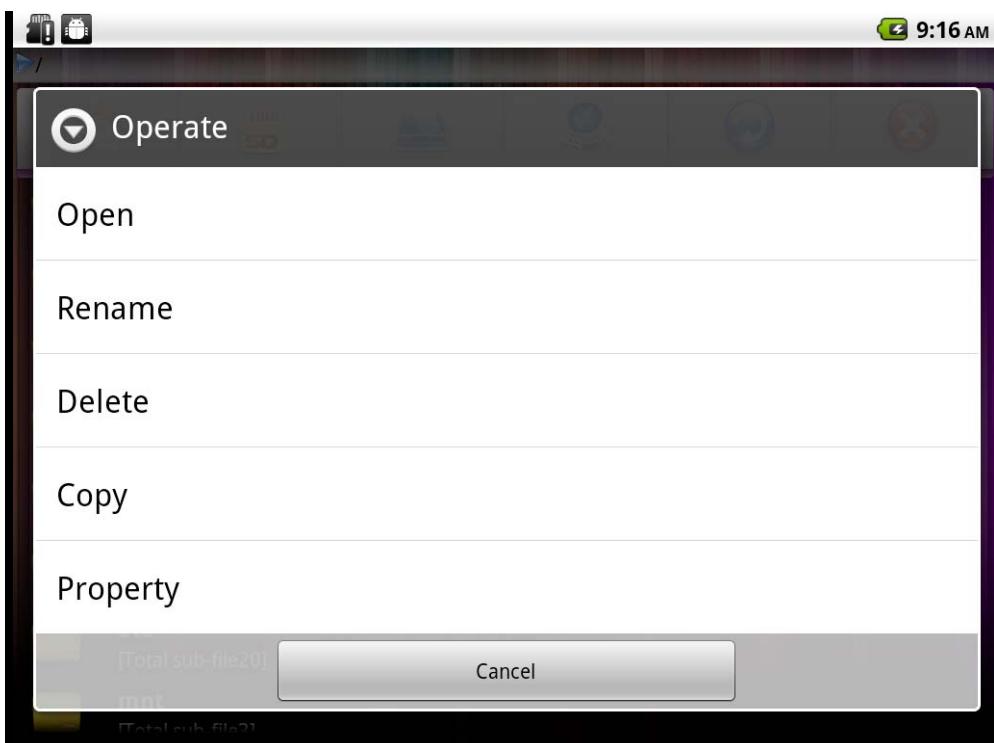


Music Player

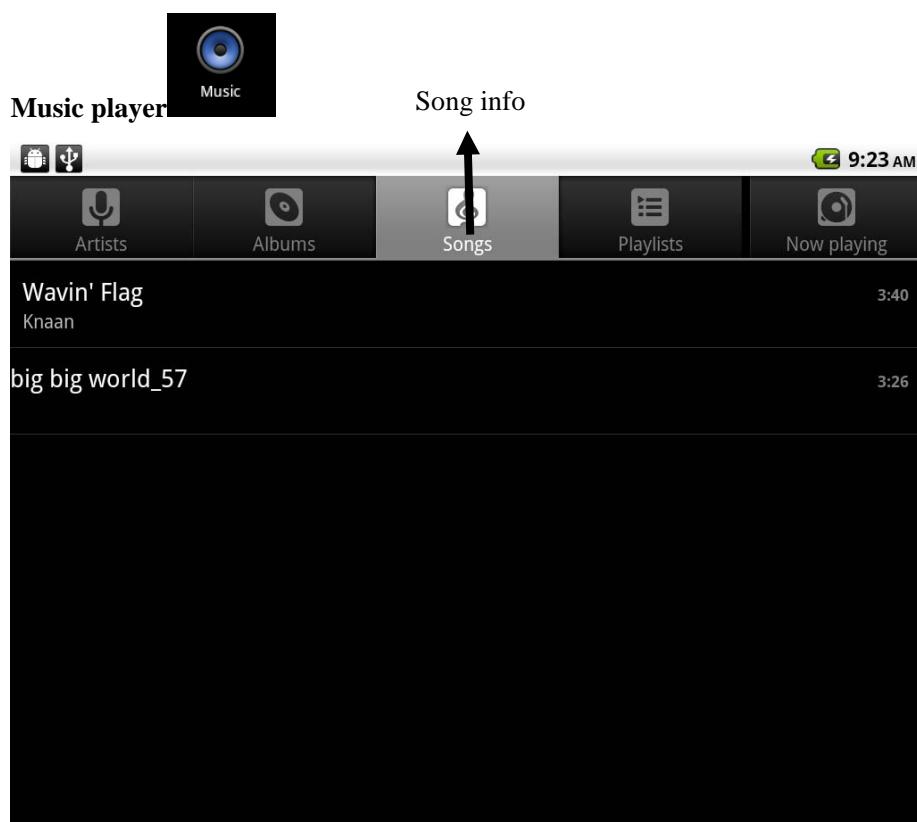

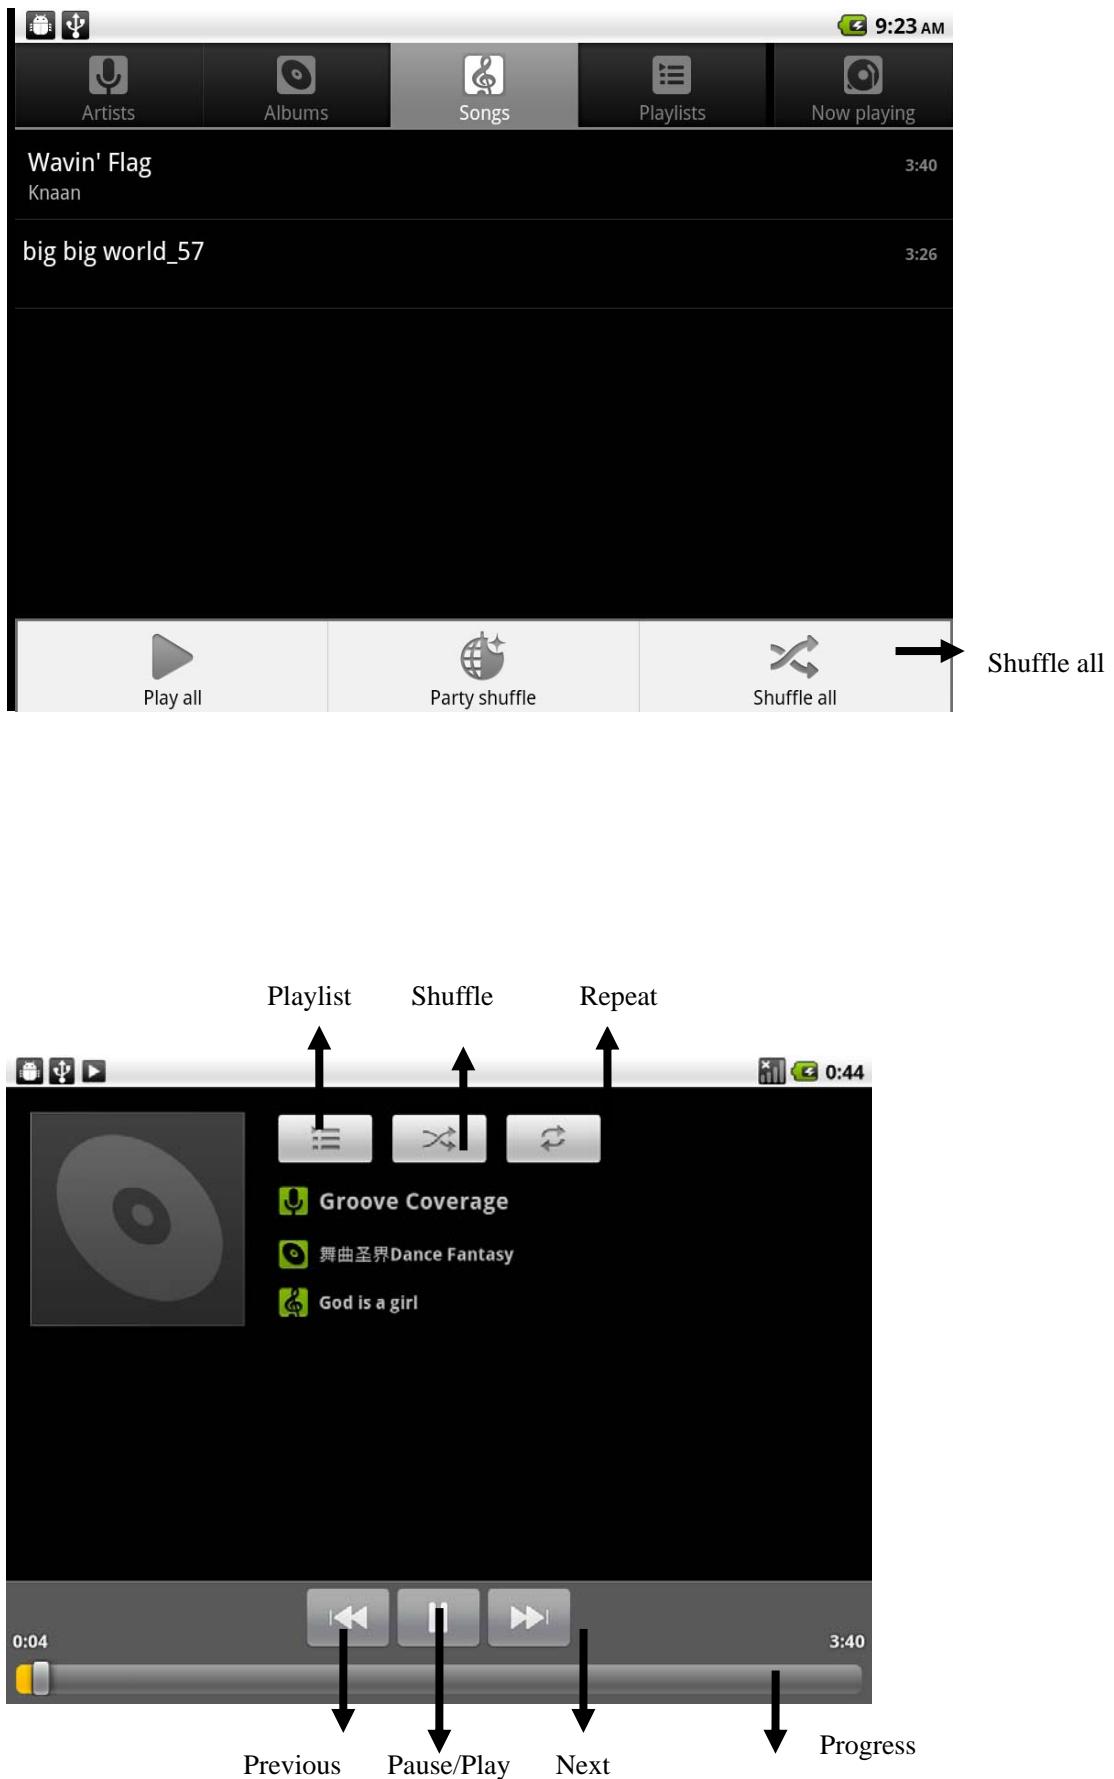


Video Player

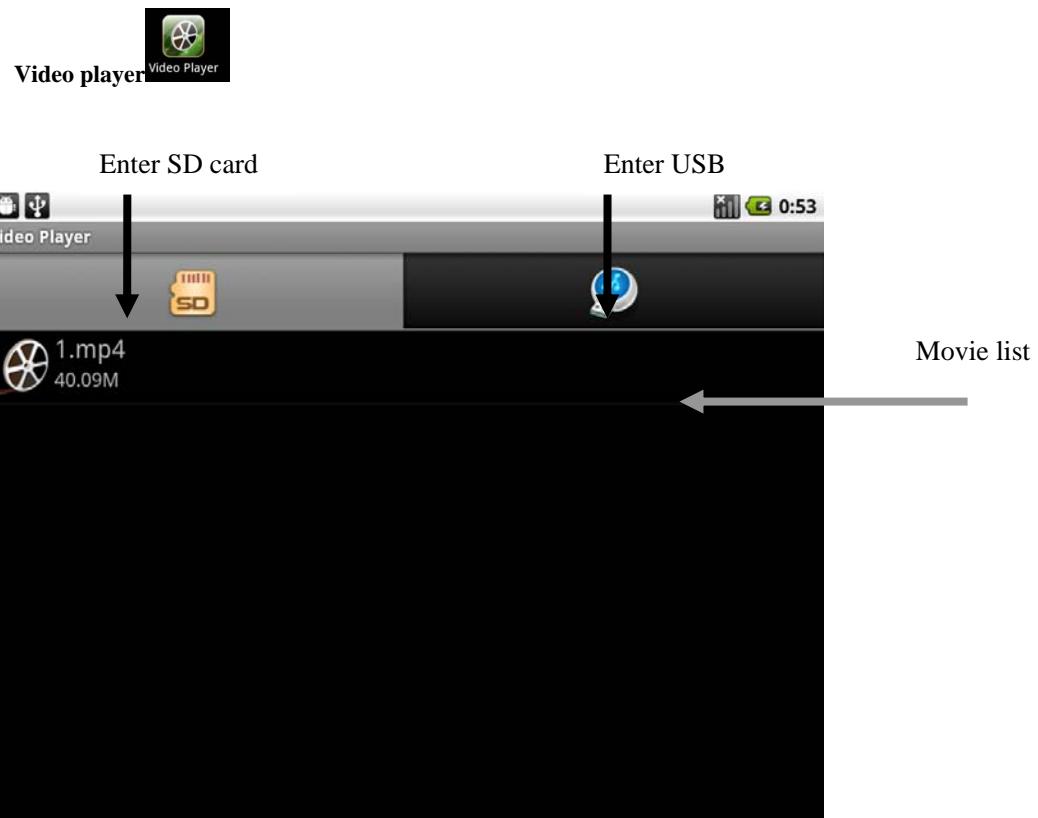

Enter display interface. Long press the interface to pause the play and short press to turn to the control interface.


Click “video size” to switch between the full screen and the original size. Long press the volume key to enter the silent mode.

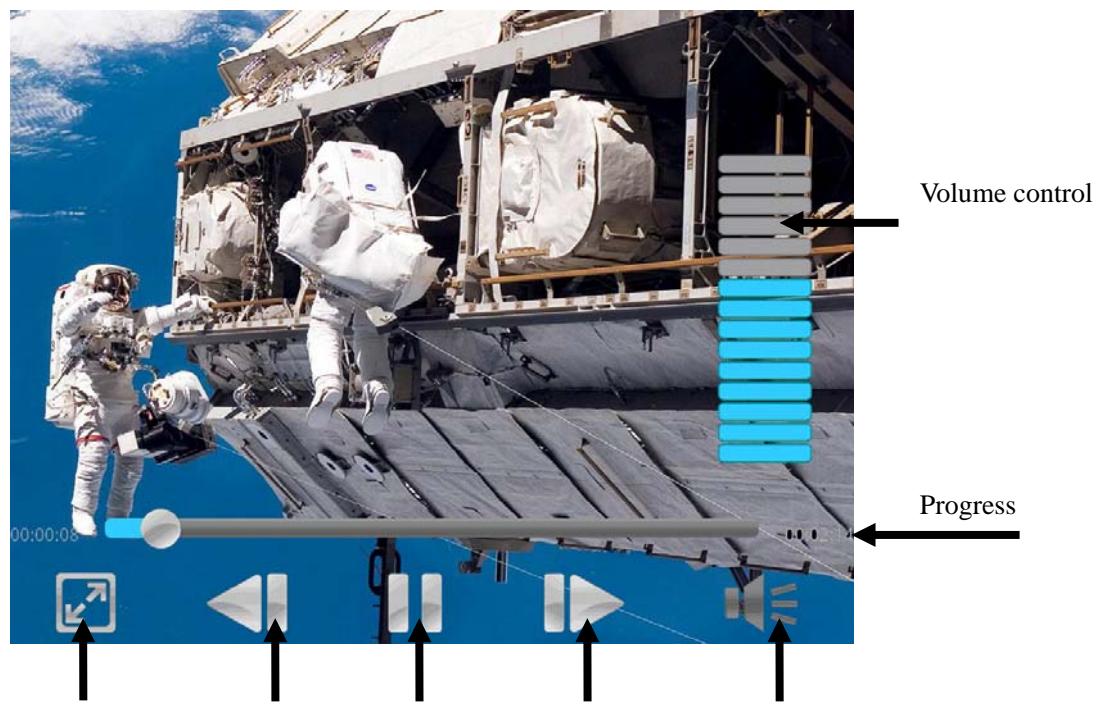


Picture Brower




- 1.click to enter the gallery interface. It will automatically scan out the pictures and videos in the SD card.

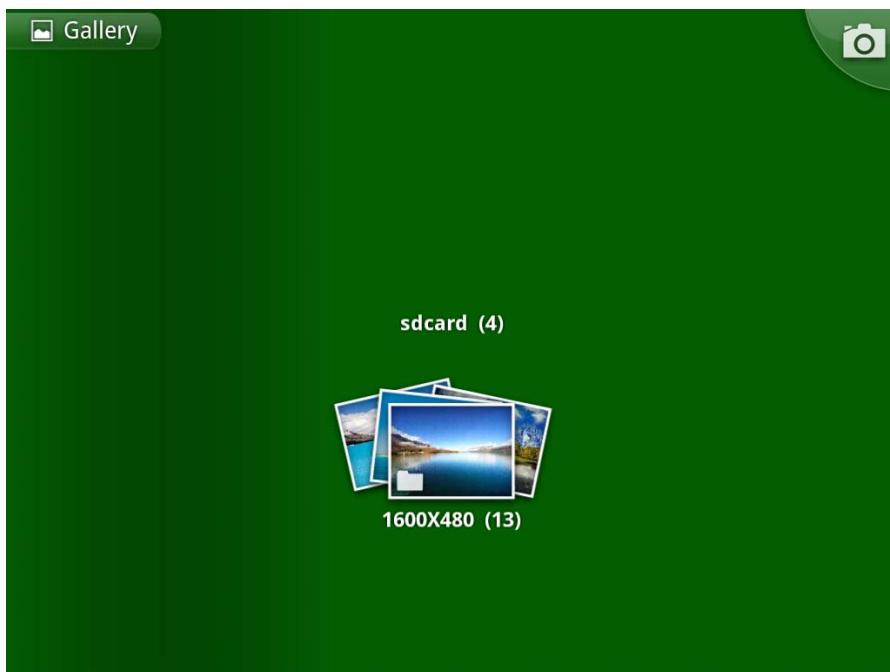

2. click the picture to the picture browser interface.

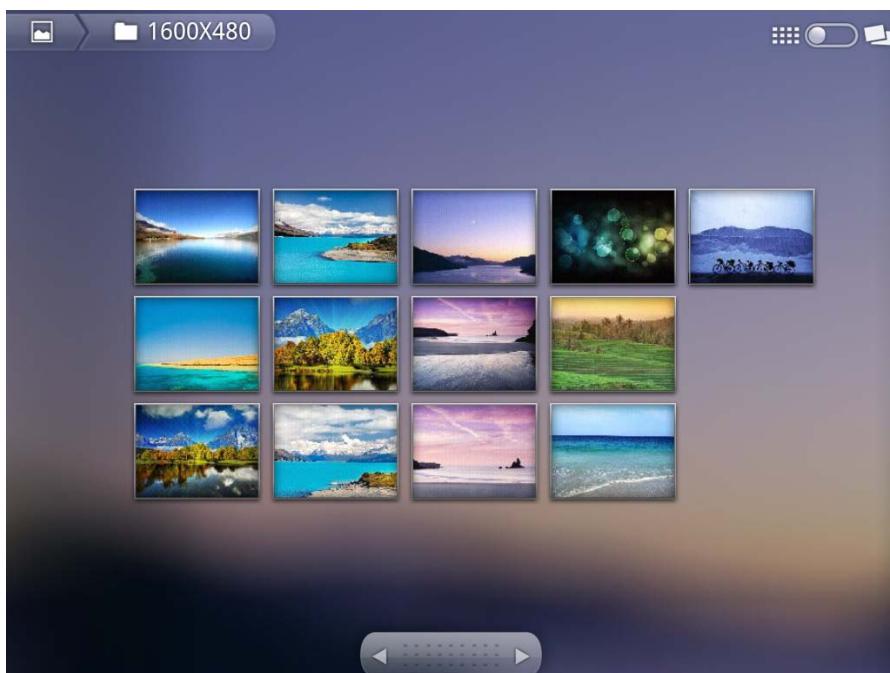


3. click to open the picture


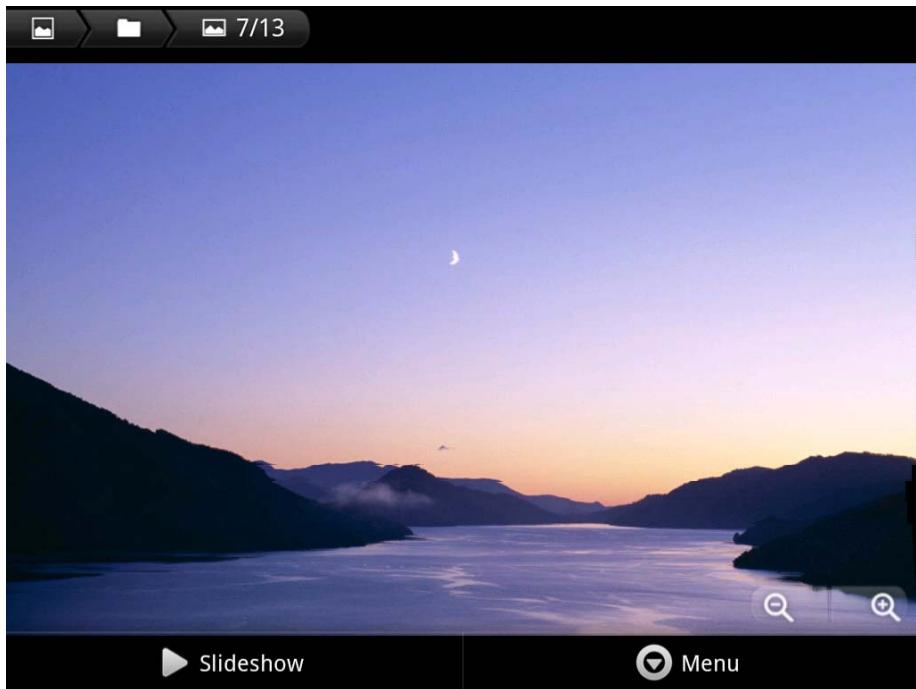




Email Settings

1. Click EMAIL  icon to enter the interface.
2. Input the account and password. Click “Next”. Set all the items according to the prompt. Then you can login the mail box to receive and send emails.

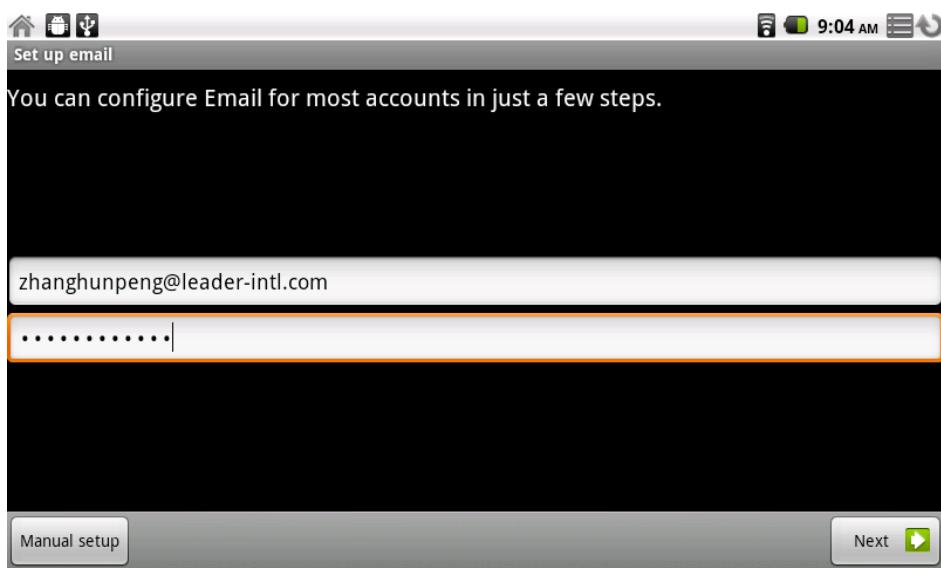

3. Select the account type.

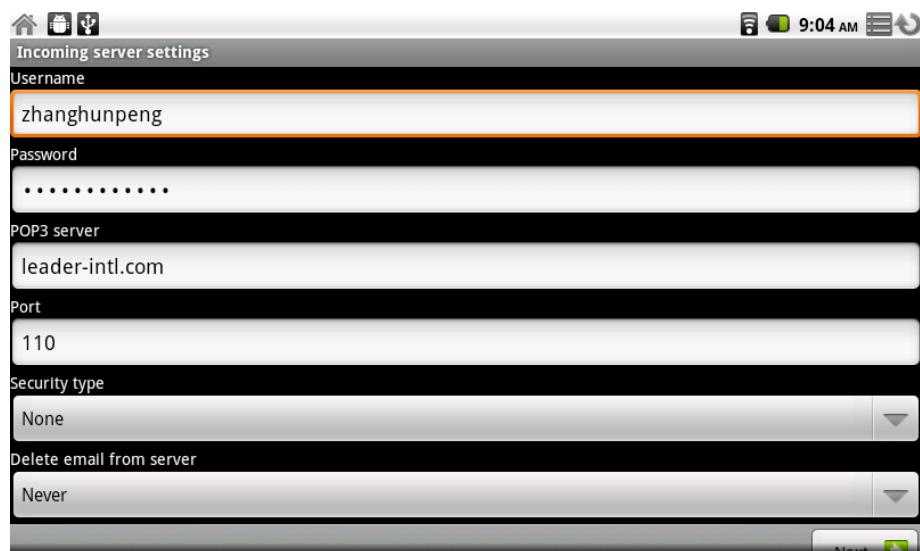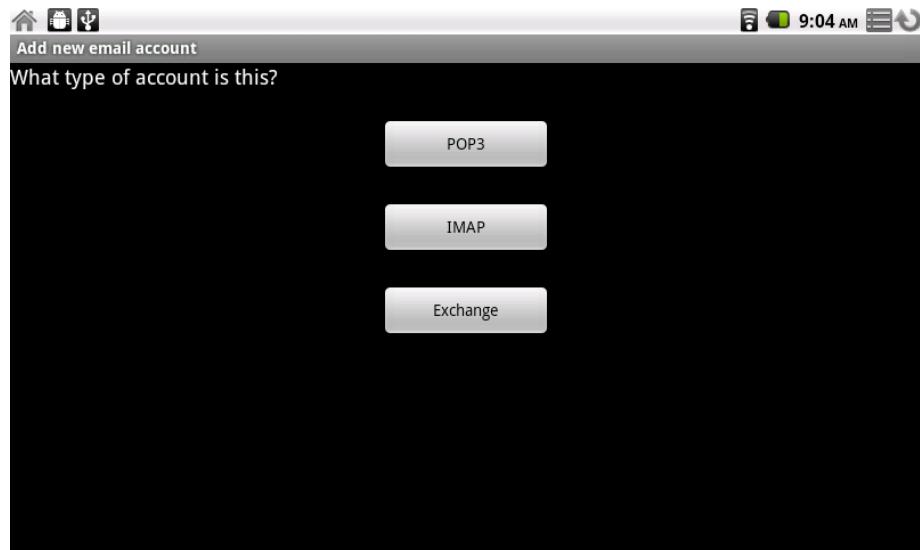

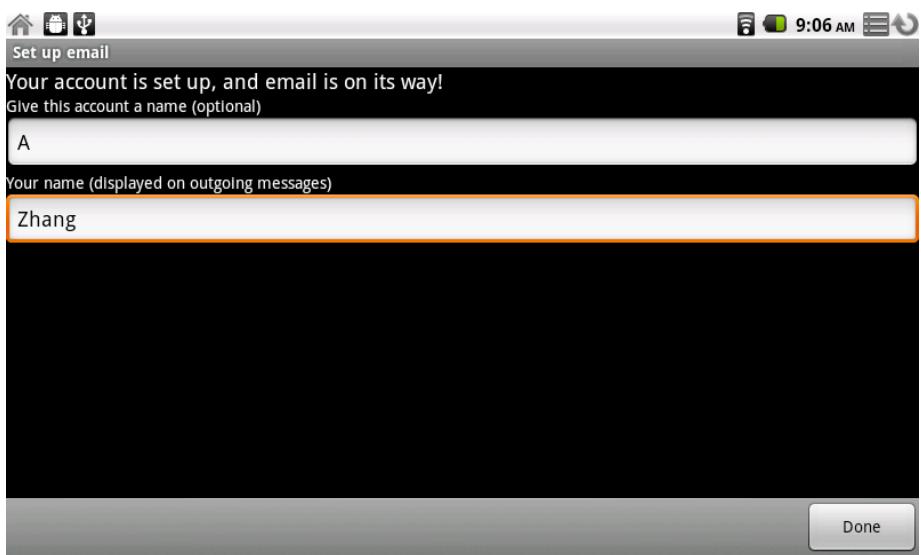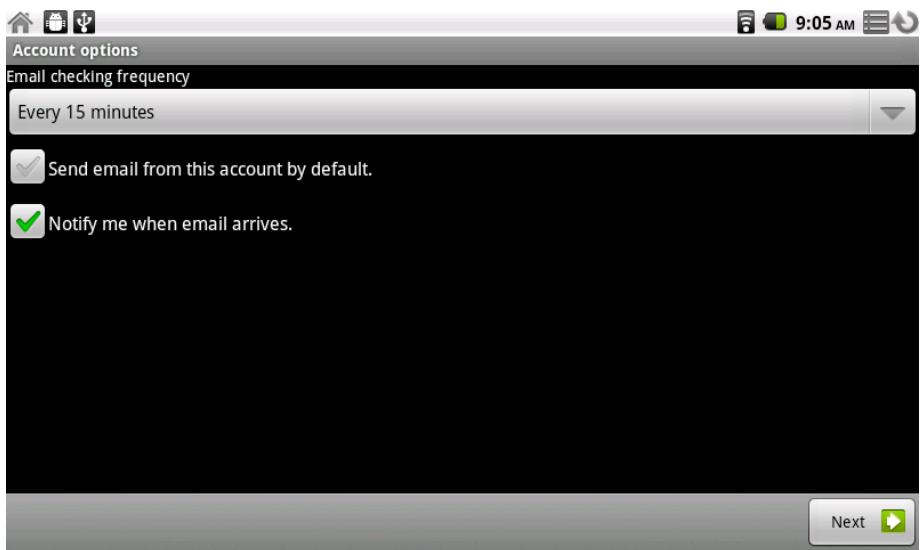


Notice: Above setting operation is for reference only. Users should set according to actual situation.


Clock Settings



2. Click "Alarm Setting" and enter the following interface.

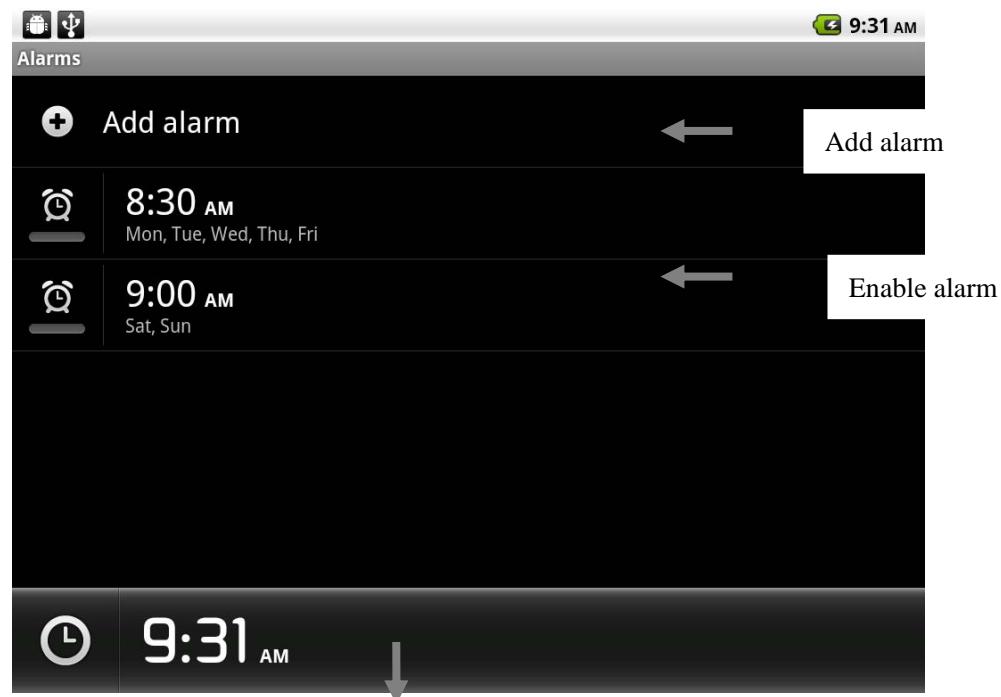

3.Add alarm. Click “Add alarm” and enter the following interface to set correctly.

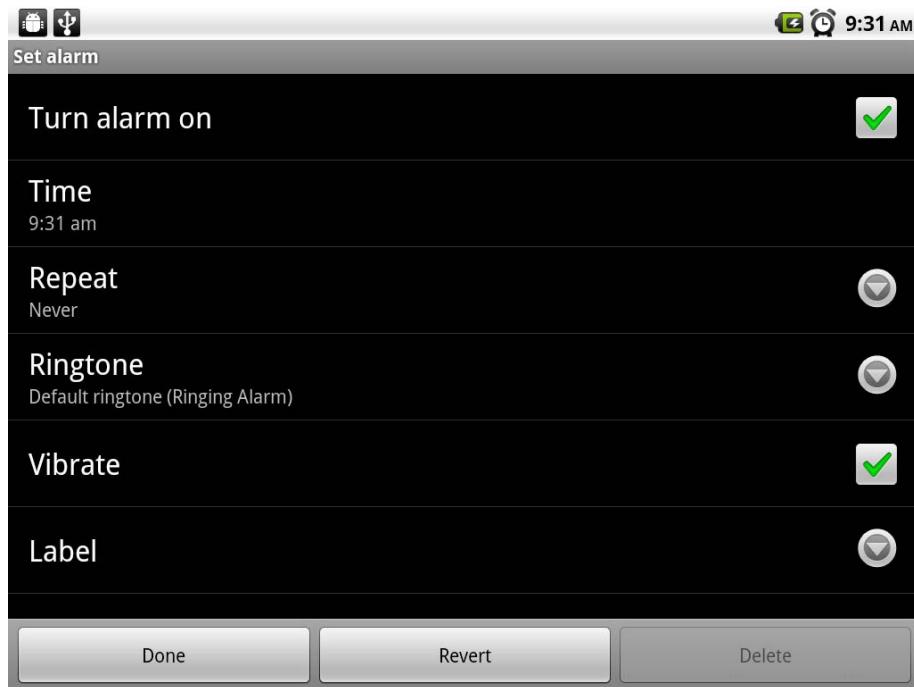

Specification

CPU		Samsung A8 S5PC110- 1GHz
Screen	Display	9.7 inch touch panel, IPS screen,
	Resolution	1024*768
Memory	Flash ROM	NAND Flash 4GB
	RAM	512MB Mobile DDR
Antenna		Real built-in antenna
Wifi		802.11 b/g
G-Sensor		Support
Compass		Support
Camera		2M pixel Front camera
Audio		MP3, AAC, WMA, AMR-nb/wb
Video		MPEG4 H264, H263
Photo		JPG, PNG
Input/Output	Touch Panel	capacitive type touch panel
	Speaker	Built-in loud speaker
	Headphone	3.5mm stereo jack
	MIC	Internal MIC-phone
	SD / MMC	TF slot, capacity up to 32GB (support TF HC)
	USB	USB 2.0 Device (Mini Port) x1, USB2.0 Host (A type) x 2
	HDMI	MINI HDMI, support 1080P video play
Buttons / Switches		<ol style="list-style-type: none"> 1. Hardware Power ON/OFF Switch and Reset Switch 2. Volume Up, Volume Down 3. Back key, Home key, Menu key, search key 4. Photo key
Battery	Type	uilt-in rechargeable 3.7V 7000mAh Li polymer
	Active	System continues with backlight setting on middle range on full power mode about 5~7 hrs
Certification & Regulation		CE,FCC, RoHS

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC RF Radiation Exposure Statement(For portable devices):

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device was tested for typical hand held operations with the device contacted directly to the human body to the sides of the device. To maintain compliance with FCC RF exposure compliance requirements, avoid direct contact to the transmitting antenna during transmitting.

P QVG<"Vj ku"gs wkr o gpv"j cu"dgfp "guygf "cpf "hqwfpf "q"eqo r n "y kj "j g"ho ku"hqt "c"Ereuu"D"f ki kcn"if gxleg. "r wtuwcpv"q"r ctv37"qh"j g"HEE "Twgu0" "Vj gug"ho ku"ctg"f guki pgf "q"r tqxlf g"t gcuqpcdr"r tqvgevqp" ci ckpuv"j cto hwlkpvgttgtgpeg"lp"c"tguif gpvkrif kpuccvlp0"Vj ku"gs wkr o gpv"i gpgtcvgu"wgul"cpf "ecp"tcf lcvg" tcf lkq"htgs wgep { "gpgti { "cpf . "k"p"pq"l"pu"cmgf "cpf "wgf "lp"ceeqtf cpeg"y kj "j g"lputw"l"qpu."o c { "ecwug" j cto hwlkpvgttgtgpeg"q"tcf lkq"eqo o wplcvkqpu0J qy gxgt. "j gtg"ku"pq"i wctcpvgg"j cv"l"pvgttgtgpeg"y kn"p"qv" qeew"lp"c"r ct"l"ewrt"l"puccvlp0K"j ku"gs wkr o gpv"i qgu"ecwug"j cto hwlkpvgttgtgpeg"q"tcf lkq"qt "gmxkulqp" tgegr lkq."y j lej "ecp"dg"f gyto kpf "d{ "wtplpi "j g"gs wkr o gpv"qlh"cpf "qp. "j g"wg"t"ku"gpeqwtci gf "q"t { "q" eqttgev"j g"l"pvgttgtgpeg"d{ "qpg"qt "o qtg"qh"j g"hqm"j kpi "o gcuwtgu" " /"Tgqt"gpv"qt "t"gmecvg"j g"t"gegk"l"pi "cpvgppc0" " /"Kpetgcug"j g"ugr ctcvlp0"dgw ggp"j g"gs wkr o gpv"cpf "t"gegkxgt0" " /Eqppgev"j g"gs wkr o gpv"lpvq"cp"qwr"q"p"c"ekewk"l"htgtgpvltqo "j cv"q"y j lej " j g"t"gegkxgt "ku"eqppgev0" " /Eqpuwn"j g"f gcn"qt "cp"grt"l"kgpegf "tcf lkq IVX"vej plkcp"hqt"j gr 0