



Owner's Manual

WARRANTY INFORMATION

For warranty information see warranty information page.

PRODUCT REGISTRATION

To register your Bandit Buster® product please visit:
www.banditbuster.com/productregistration

⚠ WARNING

Risk of electric shock

Do not open back or remove front cover

No user serviceable parts inside

Keep out of reach of children


PRODUCT FEATURES

Receiver:

- On/Off Switch (Left side of the unit)
- AC jack (Left side of the unit)
- Sound Light indicators (Front of the unit)
- Volume controls (Front of the unit)
- Power and Low Battery Indicator (Front of the Unit)
- Transmitter Indicators "A" and "B" (Front of the unit)
- Alarm+Vibrate, Vibrate, Alarm, Alert Options (Right side of the unit)
- Earphone Jack (Right side of the unit)
- Belt Clip (Back of the unit)
- Kickstand (Back of the unit)
- Reset Button (back of the unit)
- Battery Compartment (Back of the unit)

USING AC ADAPTERS

- The unit can use standard 120v wall outlet, vehicle, boat, or RV AC plug-in.
- To use the AC adapters, plug the connector on the cord into the AC adapter jack on the side of the unit.
- Use only Bandit Buster® adapters included in the unit. Do not use these adapters with any other device.
- If units do not work, make certain that the AC adapters are plugged into a working outlet.
- If electricity to the unit is lost, the unit will still operate via the rechargeable batteries for approximately 12-14 continuous hours.

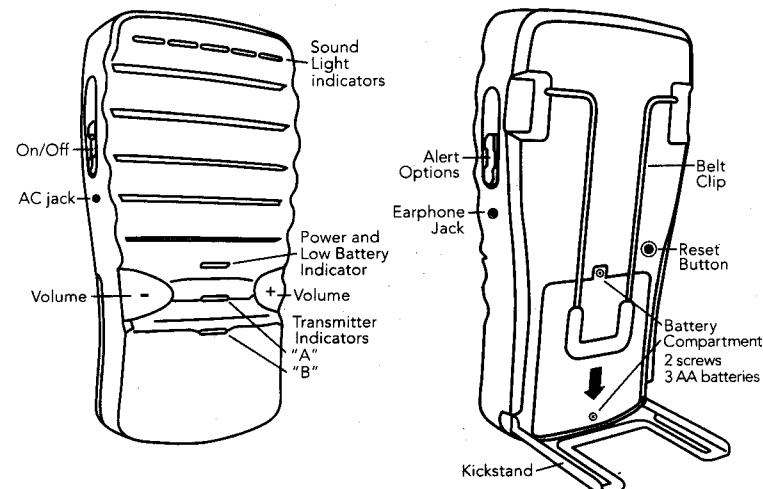


Transmitter:

- Alarm/Silent Alarm Options (Left side of the unit)
- Power Light Indicator (Front)
- PIR (passive infrared) (Front)
- Off/ON Power Switch (Right)
- AC Jack (Right)
- Battery Compartment (Back)
- Transmitter Holster (Bottom)
- Mounting Bracket (Back)

BATTERY INSTALLATION

This unit requires three (3) AA rechargeable batteries

- Turn the unit over and remove sliding battery cover from the back of the unit.
- Insert the AA batteries into the battery compartment.
- Replace battery cover onto unit.
- CAUTION: Do not use alkaline batteries.
- Bandit Buster® recommends using quality rechargeable batteries ONLY.

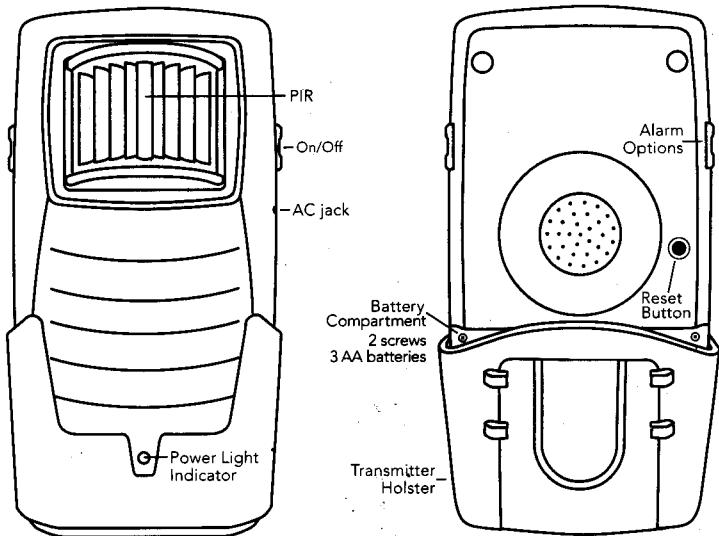



Owner's Manual

SETTING UP YOUR UNIT

- Remove both units from the box and ensure both the transmitter(s) and receiver are set to "Off."
- Remove the battery cover for the transmitter(s) using a Phillips screwdriver.
- Remove the battery cover for the receiver by lowering the kickstand and remove the belt clip by spreading apart the sides of the clip to release it from the unit. Remove the battery cover using a Phillips screwdriver.
- Install quality rechargeable AA batteries to your units. DO NOT use alkaline batteries.
- Replace the battery covers and reattach the belt clip.
- Turn "On" both the transmitter(s) and the receiver.
- The transmitter(s) will blink red and green until the unit is armed. This takes approximately 30 seconds. When the transmitter is armed the indicator light will stay solid green.
- Set the transmitter(s) to either "Alarm" or "Silent." Alarm lets the intruder know they are being monitored, while silent sounds no alarm and only alerts through the receiver.
- Mount the transmitter(s) holster into desired location out of direct weather conditions.
- Place the transmitter(s) in the holster.
- Place your receiver where you can monitor sound activity, hear the PIR alarm, and/or see the sound bars. For best monitoring quality place the transmitter(s) and receiver facing one another, or as close to facing one another as possible.
- You are now set up for real-time monitoring with Bandit Buster®.

PAIRING THE UNITS

- Units come paired from the factory. However, in the event that your units are not paired and ready for operation, follow these steps to pair your devices:
- Turn both the receiver and the transmitter(s) "Off" then back "On." Wait for the indicator lights on the transmitter(s) to stop flashing.

• For BB model 1941:

- Simultaneously hold the reset button on the back of the transmitter and the back of the receiver along with the Vol- button for approximately 4 seconds.
- The receiver will flash green while your devices are pairing.
- When pairing is complete your power indicator light will be solid green and your transmitter indicator light "A" will be solid yellow.
- Your devices are paired and ready for operation.

• For BB model 1962:

- Repeat steps for model number 1941 using the receiver and transmitter "A."
- Your transmitter "A" is now paired.
- To pair your transmitter "B" simultaneously hold the reset buttons on the back of the receiver, transmitter "B" and the Vol+ button.
- The receiver will flash green while your devices are pairing.
- When the transmitter indicator light "B" turns yellow and power indicator light is solid green your transmitter "B" is now paired and ready for operation.

GENERAL PRODUCT OPERATIONS

- When the Bandit Buster® is activated you will be able to instantly monitor your property through sound, sound light indicators, and PIR (passive infrared).
- Sound monitoring is continuous. No alarm will sound unless the PIR detects motion.
- When the PIR detects motion your receiver will alarm and/or vibrate.
- **Model 1962:** Sound monitoring will continuously cycle between transmitter "A" and transmitter "B" in 60 second increments.
- If either transmitter "A" or transmitter "B" detects sound or the PIR of one of the transmitters detects motion, the receiver will instantly lock in to the transmitter where the sound or motion was detected.
- To silence the receiver alarm, simultaneously hold the Vol- and Vol+ buttons for approximately two seconds. This does not deactivate the alarm; it only silences your receiver.
- An alarm will sound for approximately 20 seconds. When the alarm stops, sound monitoring continues immediately.
- The PIR will automatically reset within 30 seconds after the alarm is activated and turns off.



Owner's Manual

CAUTIONS ON WATER RESISTANCE

- This unit is designed to be resistant to slight exposure to water
- Do not submerge in water
- If unit should be submerged in water or any liquid should fall into the unit, use extreme caution and unplug the AC adapter immediately. Wipe the unit with a dry cloth. To prevent the battery from corroding remove the batter cover and wipe out the batter compartment as follows:
 - Remove battery cover with dry hands.
 - Remove batteries and wipe off the battery and the inside of the compartment. Take care to ensure that the battery contacts are free of water.

TROUBLESHOOTING

DO NOT ATTEMPT TO MODIFY THE UNIT. ANY ATTEMPT TO DO SO CAN VOID THE OPERATOR'S AUTHORITY TO OPERATE THE UNIT AS WELL AS VOID THE UNIT'S WARRANTY.

Most problems have a simple solution.

Please make the following checks.

- Make certain the power to both the transmitter and the receiver is turned ON.
- Both units are plugged in or batteries are charged.
- Ensure electrical outlet(s) works.
- Ensure the receiver is in range of the transmitter(s). If the receiver is out of range, the power indicator light will flash green and yellow.
- Check the volume settings.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BanditBuster.com



Limited Warranty

1. For a period of one (1) year from the date of purchase if this Product is determined to be defective, Bandit Buster® will repair or replace the Product, at its option, at no charge. After this one (1) year period, you must pay for the replacement unit. If such a defect is discovered within the one year period, Bandit Buster® shall repair or replace the unit at its sole discretion.
2. Warranty of this product is not valid unless product has been registered. To register your product please visit: www.banditbuster.com/productregistration
3. To obtain warranty service you must return the product in either its original packaging to the authorized Bandit Buster® service facility. See additional information below.

THIS WARRANTY DOES NOT COVER CLAIMS RESULTING FROM MISUSE, ABUSE, FAILURE TO FOLLOW OPERATING INSTRUCTIONS, MAINTAINANCE AND USE, ALTERATION, INVOLVEMENT IN AN ACCIDENT, NORMAL WEAR AND TEAR, ATTEMPT TO REPAIR BY ANYONE OTHER THAN A FACILITY AUTHORIZED BY BANDIT BUSTER®, OR ACTS OF GOD. THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS."

Proof of purchase in the form of a bill of sale or receipted invoice, which proves that the product is within the warranty period, must be presented to obtain warranty service.

The warranty does not cover units in which the factory-applied serial number is altered or removed from the product.

Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages; therefore, the above limitations and exclusions may not apply to you.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY OF THE CONSUMER. IN ANY EVENT, RESPONSIBILITY FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES IS EXPRESSLY EXCLUDED. ANY IMPLIED WARRANTY OF MERCHANTABILITY FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

This limited warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province.

ALL RETURNS MUST BE MADE TO THE BANDIT BUSTER® AUTHORIZED SERVICE FACILITY. RETURNS MUST BE IN THE ORIGINAL PACKAGING WITH ALL ACCESSORIES INCLUDED. DO NOT RETURN TO THE STORE WHERE PURCHASED! WARRANTY ITEMS WILL BE REPLACED WITH A NEW OR REMANUFACTURED BANDIT BUSTER®.

The Address of the Bandit Buster® authorized service facility is:

Bandit Buster®
7159 Jefferson Paige Road
Shreveport, Louisiana 71119

BanditBuster.com