




# Call Telephone

## Making a call/videophone call





The image sent to the other party during a videophone call is the substitute image (Chara-den) or rear camera image because the N-01G does not have a front camera.

### Making a call by entering the phone number

- 1 Enter the phone number starting with the area code, then  (voice call) /  (V.phone)
- 2 After the call ends, 

### Making a call from phonebook




Add the phone number of the other party to the phonebook in advance. (→ p.55)

- 1  (Search phonebook) to select a search condition and search the phonebook ▶  to select an entry, then  (voice call) /  (1 second or longer) (V.phone)

### Making a call with redials

- 1  ▶ "TEL function" ▶ "Dialed/Received call" ▶ "Redial" to select the other party, then  (voice call) /  (V.phone)

■ To make a call with received calls

-  ▶ "TEL function" ▶ "Dialed/Received call" ▶ "Received calls" ▶ "All calls" or "Missed calls" to select the other party, then  (voice call)/ (V.phone)

## Using Koe-no-Takuhaibin

This is a service to record a voice message and deliver it to the other party.

- 1 Enter the other party's phone number, then  (Koetaku)
- 2 Follow the operation guidance and record a message

The other party will be notified that a message is waiting.

### ■ To play a recorded message




On the Recording notification SMS detail screen, "再生" (Play) ▶ "YES"

Also, it can be played from:  "TEL function" ▶ "Koe-no-Takuhaibin"  
▶ "Message confirm (voice)" ▶ "YES".

## Making an international call

Use WORLD CALL to make international calls from Japan.

· For WORLD CALL, please contact "General Inquiries" on the back cover of this manual.

- 1 010 ▶ Country code ▶ Area code (City code) ▶ The other party's phone number ▶  (voice call) /  (V.phone)
- 2 After the call ends, 



- Dial the other party's phone number excluding "0" at the beginning of the area code (city code). However, to make a call to some countries/areas, such as in Italy, "0" is required.
- You can make calls from overseas. (→ p.48)

## Receiving a call/videophone call

When you receive an incoming call, the ring tone sounds and the illumination flashes.

- 1 When you receive an incoming call,  or  (V.phone)/(Subst.)




You can only receive a videophone call with a substitute image.

- 2 After the call ends, 

## Adjusting earpiece volume

- 1  ► "TEL function" ► "Dial/Receive setting" ► "In-call setting" ► "Volume" ► Adjust with  ►  (Set)




• During a call, you can adjust the volume with  [ マナー]/.


## When you can not answer a call

### Setting record message




When you cannot answer a voice or videophone call, the FOMA terminal can record a voice or videophone message.

- 1  ► "TEL function" ► "Rec. msg./Voice memo" ► "Record message setting" ► "ON" ► "Phone" or "Videophone" ► Select an item
- 2 Set ring time (3-digit number between 000 and 120 seconds)

#### ■ If you receive a call with Record message setting ON

Record message activates if the set time ends. Press  to answer a voice call/videophone call while recording.

#### ■ To play a recorded message

On the standby screen,  ► "  Msg " (Record message) or "  Msg " (Record VP message) ► Select an item

### Setting Public mode (Drive mode)

When Public mode (Drive mode) is set, a caller hears a message that you cannot answer the call because you are driving or in a place where you have to refrain from using a mobile phone (on a train or bus, in a theater, etc.), then the call ends automatically.

- 1 On the standby screen,  (1 second or longer)

 appears on the standby screen.

## ■ To release the setting

On the standby screen, (1 second or longer)

### Setting Public mode (Power OFF)

When Public mode (Power OFF) is set, a caller who made a call while the power is off hears a message that you cannot answer the call because you are in a place where you have to turn off the mobile phone (in a hospital, on an airplane, around a priority seat on a train, etc.), then the call ends automatically.

1 2 5 2 5 1

## ■ To release the setting

2 5 2 5 0

## Using various network services

### ■ Available network services

Useful DOCOMO network services are available.


- The network services are not available when you are outside the service area or in a place where the signal is weak.
- For details, refer to NTT DOCOMO website.
- For the application and inquiries, please contact "General Inquiries" on the back cover of this manual.

Service name	Application	Monthly charge
Voice Mail Service	Required	Charged
Missed call notice service	Not required	Free
Call Waiting	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking	Not required	Free
Caller ID Notification	Not required	Free
Caller ID Request	Not required	Free
English Guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
Public mode (Drive mode)	Not required	Free
Public mode (Power OFF)	Not required	Free
Melody call	Required	Charged
Koe-no-Takuhaibin	Not required	Free

## Setting voice mail service

- 1  ▶ "TEL function" ▶ "Voice mail service" ▶ Select an item

## Setting call waiting

- 1  ▶ "TEL function" ▶ "Other network serv." ▶ "Call waiting"  
▶ Select an item

## Setting call forwarding

- 1  ▶ "TEL function" ▶ "Other network serv." ▶ "Call forwarding"  
▶ Select an item

## Emergency call

Emergency call	Phone number
Police emergency	110
Fire brigade/Ambulance emergency	119
Maritime distress call	118

- Your FOMA terminal supports "Emergency Location Report". Calls made to emergency service organizations (e.g. by dialing 110, 119 or 118) disclose information on the caller's location to the organization receiving the call. The location information may not be correctly sent depending on the current location or signal quality. The location information and phone number are not disclosed when, before each individual call made, "184" or another blocking prefix is dialed first. If the information is deemed necessary for the protection of life, etc., this information may be acquired by the organization being called. Locations/timing planned for adoption of this feature vary according to the status of the preparations by the relevant emergency service organizations.
- When calling 110, 119 or 118 from the FOMA terminal, first say you are calling from a mobile phone, give your number, and state your location clearly, because the police or fire department may call you back for confirmation. Also, do not move around when making the call. Do not turn off the power immediately after ending the call, but leave it turned on for ten minutes or so, so that you can receive a call.
- Depending on the area you are calling from, you may not be connected with the nearest police or fire department, etc.

- When making a videophone call to 110, 119 or 118 from the FOMA terminal, the call automatically changes to a voice call.
- If you make a voice call to an emergency phone number (110, 119, or 118), the following functions will be disabled and then set again automatically after approximately 5 minutes.
  - "Call rejection"/"Call acceptance"
  - "Call forwarding"
  - "Voice mail"
  - "Org. lock(Original Lock)" – "Incoming/Mail disp." – "Incoming call"
  - When "Reject unknown" of "Call rejection set." is set to "Reject" (also including "Secret" – "Incoming call act." – "Alert+Show No.")
  - When "Voice mail"/"Call forwarding"/"Call rejection" in "Arrival call act" is set
- If you make a voice call to an emergency phone number (110, 119, or 118) while "Public mode (Drive mode)" or "Self mode" is set, the setting will be canceled.

## Using overseas

To make calls overseas, use international roaming (WORLD WING).

■ International roaming (WORLD WING) is the service, which enables you to make calls and perform communication over networks of affiliated overseas operators using the FOMA terminal, phone number and mail address of your own for Japan, even when you are overseas. Voice calls, SMS and i-mode mail services are available without any special settings.

### ■ Supported area

This FOMA terminal is Class 4 and can be used in 3G or GSM/GPRS network service areas. Also it can be used in countries/regions compatible with 3G850 MHz. Check available areas.

### ■ Before overseas use, refer to the following:

- "Mobile Phone User's Guide [International Services]"
- DOCOMO "International Services website"

### ■ Information

- For a country code, international call access code, universal number international prefix, available countries and overseas operators, refer to "Mobile Phone User's Guide [International Services]" or DOCOMO "International Services website".
- Overseas usage fees (call charge, packet communications charge) differ from those in Japan.

## Available services overseas

Main communication services	3G	GSM/GPRS	GSM
MyFACE <sup>*1</sup>	○	○	×
Voice call <sup>*2</sup>	○	○	○
Videophone call <sup>*2</sup>	○	×	×
SMS <sup>*3</sup>	○	○	○
i-mode <sup>*4</sup>	○	○	×
i-mode mail	○	○	×
i-channel <sup>*4*5</sup>	○	○	×
i-concier <sup>*6</sup>	○	○	×
i-Widget <sup>*7</sup>	○	○	×
Packet communications via a PC	○	○	×

\*1 : "Auto-upd set. roam" setting is required.

Packet communications charges will apply when you automatically update MyFACE content that was registered at the time of purchase.

When traveling overseas from Japan, "MyFACE auto-update set" is set to "Don't auto-update".

When using auto-update for the first time, select whether or not to auto-update overseas.

\*2 : When 2in1 is active, dialing using Number B is not available. Dialing using the additional number of Multi number is not available.

\*3 : When sending an SMS to FOMA terminal user, enter the other party's phone number as in Japan.

\*4 : "i-mode overseas use" setting is required.

\*5 : "i-channel overseas use" setting is required. Packet communications charges will apply when you automatically update information on "Basic Channel". (Included in i-channel charges in Japan.)

\*6 : Overseas use setting for i-concier is required. Packet communications charges will apply for each reception of information.

 



\*7 : "i-Widget overseas use" setting is required. When you open the i-Widget screen, multiple Widget Appli may establish communications. In this case, packet communications charges will apply for each communication.



Information

- Some services are not available depending on the operator or network overseas.




## Making a call to outside the country you stay in

- 1 On the standby screen,  (1 second or longer) to enter +
  - ▶ Country code ▶ Area code (City code) ▶ The other party's phone number ▶  (voice call) /  (V.phone)
- 2 After the call ends, 



 
 
 


- To make an international call to Japan, dial "81" as country code.
- Dial the other party's phone number excluding "0" at the beginning of the area code (city code). However, to make a call to some countries/areas, such as in Italy, "0" is required.

## Making a call in the country of stay

- 1 Area code (City code) ▶ The other party's phone number ▶
  -  (voice call) /  (V.phone)
- 2 After the call ends, 

## Making a call to WORLD WING user overseas

When making a call to "WORLD WING" user overseas, make a call as an international call to Japan (dial "81" (Japan) as the country code), irrespective whether the other party is in or out of the country you stay.

- 1 On the standby screen,  (1 second or longer) to enter +
  - ▶   ▶ The other party's mobile phone number excluding the first "0" ▶  (voice call) /  (V.phone)
- 2 After the call ends, 