

R/C SF Challenger Cat. No. 60-4245

Your RadioShack Radio-Controlled Challenger is fun for children ages four and up. You can watch it race forward or turn in reverse.

Installing the batteries:

Your Challenger requires two 'AA' batteries, and its pistol controller requires one 9V battery (neither supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

To install the batteries:

1. Press the tab of Challenger's battery compartment cover toward the "On/Off" switch and lift to remove it. Use a Philip screw driver to remove the screw on the pistol controller's battery compartment cover, then remove the cover.
2. Install two 'AA' batteries into Challenger's battery compartment and one '9V' battery into the controller's battery compartment as indicated by the polarity symbols (+ and -) marked inside the compartments.
3. Replace the covers.

Operations

1. To START Challenger, move switch on bottom of vehicle to "ON" position. The vehicle will remain stationary.
2. To drive FORWARD, squeeze and hold trigger on pistol controller and vehicle will race forward in a straight line.
3. For racing in REVERSE & TURNING, push trigger on pistol controller upward.
4. Set the key to 'OFF' position to turn off the Challenger.

CARE AND MAINTENANCE

To enjoy your Radio-Controlled Challenger for a long time:

- Keep the Challenger dry. If it gets wet, wipe it dry immediately
- Use and store the Challenger only in normal temperature environments.

- Handle the product gently and carefully. Don't drop it.
- Keep the Challenger away from dust and dirt.
- Wipe the Challenger with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Challenger's internal components can cause a malfunction and invalidate its warranty. If your Challenger is not performing as it should, take it to your local RadioShack store for assistance.