

Limited Ninety-Day Warranty

RadioShack warrants this product against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store.

RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products, on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/01

2001 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-4280

Wildcat

Your RadioShack Wildcat can make you a winner! Built to 1/10 scale, your Wildcat can reach speeds up to 350 feet per minute. The Wildcat comes in two frequencies (27 MHz & 49 MHz) so you can race with a friend. Check your Wildcat's box to see which frequency the go-cart uses.

NOTE:

You need these item (not supplied) to power your Wildcat

- * Four AA alkaline batteries for the vehicle
- * One 9V battery for the transmitter

The Wildcat is perfect for beginning racers, ages six & up.

FCC NOTICE

Your Wildcat or its transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Wildcat or its transmitter is causing the interference, release the transmitter's control levers and turn off your Wildcat. If the interference goes away, your Wildcat or its transmitter is causing it. Try to eliminate the interference by:

- Moving your Wildcat and its transmitter away from the TV or radio
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Wildcat and transmitter.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

INSTALLING BATTERIES

WARNING: Dispose of batteries promptly and properly; do not bury or burn them.

Cautions:

Use only fresh batteries of the required size and recommended type.

Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Never leave dead or weak batteries in the Wildcat or the transmitter.

If you will not be using the car for a week or more, remove the batteries from both the transmitter and the car. Batteries can leak chemicals that can damage electronic parts.

In the Transmitter

The transmitter requires one 9V battery. For the best performance and longest life, we recommend a RadioShack alkaline battery.

1. Slide the battery compartment in the direction of the arrow to remove it.
2. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and press it down to snap it shut.

When the transmitter's range decreases, replace its battery.

In the Car

Your Wildcat requires four AA alkaline batteries for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Follow these steps to install the Wildcat's batteries

1. Slide the ON/OFF switch to OFF.
2. Move the battery compartment cover's latches in the direction of the arrow to position of open, then grasp the rid on the cover & lift up the cover and remove it.
3. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked outside the compartment.
4. Close the battery compartment cover and turn the latches back to secure the battery compartment.

NOTES:

If the Wildcat moves slowly or not at all, replace the Wildcat's batteries.

DRIVING THE WILDCAT

Warnings:

To avoid crashes, always watch where the Wildcat is going
Never play with the Wildcat in the street

1. Slide ON/OFF on the bottom of the Wildcat to ON.
2. Slide ON/OFF on the transmitter to ON.
3. Use the transmitter's control levers to move and steer the wildcat.

Left Control Lever

- Push forward to move forward
- Pull back to move backward
- Release to stop

Right Control Lever

- Push left to turn left
- Push right to turn right
- Release to go straight

4. When you finish driving the Wildcat, slide ON/OFF on both the car and the transmitter to OFF.

Notes:

Rider' arms moves with steering wheel when car is turning to left & right
Exhaust pipe lights up when the car is in motion

WHEEL ALIGNMENT

If the Wildcat does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the Wildcat. Rotate the control to the left if the car is pulling to the right, or to the right if the car is pulling to the left.

CARE

The following suggestion will help you care for the Wildcat so you can enjoy it for years.

Do not drive the car through puddles or mud, on a wet floor, or in sand, rain, or snow. These can damage the car.

Do not expose the car or transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.

Do not leave the car or transmitter outside overnight. Night dampness can damage their electronic circuits.

HELPFUL HINTS

Running your car continuously for long periods generates high heat levels. Heat causes the most wear and tear on the motor. To keep heat levels down, when your car's batteries run down, let the car cool at least 10 minutes before installing new batteries.

If the Wildcat slowly and you have installed fresh batteries, check the wheel mechanism for debris.

If someone uses a CB nearby, it might interfere with control of the Wildcat. If this happens, move the Wildcat and its transmitter away from the CB.

You cannot operate your Wildcat near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Wildcat's box to see which frequency your car uses.

USER-REPLACEABLE PARTS

You can order replacement parts for your boat at your local RadioShack store. The part number in the chart as below.