


Panasonic[®]

Operating Instructions DECT 6.0 Portable Station

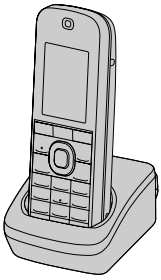

Model No. **KX-UDT121**

Thank you for purchasing this Panasonic product.

Please read this manual carefully before using this product and save this manual for future use.

Please use only the battery provided and charge the battery for about 3 hours before using the handset for the first time. For details, see "Charging the Battery" in this manual.

Note

In this manual, the suffix of each model number is omitted unless necessary.

Introduction

Outline

This manual describes information about the installation and operation of the PS (Portable Station) handset and the charger.

Related Documentation

Getting Started

Briefly describes basic information about the installation of the handset and the charger.

Administrator Guide

Describes information about the programming and maintenance of the SIP Cell Station Unit (CS).

Installation Guide

Briefly describes basic information about the installation of the SIP Cell Station Unit (CS).

Manuals and supporting information are provided on the Panasonic Web site at:

<http://www.panasonic.com/sip> (for users in the United States)

<http://panasonic.net/pcc/support/sipphone> (for users in Canada)

Note

- The contents and design of the software are subject to change without notice.

Other Information

When you ship the product (For users in the United States only)

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-paid letter, detailing the symptom to the outside of the carton.

DO NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

Product Service (For users in the United States only)

Panasonic factory service centers for this product are listed in the service center directory.

Consult your authorized Panasonic dealer for detailed instructions.

For Future Reference

Record the information in the space below for future reference.

Note

- The serial number of this product may be found on the label affixed to the inside of the battery compartment on the back of the handset. You should note the serial number of this unit in the space provided and retain this manual as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO.	_____
SERIAL NO.	_____
DATE OF PURCHASE	_____
NAME OF DEALER	_____
DEALER'S ADDRESS	_____

DEALER'S TEL. NO.	_____

Trademarks

- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.
- Jabra is a registered trademark of GN Netcom A/S.
- Plantronics is a registered trademark of Plantronics, Inc.
- vCard is a trademark of the Internet Mail Consortium.
- All other trademarks identified herein are the property of their respective owners.

Table of Contents

Important Information	6
For Your Safety	6
Data Security	8
Additional Information	8
Important Safety Instructions	8
For Users in the United States Only	8
For Users in Canada Only	10
For Best Performance	11
Battery Information	11
Before Operating the Telephone	13
Accessory Information	13
Location of Controls	14
Handset Functions	16
Setting the Password	16
Key Lock	16
Silent Mode	16
Advanced Voice Clarity	17
Power Save Mode	17
Display	18
Soft Keys	19
Other Icons	20
Flexible Keys	21
Basic Operations	22
Operation Outline	22
Function Menus	23
Function Keys	23
Selecting the Display Language	24
Changing the Handset Phone Number Display	24
Editing the Names of the Flexible Keys	24
Adjusting the Ringer Volume	24
Changing the Vibrate Setting	24
Adjusting the Receiver/Speaker/Headset Volume	25
Feature Operations	26
Making Calls	26
Calling	26
One-touch Dialing	26
Hot Key Dialing	26
Searching for an Item in the Phonebook	27
Receiving Calls	28
Receiving	28
Caller ID	28
During a Conversation	29
Holding a Call	29
Transferring a Call (Call Transfer)	29
Three-party Conference	29
Useful Features	30
Call Forwarding/Do Not Disturb	30
Call Waiting	30
Message Waiting	31
Listening to Voice Mail Messages	31

Bluetooth	31
Turning Bluetooth On or Off	31
Setting and Changing the Bluetooth PIN Number	31
Registering and Deregistering the Bluetooth Headset	32
Connecting and Disconnecting a Bluetooth Headset	32
Call Handling with a Bluetooth Headset	33
Registering and Deregistering a Cell Phone for Phonebook Transfer	33
Customizing the Telephone	35
Using the Handset Phonebook	35
Private Ring	35
Storing an Item in the Handset Phonebook	35
Phonebook and vCard Transfer by Bluetooth	37
Assigning Hot Keys	38
Memo Alarm Setting	39
Entering Characters	40
Character Mode Table	41
Locking the Handset Phonebook	42
Deleting Stored Items	42
Changing Handset Settings	43
Handset Setting Menu Layout	43
Installation and Setup	52
Battery Installation	52
Charger Connection	52
Charging the Battery	53
Charger Wall Mounting	53
Attaching the Belt Clip	54
Attaching the Phone Strap	54
Appendix	55
Specifications	55
RF Specifications (DECT 6.0)	55
RF Specifications (Bluetooth)	55
Troubleshooting	56
Error Messages	60
Index.....	63



Important Information

For Your Safety



To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard and injury caused when the denotation is disregarded and improper use is performed.

	WARNING
Denotes a potential hazard that could result in serious injury or death.	
	CAUTION
Denotes a hazard that could result in minor injury or damage to the unit or other equipment.	









The following symbols are used to classify and describe the type of instructions to be observed.






	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.







WARNING

General Safety


-  For safety reasons, do not physically modify the product or any optional equipment.
-  To prevent possible fire or electric shock, do not expose this product to rain or moisture.
-  Follow all warnings and instructions marked on this product.
-  To reduce the risk of electric shock, do not disassemble this product. Only qualified personnel should service this product. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock.
-  Unplug the AC adaptor from the AC outlet and have the product serviced by qualified service personnel in the following cases:
 - A.** When the power supply cord or plug is damaged or frayed.
 - B.** If liquid has been spilled into this product.
 - C.** If the product has been exposed to rain or water.
 - D.** If the product does not operate according to this manual. Adjust only the controls that are explained in this manual. Improper adjustment of other controls may result in damage and may require service by a qualified technician to restore the product to normal operation.
 - E.** If the product has been dropped or damaged.
 - F.** If product performance deteriorates.
-  Do not insert objects of any kind into this product through openings, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on or in the product.
-  The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.
-  Switch off the device when in the proximity of areas with potentially explosive atmospheres such as fuel/chemical storage facilities or blasting operations.

-  Consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1920 MHz to 1930 MHz and the output peak power level is less than 0.12 W. When using Bluetooth® devices, the product operates in the frequency range of 2.4000 GHz to 2.4835 GHz and the output peak power level is less than 2.5 mW.)
-  Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using devices sensitive to external RF (radio frequency) energy.
-  Unplug the charger from AC outlet if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorized service center.
-  The battery poses a choking hazard. Keep the battery out of reach of children.
-  This handset earpiece is magnetized and may retain small ferrous objects.













Installation

-  Do not install the product in any other way than described in relevant manuals.
-  The product may only be installed and serviced by qualified service personnel.
-  The AC adaptor should only be connected to the type of electric power supply specified on the charger label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
-  Do not allow anything to rest on the power cord. Do not locate the charger where the power cord may be stepped on or tripped on.

Placement

-  Do not place the product on an unstable surface, as a fall may cause serious internal damage.



-  The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
-  The product should never be placed near or over a radiator or other heat source.
-  Use only the AC adaptor, battery and charger indicated in this manual.
-  Do not dispose of the battery in a fire. It may explode. Check with local authorities for special disposal instructions.
-  Do not open, puncture, crush, or drop the battery. A damaged battery must not be used. This can result in the risk of fire, explosion, overheating, and leaking of the electrolyte.
-  Do not touch released electrolyte if the battery leaks. It may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed. If you touch it, immediately wash the affected areas with water and seek medical help.
-  Exercise care in handling the battery in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
-  Charge the battery provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in this manual.
-  There is a danger of explosion if the battery is incorrectly replaced.
-  When you leave the product unused for a long period of time, unplug the AC adaptor from the outlet.
-  Do not use a microwave oven to dry this product.
-  Do not use the AC adaptor if it has been submerged in water.

Notice

- This telephone communicates using digital signals that are difficult to intercept. However, it is possible that the signals could be intercepted by a third party.

Data Security

- To avoid unauthorized access to this product:
 - Keep the password (e.g., PIN for registration) secret.
 - Change the default password.
 - Set a password that is random and cannot be easily guessed.
 - Change the password regularly.
- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase the information such as the phonebook or call log from the memory before you dispose of, transfer or return the product, or have the product repaired.
- Set the password when you register the PS to the CS (Cell Station). For details, see "Setting the Password (Page 16)".
- It is recommended that you lock the phonebook to prevent stored information from being leaked when you carry the PS or if the PS is lost.

Additional Information

Important Safety Instructions

When using your telephone equipment, basic safety precautions, including those below, should always be followed to reduce the risk of fire, electric shock and injury to persons.

- Do not use the product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- Do not use the telephone in the vicinity of a gas leak to report the leak.

SAVE THESE INSTRUCTIONS

For Users in the United States Only

FCC and Other Information

Privacy of communications may not be ensured when using this phone.

FCC RF Exposure Warning:

- This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- To comply with FCC RF exposure requirements, the base unit must be installed and operated 20 cm (8 inches) or more between the product and all person's body (excluding extremities of hands, wrist and feet).
- This product may not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

Notice

FCC ID can be found inside the battery compartment or on the bottom of the units.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities during off-peak hours, such as early morning or late evening.

CAUTION

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

Customer Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the inside of the battery compartment of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ.....

If requested, this number must be provided to the telephone company.

If trouble is experienced with this equipment, for repair or warranty information, please contact:

Panasonic Service and Technology Company-BTS Center
415 Horizon Drive Bldg. 300 Ste. 350-B

Suwanee, GA 30024-3186

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.


This unit features a built-in Bluetooth module that can be used to wirelessly connect a Bluetooth headset to the unit.

Hearing Aid Compatibility

This telephone provides magnetic coupling for hearing aids as defined by the FCC in 47 CFR Section 68.316. Use only handsets or other acoustic devices with this equipment that are compliant with the hearing aid compatibility requirements of FCC Part 68.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

Compliance with TIA-1083 standard:

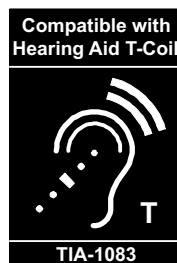

Telephone handsets identified with this logo have reduced noise and interference when used with T-Coil equipped hearing aids and cochlear implants.

For Product Service

- Call 1-800-211-PANA (7262) for the location of your nearest authorized service center.
- Panasonic's e-mail address for customer inquiries: consumerproducts@panasonic.com
For customers in the USA and Puerto Rico ONLY.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono sin cordón fue elaborado para su uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir una violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

For Users in Canada Only

Industry Canada Notices and Other Information

This product meets the applicable Industry Canada technical specifications.

Notice

Operation is subject to the following two conditions: (1) this product may not cause interference, and (2) this product must accept any interference, including interference that may cause undesired operation of the product.

Privacy of communications may not be ensured when using this phone.

Some wireless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimise or prevent such interference, the wireless telephone should not be placed near, or on top of, a TV or VCR. If interference is experienced, move the wireless telephone farther away from the TV or VCR. This will often reduce, or eliminate, interference.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This Class B digital apparatus complies with Canadian ICES-003.

CAUTION

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

RF Exposure Warning:

- This product complies with IC radiation exposure limits set forth for an uncontrolled environment.
- This handset may not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

For Best Performance

Operating Range

- The range of operation depends on the topography of your office, weather, or usage conditions, because signals are transmitted between the CS and the handset by radio waves.
- Normally, you get greater range outdoors than indoors. If there are obstacles such as walls, noise may interfere with your telephone calls. In particular, high metal shelves or reinforced concrete walls will restrict your operating range.
- A handset may not work when it is too far from the CS depending on the structure of the building.
- We strongly suggest you hold the bottom half of the handset to ensure better call quality. Because, the antenna is located in the upper half of the handset.

Noise

Occasional noise or interference may occur due to electromagnetic radiation from objects such as refrigerators, microwave ovens, faxes, TVs, radios, or personal computers. If noise disturbs your telephone calls, keep the handset away from these electrical appliances.

Environment

- Keep the product away from heating appliances and devices that generate electrical noise, such as fluorescent lamps and motors. These noise sources can interfere with performance of the product.
- Do not place the product in rooms where the temperature is less than 0 °C (32 °F) or greater than 40 °C (104 °F).
- To avoid damage, charge the battery only in temperatures ranging from 5 °C (41 °F) to 40 °C (104 °F).
- Allow 10 cm (3-15/16 in) clearance around the product for proper ventilation.
- Avoid environments with excessive smoke, dust, moisture, mechanical vibration, shock, or direct sunlight.
- The apparatus is designed to be installed and operated under controlled conditions of ambient temperature and a relative humidity.

Routine Care

- Unplug the charger from the AC outlet before cleaning.
- Wipe the product with a soft cloth.
- Do not clean the product with abrasive powder or with chemical agents such as benzine or thinner.
- Do not use liquid cleaners or aerosol cleaners.

- Clean the terminal of the charger periodically.

Placement

- Do not place heavy objects on top of the handset and charger.
- Care should be taken so that objects do not fall onto, and liquids are not spilled into, the product.
- Place the charger on a flat surface. If the charger is mounted on the wall, install it straight.

Bluetooth

- A Bluetooth headset can communicate with the handset within a range of approximately 10 m (32.8 ft). The connection may be subject to interference from obstructions such as walls or electronic devices. For best performance, we recommend using a Bluetooth headset within 1 m (3.28 ft) of the handset.
- This unit complies with the Bluetooth wireless technology 2.0 specification.

Battery Information

After your Panasonic battery is fully charged (at 25 °C [77 °F]):

Operation	Operating Time
While Talking (Backlight off ¹ , Bluetooth off, Narrowband Mode)	Up to about 13 h
While Talking (Backlight on ² , Bluetooth on, Wideband Mode)	Up to about 7 h
While not in use (Standby)	Up to about 200 h

¹ When the "Talking" setting of "Backlight" is set to "off". For details, see "Display Option (Page 48)".

² When the "Talking" setting of "Backlight" is set to "on". For details, see "Display Option (Page 48)".

- Operating time may be shorter than listed above depending on usage conditions and ambient temperature.
- The battery will drain slowly even while the handset is turned off.
- The handset can receive calls while charging.
- Battery consumption increases when the handset is out of range (if "Y" flashes, turn the handset off).
- **Clean the handset and the charger contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high**

humidity. Otherwise the battery may not charge properly.

Low Battery Warning

The battery needs to be charged in the following situations:

- The battery level indicator displays as empty ("🔋") and the alarm sounds^{*1}.
- "Charge Battery" is displayed. In this situation, the handset cannot be operated.

^{*1} If the low battery warning occurs during a conversation, the handset will turn off in one minute.

Replacing the Battery

If the battery level indicator displays as empty ("🔋") after using the phone for a short time, even when the battery has been fully charged, the battery should be replaced. Before replacing the battery, make sure the low battery warning is displayed, then turn off the power to prevent memory loss. Replace the battery and charge the new battery for about 3 hours.

If you replace the battery before the low battery warning appears, the battery strength icon may display an incorrect reading. In this case, use the handset as normal with the new battery installed. To install the battery, see "Battery Installation (Page 52)".

When the low battery warning is displayed, charge the battery for about 3 hours. The battery strength icon will then display the correct reading.

- Please use only Panasonic batteries. For details, consult your administrator or dealer.
- There is a danger of explosion if the battery is incorrectly replaced.





 



A lithium ion/polymer battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

Before Operating the Telephone

Accessory Information

Included Accessories
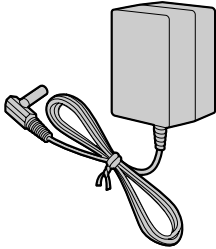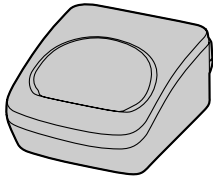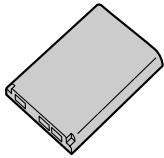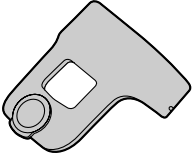
<p>AC adaptor: 1</p>  <p>[Part No.] PNLV226</p>	<p>Charger: 1</p>  <p>[Part No.] PNWEUDT121M</p>	<p>Battery¹: 1</p> 
<p>Belt Clip: 1</p>  <p>[Part No.] PNKE1142Z1</p>	<p>Belt Clip Holder: 1</p>  <p>[Part No.] PSKE1040Z4</p>	<p>Battery Cover²: 1</p> 

¹ For details, consult your administrator or dealer.

² The battery cover comes attached to the handset.


- To order accessories, call toll-free **1-800-332-5368**. (For users in the United States only)

Note



- The illustrations may differ from the appearance of the actual product.

Location of Controls

The headset is an optional accessory.

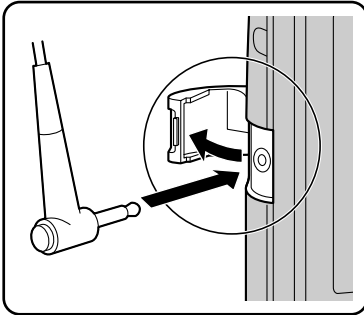

Open the cover.

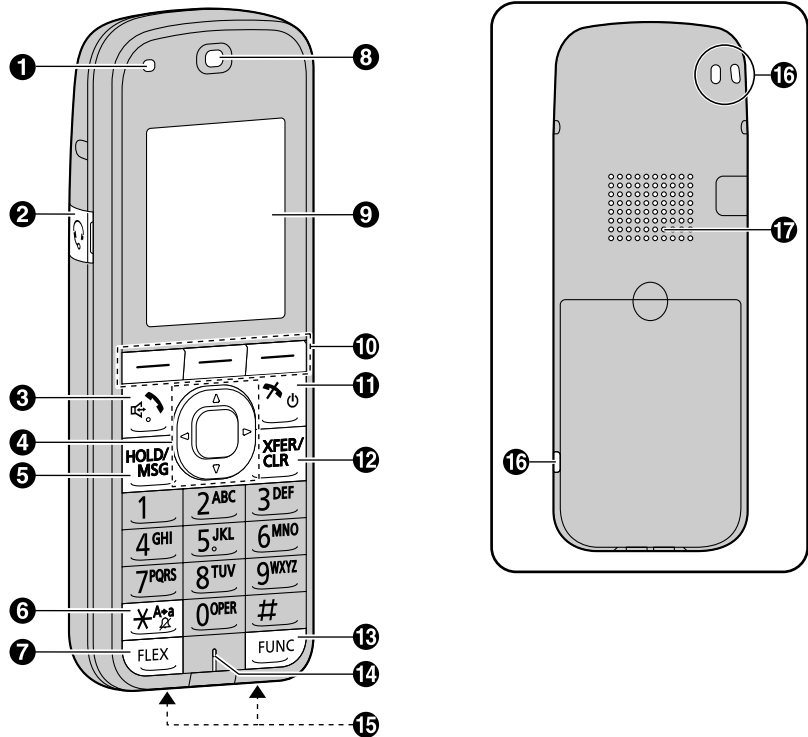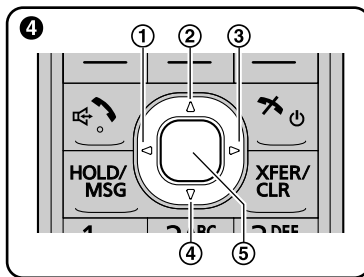

1 Ringer/Charge Indicator

2 Headset Jack

The following headsets can be used with this unit. (Not all operations with the headsets can be guaranteed.)

- Wired headsets
Panasonic KX-TCA400 and KX-TCA430
- Bluetooth headsets
Selected Plantronics®-brand headsets
Selected GN Netcom Jabra®-brand headsets

For up-to-date information about headsets that have been tested with this unit, refer to the following web sites:

<http://www.panasonic.com/sip> (for users in the United States)

<http://panasonic.net/pcc/support/sipphone> (for users in Canada)

3 TALK/SP-PHONE (Speakerphone) Key

Used to make or answer calls, or toggle between Receiver mode and Hands-free¹ mode during a conversation.

4 Navigator Key

The Navigator Key includes four arrow keys and a center key. The arrow keys are used to adjust the ringer/receiver volume or move the cursor to select an item. The center key is used to confirm a selection. If in standby mode, pressing the keys perform the following functions:

- ① LEFT (◀) → Used to display the Incoming call log.

- ② UP (▲) → Used to adjust the ringer volume.
- ③ RIGHT (▶) → Used to open the phonebook.
- ④ DOWN (▼) → Used to display the Outgoing call log.
- ⑤ CENTER → Used to display the Menu.

In this manual, when a procedure instructs you to "press **OK**", you can also press the **[CENTER]** key to confirm the selection.

⑤ HOLD/Voice Message Key

During talking, used to place a call on Hold. In standby mode, pressing this key plays your voice messages.

⑥ Silent Mode Key

Used to turn Silent Mode on or off when pressed for more than 2 seconds in standby mode. For details, see "Silent Mode (Page 16)".

⑦ Flexible Key

Pressing the **[FLEX]** key displays a menu with functions that have been assigned to each dial key (0–9, *, and #). The functions can be selected from the menu, or accessed quickly by pressing **[FLEX]**, then the assigned key.

⑧ Receiver

⑨ Display

For details, see "Display (Page 18)".

⑩ Soft Keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display. For details about the soft keys displayed here, see "Soft Keys (Page 19)".

⑪ POWER/CANCEL Key

Used to end calls, exit the phonebook or Function mode. Press and hold this key to turn the handset on or off.

⑫ TRANSFER/CLEAR Key

Used to transfer a call to another party, or to clear digits or characters.

⑬ Function Key

Pressing the **[FUNC]** key followed by a keypad number (0–9) allows you to perform various common functions quickly. For details, see "Function Keys (Page 23)".

⑭ Microphone

⑮ Charge Contacts

⑯ Strap Holes

Used to attach phone straps and similar items.

⑰ Speaker

¹¹ You can talk with the other party alternately through the speaker in a quiet room. During a conversation using a headset, Hands-free mode does not work.

Handset Functions

Setting the Password

The handset password is not set by default. You must register a handset password (4 digits) before use. You cannot use the following features without setting a password:

- Phonebook lock (See "Locking the Handset Phonebook (Page 42)".)
- "Manual&Password" or "Auto&Password" for Key Lock Type (See "Key Option (Page 47)".)
- Reset Handset (See "Other Option (Page 50)".)

To set

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "**Other Option**", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "**Change Password**", and then press **OK**.
5. Enter a new password (4 digits [0–9]).
6. Verify the password by entering it again as in step 5.

Note

- To avoid unauthorized access to this product:
 - Set a password that is random and cannot be easily guessed.
 - Change the password regularly.
- Make a note of the password so that you will not forget it.

Key Lock

You can lock all keys other than the Navigator Key while the handset is in standby mode. One of 4 key lock types can be selected. For details, see "Key Option (Page 47)".

To lock

Press and hold **MENU** or the **[CENTER]** navigation key for more than 2 seconds to lock the handset keys. The **LOCK** icon will be displayed to indicate that the keys are locked.

To unlock

To unlock the handset keys, press and hold **LOCK** or the **[CENTER]** navigation key for more than 2 seconds. The **LOCK** icon will change to **MENU** to indicate the keys have been unlocked.

Note

- If you select "Manual&Password" or "Auto&Password" for Key lock type, you need to enter the password to unlock the handset.
- If no password has been set, you cannot select "Manual&Password" or "Auto&Password" for Key lock type. To set the password, see "Setting the Password (Page 16)".

Silent Mode

Silent Mode turns off the ringer and sets the handset to vibrate when calls are received. This can be useful in situations where you do not want to be disturbed, such as during a meeting.

When Silent Mode is active, the following features are turned off or set as specified automatically, regardless of their settings.

- Ringer Volume
- Ring On Charger
- Auto Answer
- Key Tone
- Vibrate (Vib.& Ring)

To set or cancel

To set or cancel Silent Mode, press and hold **X A 9** for more than 2 seconds.

Note

- If you set the handset on the charger during Silent Mode, the handset will not vibrate.^{*1}
- When Silent Mode is set, the Low Battery Alarm will not be heard in standby mode.
- When Silent Mode is set, confirmation sounds for setting the ring pattern or ring volume will not play.

^{*1} Please note that if you set the handset on the charger while receiving an incoming call, vibration will stop. Once the vibration stops, the handset will not vibrate again for that call, even if the handset is lifted up again. (If Quick Answer is set, lifting up the handset will answer the call.)

Advanced Voice Clarity

When Advanced Voice Clarity is enabled, environmental noise is reduced to improve and maintain sound quality for the other party in the conversation. Receiver volume is also increased according to the level of environmental noise. It is useful in noisy environments such as warehouses, manufacturing plants, restaurants, and garages. Advanced Voice Clarity can be enabled by default for regular use, or toggled on/off during a call.

Enabling or disabling Advanced Voice Clarity

1. Press **FUNC**.
2. Press **[▲]** or **[▼]** to select "Voice Clarity", and then press **OK**.
3. Press **[▲]** or **[▼]** to select "on" or "off", and then press **OK**.

Temporarily enabling or disabling Advanced Voice Clarity during a call

You can enable or disable Advanced Voice Clarity during a call by doing either of the following:

- a. Press **FUNC**, then press **[▲]** or **[▼]** to select "Voice Clarity", and then press **OK**.
or
- b. Press **AVC**. To display the **AVC** soft key, edit the displayed soft keys. See "Key Option (Page 47)".

Note

- Advanced Voice Clarity can be used only in Receiver mode or with a headset. It cannot be used in Hands-free mode. If Hands-free mode is enabled during a call while Advanced Voice Clarity is enabled, Advanced Voice Clarity will be temporarily disabled.

Power Save Mode

Power Save Mode turns off the ringer, LCD backlight, and/or key backlight automatically after a set number of seconds have passed while receiving a call. For details about adjusting power save mode settings, see "Incoming Option (Page 45)".

Display



1 Pictograph

- Within range of a Cell Station (CS)
- (Blinking) Out of range
- Off-hook Status
- Phonebook
- Message Waiting
- Bluetooth on, no Bluetooth headset connection
- Bluetooth on, Bluetooth headset connected
- Incoming Call Log
- Outgoing Call Log
- Navigation Key Guidance

Battery Indicator^{*1}

- Full
- Low
- Needs to be charged

^{*1} For details, see "Battery Information (Page 11)".

2 Handset Status Information

- Vibration (See page 24)
- Ringer Off (See page 24)

- Silent Mode (See page 16)
- Auto Answer
- Call on Hold
- Microphone Mute
- Voicemail Waiting
- New Incoming Call Record
- Fwd** Call Forwarding (See page 30)
- DND** Do Not Disturb (See page 30)

3 Time Display

4 Date/Incoming Call Log Status/New Messages or New Text Messages/Phonebook Error

5 Handset's Phone Number and Name

To change the display of the handset's phone number, see "Changing the Handset Phone Number Display (Page 24)".









6 Soft Keys

Note










- Example images of the display in this manual are samples only, and the actual screen on your phone may vary in color and/or appearance.

Soft Keys

Icons and information shown on the display will vary depending on the context. To select an item shown on the display, press the corresponding soft key.

	Opens the phonebook. Pressing this key for more than 2 seconds locks the phonebook.	SAVE	Used to save a setting.
	Displayed when in Phonebook Lock. Pressing this key and then entering the password (default: not registered), unlocks the phonebook temporarily. Pressing for more than 2 seconds, then entering the password (default: not registered), unlocks the phonebook. If no password has been set, you cannot lock the phonebook. For details about setting the password, see "Setting the Password (Page 16)".	CLR	Clears digits or characters.
	Stores a new item in the phonebook.	MUTE	Turns the microphone mute feature on or off during a conversation. Flashes when Mic Mute is on.
CALL	Make a call.		Turns the ringer off.
AVC	Activate/deactivate Advanced Voice Clarity.	MENU	<ul style="list-style-type: none"> When in standby mode, opens the main menu. When changing/viewing settings, opens the list menu (edit/delete in the phonebook, etc.). When in standby mode, pressing this key for than 2 seconds locks all keys.
	Used to set the Alarm.		Returns to the previous display.
DENY	Reject an incoming call.	AM/PM	Used to select AM or PM when setting the Memo Alarm feature.
CONF	Establishes a multiple-party conversation (Conference).	OK	Confirms the entry.
	Searches for an item in the phonebook alphabetically.		Displayed when in Key Lock mode. Pressing this key for more than 2 seconds unlocks the keys.
ABC	Displayed when in Alphabetic character entry mode. Pressing this key switches to Numeric character entry mode.	NEXT	Advances to the next display.
0-9	Displayed when in Numeric character entry mode. Pressing this key switches to Special character (Extended 1) character entry mode.	DELETE	Used to delete the setting.


Before Operating the Telephone

	Displayed when in Special character (Extended 1) entry mode. Pressing this key switches to Alphabetic character entry mode.		Disconnects the current call and allows you to make another call without hanging up.
	Used to set Call Forwarding and Do Not Disturb.		Perform an unscreened (blind) transfer.
	Displays the Outgoing Call Log.		Used to select an item when in setting mode.
	Displays the last dialed number.		Used to set/clear the Auto Answer mode.
	Opens the Incoming Call Log.		

Note

- The display of the soft keys can be customized. The soft keys displayed in standby mode or during a call can be set. The names of the soft keys can also be edited. For details, see "Key Option (Page 47)".

Other Icons


Icon	Description
	Displayed next to an extension from which a voice mail message is waiting. For details, see "Listening to Voice Mail Messages (Page 31)".

Flexible Keys

A Flexible Key can be used either to seize a line in order to make or receive a call, or used as a function key.

Press **FLEX** to display the Flexible Key list. Here you can access the 12 Flexible Keys. The color of each key number indicates the status of the line or the status of the function assigned to the key.

[Example]

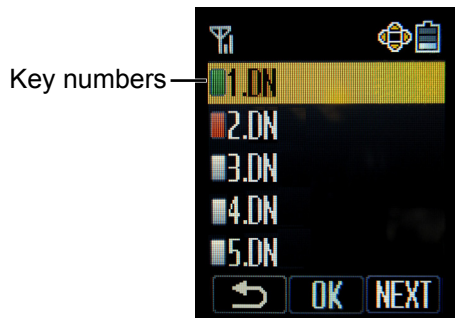

- To select a key, press [**▲**] or [**▼**] to select the desired key, and then press **OK**.
- To edit the names of Flexible Keys, see page 24.

The following types of flexible keys are available:

DN (Directory Number)

Seizes the line assigned to the DN key. When a call arrives at the DN key, pressing the key answers the call.

LED Indication

- **Off:** Idle
- **Green on:** You are on a call using the DN key.
- **Flashing green rapidly:** A call is being received.
- **Flashing green slowly:** A call is on hold.
- **Red on:** A shared line is in use or on private hold at another unit.
- **Flashing red slowly:** A shared line is on hold at another unit.

Note

- A shared line is a line that can be used by multiple units. This is an optional feature and may not be supported on your phone system.
- If a call is on private hold (red, steady on), the call cannot be retrieved except from the unit that put the call on hold.

One-Touch

Calls the party or accesses a feature assigned to the key. For details, see "One-touch Dialing (Page 26)".

Basic Operations

Operation Outline

Handset functions are accessed through the display menu and selected with the Navigator Key and soft keys.




*1 If soft key display settings are changed, the soft keys shown here may not be displayed.




 

- The selected item will be highlighted.
- For details about entering characters, see "Entering Characters (Page 40)". For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".

Function Menus


Press **MENU** or the **[CENTER]** navigation key to display the main and sub menus.

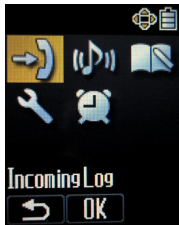




Main Menu—While in Standby Mode

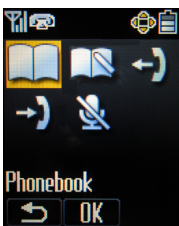

-  **Incoming Log**
Enters the Incoming Call Log.
-  **Ringer Volume**
Accesses the "Ringer Volume" setting.
-  **New Phonebook**
Stores a new item in the phonebook.
-  **Setting Handset**
Accesses the "Setting Handset" settings.
-  **Memo Alarm**
Accesses the "Memo Alarm" settings.

 Sub Menu—While Off-hook/During a Conversation




-  **Phonebook**
Opens the phonebook.
-  **New Phonebook**
Stores a new item in the phonebook.
-  **Outgoing Log**
Enters the Outgoing Call Log.
-  **Incoming Log**
Enters the Incoming Call Log.
-  **Mute**
Turns the microphone mute feature on or off during a conversation.

Function Keys

Handset functions can be activated through the display key list.

1. Press **FUNC** to display the function key list.
2. Press **[▲]** or **[▼]** to select the desired function, and then press **OK**.

You can also press the number key corresponding to a function number to select it directly.

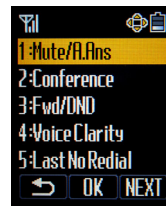

1: Mute/A.Ans

Automatically answers incoming calls in hands-free mode. "☎" is displayed in standby mode.

2: Conference

Establishes a multiple-party conversation.

3: Fwd/DND

Displays and/or sets Call Forwarding and Do Not Disturb.

4: Voice Clarity

Sets Advanced Voice Clarity.

5: Last No Redial

Call the last number that was dialed.

6: Phonebook

Makes a call using the phonebook.

7: Incoming Log

Makes a call using the Incoming Call Log.

8: Redial List


List numbers that were recently dialed.

9: Flash/Recall

Disconnects the current call and allows you to make another call without hanging up.

0: Alarm

Sets a memo alarm.

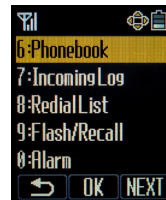

Selecting the Display Language

You can select the language displayed on your handset.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Display Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Language", and then press **OK**.
5. Press **[▲]** or **[▼]** to select a language¹, and then press **OK**.

¹ You can select one of the following 3 languages: English, Español, FRANÇAIS.

Changing the Handset Phone Number Display

You can change the display of the handset's phone number when the handset is in standby mode.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Display Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Standby Display", and then press **OK**.
5. Press **[▲]** or **[▼]** to select the desired item, and then press **OK**.

Note

- By default, "H/S No." is selected.
- For details about standby display settings, see "Display Option (Page 48)".

Editing the Names of the Flexible Keys

Web user interface programming is required to change the names of the Flexible Keys used for the handset. For details, consult your administrator or dealer.

Adjusting the Ringer Volume

The volume of the ringer can be adjusted, or turned off.

Adjusting the Ringer Volume or Turning the Ringer Off

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Ringer Volume**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select the desired setting (Step Up, Step Down, Level 1–6, Off), and then press **OK**.

Note

- You can press the **[▲]** key instead of performing steps 1 and 2.
- For details about setting the ringer pattern, see "Incoming Option (Page 45)".

Adjusting the Ringer Volume or Turning the Ringer Off while Ringing

While receiving a call, do the following to adjust the ringer volume or turn the ringer off:

To adjust the ringer volume

Press **[▲]** or **[▼]** to adjust the volume¹.

To turn the ringer off

Press **[Mute]** or **[Power]**.

¹ The adjusted volume level will also be used for subsequent calls.

Note

- If you attach a headset while receiving an incoming call, the ring from the handset does not switch to the headset. If you attach a headset before receiving an incoming call, and headset ringer is set to "On", ringing will be heard from the headset.

Changing the Vibrate Setting

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Incoming Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Vibrate", and then press **OK**.

5. Press [▲] or [▼] to select the desired setting (Vib. & Ring, Vib. → Ring, Off), and then press **OK**.

Note

- To set Vibrate only, without ringing, select "Vib. & Ring" and set the Ringer Volume to "Off", or turn Silent Mode on. For details, see "Location of Controls (Page 14)" and "Adjusting the Ringer Volume (Page 24)".

Adjusting the Receiver/ Speaker/Headset Volume

During a conversation, press [▲] or [▼] to adjust the volume (Level 1–6).

Note


 
- If you are using a Bluetooth headset, you can also adjust the receiver volume by using the volume key on the Bluetooth headset. For details about using a Bluetooth headset, see "Bluetooth (Page 31)".

Feature Operations


Making Calls

Calling



Calling by Dialing

1. Press .
2. Dial the outside party's number.
3. Press **CALL**.
4. To end the call, press .

Predialing



 
In standby mode, you can start dialing while still on-hook. After dialing the number, press  to go off-hook and begin the call.

Note


- Alternatively, you can seize a specific line for making the call by pressing **FLEX** and selecting an idle DN key.
- To clear an entire number while predialing, press  for more than 1 second.
- To cancel dialing, press .
- If "Y" flashes, move closer to the CS and dial again.
- If you are using a Bluetooth headset, see "Call Handling with a Bluetooth Headset (Page 33)".


Using the Outgoing Call Log

If a call is received from a phone number stored in the phonebook, the number and name of the caller will be displayed in the call log.



 
1. While in standby mode, press **[▼]** or .
2. Press **[▲]** or **[▼]** to select an outgoing call record, and then press .
3. To end the call, press .

Using the Incoming Call Log

1. While in standby mode, press **[◀]**.
2. Press **[▲]** or **[▼]** to select an incoming call record, and then press .

3. To end the call, press .

Using the Phonebook

 
1. Press **[▶]** or .
2. Select an item stored in the phonebook, and then press .
3. To end the call, press .

Note

- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".
- For details about entering characters, see "Entering Characters (Page 40)".
- For details about storing an item in the phonebook, see "Storing an Item in the Handset Phonebook (Page 35)".

One-touch Dialing

You can make a call with a One-touch operation if a One-touch Dialing key has been created for the desired party. One-touch Dialing keys can also be configured to access features of your phone system, if available.


1. Press **FLEX**, and then press the One-touch Dialing key (flexible key).
2. To end the call, press .

Note

- For details about Flexible Keys, see "Flexible Keys (Page 21)".

Hot Key Dialing

You can assign a phone number to each number key and then access the desired phone number by simply pressing and holding the assigned number key.

1. Press and hold the dialing key (0–9) assigned as a Hot Key for more than 1 second.
2. Press .

Note



- While the Hot Key's information is displayed, you can press **[▲]** or **[▼]** to select another Hot Key number.
- If Hot Key dialing is set to "Auto", a Hot Key number can also be dialed by pressing and holding the assigned dialing key for a specified

number of seconds. For details, see "Selecting the Type of Hot Key Dialing (Page 38)".

- For details about assigning Hot Keys, see "Assigning Hot Keys (Page 38)".




Searching for an Item in the Phonebook

You can search for an item in the phonebook, and then make a call.

1. While in standby mode, press [▶] or .
2. Press [▲] or [▼] to select the desired item.
3. Press .




Searching by Name

You can also search for an item in the phonebook by entering a name:

1. While in standby mode, press [▶] or .
2. Press .
3. Enter the name or the first character(s) of the desired name, and then press **OK**.
4. Press [▲] or [▼] to select the desired item.
5. Press .


Searching by Category

If items in the phonebook have been assigned categories, you can search by category.

1. While in standby mode, press [▶] or .
2. Press , and then press #.
3. Press [▲] or [▼] to select a category, and then press **OK**.
4. Enter the name or the first character(s) of the desired name of the item in the category, and then press **OK**.
5. Press [▲] or [▼] to select the desired item.
6. Press .


Note

- If one item has multiple phone numbers stored, you can press the [CENTER] navigation key, and then press [▲] or [▼] to select the desired phone number for that item.
- For details about entering characters, see "Entering Characters (Page 40)".

- While an item is displayed you can press  to return to the "<Enter Name>" display, and then search for another item.

Receiving Calls

Receiving

To answer an incoming call, press .

Note

- If you are using a Bluetooth headset, see "Call Handling with a Bluetooth Headset (Page 33)".

To answer an incoming call on a specific line

1. Press **FLEX** to display the flexible keys.
2. Press the flexible key number, or press **[▲]** or **[▼]** to select the desired key, and then press **OK**.

You can also answer a call using the following features:

- Any Key Answer
- Quick Answer
- Auto Answer

For details about setting these features, see "Answer Option (Page 46)".

Note

- Flexible keys with incoming calls will be flashing green rapidly.
- If "Quick Answer" is set to "On" and a brief power failure occurs while the handset is receiving a call on the charger, the following may occur:
If a brief power failure occurs when the handset is receiving a call on the charger,
 - If "Talk On Charger" is set to "off" (default), the call may be disconnected after being answered.
 - If "Talk On Charger" is set to "On", the call may be answered automatically. In this case, please note that privacy rights may be violated or sensitive information may be transmitted to unauthorized parties.
- You can select the ringer pattern and LED pattern for each type of incoming call. For details, see "Incoming Option (Page 45)".

Rejecting an incoming call

You can reject an incoming call from your handset.

1. While an incoming call is ringing, press **DENY**.

2. The call will be rejected, and the handset will return to standby mode.

Rejecting calls from specific numbers


Calls from specific numbers can be automatically rejected. This feature can be enabled through Web user interface programming. For details, contact your administrator or dealer.

Caller ID

If an outside call that contains Caller ID information (a caller's name and telephone number) is received, this information will be logged in the incoming call log and displayed on the handset.

If a call from a number matching a number entered in the phonebook is received, the name registered in the phonebook for that number will be displayed along with the number.

[Example]

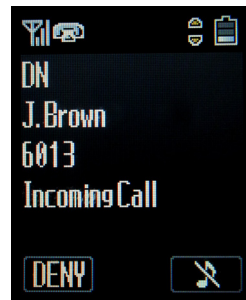

If caller information is sent by the phone system and there is also information stored in the phonebook for the same number, you can choose which information will be displayed on the handset. Caller information sent by the phone system is displayed by default. For details, see "Display Option (Page 48)".

 
If you set the handset to display the caller information stored in the phonebook, caller information sent by the phone system will only be displayed if the number of the caller is not stored in the phonebook.

During a Conversation

Holding a Call

You can put a call on hold by holding the call at your extension.

To hold the current call

Press **HOLD/MSG**, and then press .

Note

- If Automatic Call Hold is enabled on your handset, the call will also be put on hold if you select a DN key other than the one for the current call. For details, consult your administrator or dealer.



To retrieve a call on hold at your extension

- Press **FLEX**.
- Press the dial key corresponding to the slowly flashing green DN key, or press **[▲]** or **[▼]** to select a slowly flashing green DN key, and then press **OK**.


Transferring a Call (Call Transfer)

You can transfer a call to another destination (extension or outside party).

To transfer

 
- Press  during a conversation.
- Dial the party you want to transfer to, and then press **CALL**.
- Wait until the other party answers to announce the transfer.
- Press .

Note

- To return to the call before the transfer destination answers, press .
- If unscreened transfers are supported on your phone system, step 3 can be omitted. For details, consult your administrator or dealer.

To do a blind transfer

- Press **BLIND** during a conversation.

- Dial the party you want to transfer to, and then press **CALL**.
- Press .

Three-party Conference

During a conversation, you can add an additional party to your call and establish a conference call.

Notice

- Your phone system may support advanced conference features, such as conference calls with four or more parties. In this case, the procedures for handling a conference call may be different from those explained in this section. For details about your phone system, consult your administrator or dealer.

Making a Conference Call



- Press **FUNC**, and then press 2 ("Conference").
- Dial the party you want to add to the conversation, and then press **CALL**.
- After the called party answers, press **FUNC**, and then press 2 ("Conference").

Note

- The **CONF** soft key can also be used to access the Conference function directly. To display this key, edit the displayed soft keys. For details, see "Key Option (Page 47)".

Removing a Party from the Conference

During a conference, you can remove other parties from the conference. However, this operation is available only during conference calls you initiate.

- During a conference call, press .
- Press **FLEX**.
- Press the dial key, or press **[▲]** or **[▼]**, and then press **OK** to select the DN key (flexible key) that corresponds to the party you want to disconnect.
- Press .
- Press **FLEX**.
- Press the dial key, or press **[▲]** or **[▼]**, and then press **OK** to select the DN key (flexible key) that corresponds to the remaining party.

Note

- To reestablish the conference without removing either party, press **FUNC**, and then 2 ("Conference") after step 3.

Ending a Conference Call

To go on-hook and end the conference call, press



Useful Features

Call Forwarding/Do Not Disturb

You can have incoming calls automatically forwarded to another destination. You can also have incoming calls rejected (Do Not Disturb).

To access the FWD/DND settings

1. In standby mode, press **FUNC**, and then 3 ("Fwd/DND").
2. If the unit has multiple lines, press **[▲]** or **[▼]** to select the desired line, and then press **OK**.
3. Press **[▲]** or **[▼]** to select the type of FWD or DND setting to apply, and then press **OK**.

The settings are as follows:

- **DND**: Enable Do Not Disturb (All incoming calls are automatically rejected.)
 - **Fwd (A11)**: Enable Forward All Calls (All incoming calls are forwarded.)
 - **Fwd (Busy)**: Enable Forward Busy (Incoming calls are forwarded only when your extension is in use.)
 - **Fwd (NA)**: Enable Forward No answer (An incoming call is forwarded if you do not answer the call within a certain amount of time.)
4. If a Forward setting is selected, enter a new forward destination number, or confirm and modify a previously set forward destination number, and then press **OK**.


 
Note

- When Call Forwarding and/or Do Not Disturb is enabled, **Fwd** and/or **DND** appears on the display in standby mode.
- FWD settings cannot be used on a shared line.

Call Waiting

During a conversation, if a second call arrives, you will hear a call waiting tone. You can answer the second call by disconnecting or holding the current call.


To disconnect the current call and then talk to the new party

1. Press  while hearing the call waiting tone.
2. Press .


To hold the current call and then talk to the new party

1. Press **HOLD/MSG** while hearing the call waiting tone.
2. Press **FLEX**.
3. Press the dial key corresponding to the flashing green DN key, or press **[▲]** or **[▼]** to select a flashing green DN key, and then press **OK**.


Message Waiting

If another extension has left a message waiting indication for your extension, you can call back the other extension directly. When your extension has a message waiting indication set, "Message" is displayed, and  will appear.


To call back an extension that has left a message waiting indication

1. In standby mode, press **HOLD/MSG**.
2. Press **[▲]** or **[▼]** to select the line on which  is displayed, and then press **OK**.

Listening to Voice Mail Messages

When you receive a voice message, "Voice Msg" is displayed, and  will appear.

You can check your new messages by accessing your mailbox.

1. In standby mode, press and hold **HOLD/MSG**.
2. Press **[▲]** or **[▼]** to select the line on which  is displayed, and then press **OK**.

Note

- Step 2 is not necessary if only one line is configured on the handset.

Bluetooth

You can use Bluetooth to connect to a Bluetooth wireless headset and transfer phonebook data from a cell phone.

Turning Bluetooth On or Off

Before using Bluetooth to connect to a wireless Bluetooth headset or to a cell phone, Bluetooth must be set to "On" in the handset settings.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "On/Off", and then press **OK**.
5. Press **[▲]** or **[▼]** to select "On" or "Off", and then press **OK**.

Setting and Changing the Bluetooth PIN Number

Before using Bluetooth to connect to a cell phone, you must set the Bluetooth PIN number in the handset settings.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Cell Phone", and then press **OK**.
5. Press **[▲]** or **[▼]** to select "Change BT PIN", and then press **OK**.
6. Enter the old PIN number, and then press **OK**.^{*1}
7. Enter a PIN number (4 digits), and then press **OK**.
8. Re-enter the same PIN number as in step 7, and then press **OK**.

*1 If a PIN number has not been set previously, skip this step and continue to step 7.

Note

- The valid digits are 0–9.

Registering and Deregistering the Bluetooth Headset

You can use a wireless Bluetooth headset with a handset. Before using a Bluetooth headset, you must register it to a handset.

Registering a Bluetooth Headset

Notice

- Perform any procedures on the headset necessary for registering it before configuring the settings on the handset. Otherwise, the Bluetooth headset may not be registered.

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
- Press **[▲]** or **[▼]** to select "BT Headset", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Registration", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Register", and then press **OK**.
- Enter the headset's Bluetooth PIN number, and then press **OK**.

Note

- After pressing **OK** in step 4, if no Bluetooth headset is registered, skip to step 7.
- Only one Bluetooth headset can be registered to the handset. If a different Bluetooth headset has already been registered, registering a new Bluetooth headset will overwrite the current registration.
- Up to 4 digits can be entered for the Bluetooth headset's PIN number.

Deregistering the Bluetooth Headset

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.

- Press **[▲]** or **[▼]** to select "BT Headset", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Registration", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Deregister", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Yes", and then press **OK**.

Connecting and Disconnecting a Bluetooth Headset

You can connect a registered Bluetooth headset with a handset.

Connecting a Bluetooth Headset

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
- Press **[▲]** or **[▼]** to select "BT Headset", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Connection", and then press **OK**.
- Press **[▲]** or **[▼]** to select "On", and then press **OK**.

Note

- The default setting is "On".

Disconnecting the Bluetooth Headset

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
- Press **[▲]** or **[▼]** to select "BT Headset", and then press **OK**.
- Press **[▲]** or **[▼]** to select "Connection", and then press **OK**.

- Press [▲] or [▼] to select "OFF", and then press **OK**.

Call Handling with a Bluetooth Headset

You can make or answer a call using the Bluetooth headset.

Note

- In this manual, the names of buttons and features described for Bluetooth headsets are examples only. Your Bluetooth headset's button names or features may differ. Consult the documentation for your Bluetooth headset for operation and feature information.

Making a Call with the Bluetooth Headset

- Dial the outside party's number.
- Press the [TALK] button or [REDIAL] button on the Bluetooth headset.
- To end a call, press the [TALK] button on the Bluetooth headset.

Answering a Call Using a Bluetooth Headset

- Press the [TALK] button on the Bluetooth headset.
- To end a call, press the [TALK] button on the Bluetooth headset.

Note

- When a call is received, if the headset ringer is on, the Bluetooth headset will ring even if the handset is set to Silent Mode, or if "Vibrate" or "Ring On Charger" is enabled.

Switching a Conversation between the Handset and a Bluetooth Headset


To switch a conversation from the handset to the Bluetooth headset

- Press  twice.

To switch a conversation from the Bluetooth headset to the handset

- Press .

Adjusting the Microphone Volume of a Bluetooth Headset

- Press **MENU** or the [CENTER] navigation key.
- Select " Setting Handset" by pressing the arrow keys, and then press **OK**.
- Press [▲] or [▼] to select "Bluetooth Option", and then press **OK**.
- Press [▲] or [▼] to select "BT Headset", and then press **OK**.
- Press [▲] or [▼] to select "Headset Mic Vol", and then press **OK**.
- Press [▲] or [▼] to adjust the volume (Level 1–6), and then press **OK**.


Note

- The microphone volume for the Bluetooth headset can only be adjusted when the handset is in standby mode.

Registering and Deregistering a Cell Phone for Phonebook Transfer

You can transfer the phonebook data of a cell phone to the handset. Before performing the transfer, you must register the cell phone to the handset. For details about transferring a phonebook, see "Phonebook and vCard Transfer by Bluetooth (Page 37)".

Registering a Cell Phone


- Press **MENU** or the [CENTER] navigation key.
- Select " Setting Handset" by pressing the arrow keys, and then press **OK**.
- Press [▲] or [▼] to select "Bluetooth Option", and then press **OK**.
- Press [▲] or [▼] to select "Cell Phone", and then press **OK**.
- Press [▲] or [▼] to select "Registration", and then press **OK**.

6. If the "Register/Deregister" menu is displayed, press [▲] or [▼] to select "Register", and then press **OK**. Otherwise, proceed to step 7.
7. Complete the registration by operating the cell phone.

Note

- Follow the procedure above before doing any operations on the cell phone. Otherwise, the cell phone may not be registered.
- When you operate the cell phone, the handset's Bluetooth PIN number is required. For details, see "Setting and Changing the Bluetooth PIN Number (Page 31)".

Deregistering a Cell Phone

1. Press **MENU** or the [CENTER] navigation key.
2. Select " Setting Handset" by pressing the arrow keys, and then press **OK**.
3. Press [▲] or [▼] to select "Bluetooth Option", and then press **OK**.
4. Press [▲] or [▼] to select "Cell Phone", and then press **OK**.
5. Press [▲] or [▼] to select "Registration", and then press **OK**.
6. Press [▲] or [▼] to select "Deregister", and then press **OK**.
7. Press [▲] or [▼] to select "Yes", and then press **OK**.

Customizing the Telephone

Using the Handset Phonebook

You can store up to 500 phone numbers in the handset along with names for easy access. You can also set unique ringer patterns and LED patterns for different categories to identify incoming calls. All phonebook items are stored in alphabetical order.

For security purposes, you can lock the phonebook. For details about making calls from the phonebook, see "Using the Phonebook (Page 26)".

Note

- A single entry (i.e., name) can have multiple phone numbers. Since the phonebook capacity is limited by the number of stored phone numbers, storing multiple phone numbers in an entry decreases the maximum number of entries.
- We recommend that backups are made of the handset's phonebook data, in case the data becomes unrecoverable due to product malfunction. For details, consult your administrator or dealer.

Private Ring

You can organize entries in the phonebook into one of 9 Private Ring Categories. It is possible to set a different ringer pattern and LED pattern, vibration pattern, and color pattern¹ for each category. When the displayed Caller ID² matches a phone number or name stored in the phonebook, the handset rings according to the Private Ring Category settings.

¹ For details about ringer patterns, LED patterns, vibration patterns, and color patterns, see "Incoming Option (Page 45)".

² For details about Caller ID information, see "Caller ID (Page 28)".

Storing an Item in the Handset Phonebook

Storing a New Item

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**New Phonebook**" by pressing the arrow keys, and then press **OK**.
3. Enter a name (max. 24 characters), and then press **OK**.
4. Press **[▲]** or **[▼]** to select a phone number type (① to ⑤), and then press **OK**.
5. Enter the phone number (max. 32 digits), and then press **OK**.
6. Repeat steps 4 and 5 to add additional phone number types.
7. Press **[▲]** or **[▼]** to select "Category Off", and then press **OK**.
8. Select a category, and then press **OK**.
9. To select a default number for the entry, press **[▲]** or **[▼]** to select "Default Tel No", and then press **OK**.
10. Press **[▲]** or **[▼]** to select the number to use as the default number, and then press **OK**.
11. Press **SAVE**.

Note

- Steps 7 and 8 can be omitted if you do not want to assign a category.
- Steps 9 and 10 can be omitted if you do not want to assign a default number. (The first number entered for an entry will automatically be assigned as the default number.)
- The valid digits are "0" through "9", "×", "#", and "+".
- For details about entering characters, see "Entering Characters (Page 40)".
- If an item with the same name and number exists, the new information added will be merged with the existing item.

Editing a Stored Item

You can edit the information stored in phonebook entries.

1. Press **BOOK**.
2. Press **[▲]** or **[▼]** to display the desired entry, or press **SEARCH** and search for the desired entry.

3. Press **MENU** to open the phonebook sub-menu.
4. Press **[▲]** or **[▼]** to select "Edit", and then press **OK**.
5. Edit the name, phone number, category, and default number setting as necessary.
6. Press **SAVE**.

Note

- To change a character or digit, press **[◀]** or **[▶]** to highlight it, press **XFER/CLR** to delete it, and then enter the new character or digit.
- To clear an entire line, press and hold **XFER/CLR** for more than 1 second.
- To move the cursor to the left or right, press **[◀]** or **[▶]**, respectively.
- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".
- For details about entering characters, see "Entering Characters (Page 40)".

Storing an Item Using Predialing

You can dial a number first and then add it as a phonebook entry.

1. In standby mode, dial a number.
2. Press **☎**.
3. Enter a name (max. 24 characters), and then press **OK**.
4. Press **[▲]** or **[▼]** to select a phone number type (① to ⑤), and then press **OK**.
5. Enter the phone number (max. 32 digits), and then press **OK**.
6. Repeat steps 4 and 5 to add additional phone number types.
7. Press **[▲]** or **[▼]** to select "Category Off", and then press **OK**.
8. Select a category, and then press **OK**.
9. To select a default number for the entry, press **[▲]** or **[▼]** to select "Default Tel No", and then press **OK**.
10. Press **[▲]** or **[▼]** to select the number to use as the default number, and then press **OK**.
11. Press **SAVE**.

Note

- Steps 7 and 8 can be omitted if you do not want to assign a category.

- Steps 9 and 10 can be omitted if you do not want to assign a default number. (The first number entered for an entry will automatically be assigned as the default number.)
- For details about entering characters, see "Entering Characters (Page 40)".

Storing an Item Using the Incoming or Outgoing Call Log

You can add a number listed in the incoming or outgoing call log to the phonebook.

1. In standby mode, press **[◀]** to open the Incoming Call Log or press **[▼]** to open the Outgoing Call Log.
2. Press **[▲]** or **[▼]** to select a record in the log.
3. Press **MENU** to open the phonebook sub-menu.
4. Press **[▲]** or **[▼]** to select "Save Phonebook", and then press **OK**.
5. Edit the name if desired, and then press **OK**.
6. Press **[▲]** or **[▼]** to select a phone number type (① to ⑤), and then press **OK**.
7. Edit the phone number if desired, and then press **OK**.
8. Repeat steps 6 and 7 to add additional phone number types.
9. Press **[▲]** or **[▼]** to select "Category Off", and then press **OK**.
10. Select a category, and then press **OK**.
11. To select a default number for the entry, press **[▲]** or **[▼]** to select "Default Tel No", and then press **OK**.
12. Press **[▲]** or **[▼]** to select the number to use as the default number, and then press **OK**.
13. Press **SAVE**.

Note

- Steps 9 and 10 can be omitted if you do not want to assign a category.
- Steps 11 and 12 can be omitted if you do not want to assign a default number. (The first number entered for an entry will automatically be assigned as the default number.)
- For details about entering characters, see "Entering Characters (Page 40)".

Editing Category Names

You can edit the names of the categories in the phonebook.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Display Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Category Name", and then press **OK**.
5. Press **[▲]** or **[▼]** to select the desired category number (1–9), and then press **OK**.
6. Enter a name for the category (max. 13 characters), and then press **OK**.
7. Repeat steps 5 and 6 for each category name to edit.

Note

- For details about entering characters, see "Entering Characters (Page 40)".

Phonebook and vCard Transfer by Bluetooth

Transferring Phonebook Data from a Cell Phone using Bluetooth

You can transfer the phonebook data of a cell phone to the handset using Bluetooth wireless transmission. For details about Bluetooth, see "Bluetooth (Page 31)".

Notice

- The cell phone must support PBAP (Phone Book Access Profile) to use this function.

To transfer the phonebook data of a registered cell phone to the handset

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Cell Phone", and then press **OK**.
5. Press **[▲]** or **[▼]** to select "Phonebook", and then press **OK**.

6. Press **OK**.
7. Press **[▲]** or **[▼]** to select "1: (your cell phone name)", and then press **OK**.
8. Press **[▲]** or **[▼]** to select "Auto" or "Manual", and then press **OK**.
 - If you select "Auto", the download will started automatically.
 - If you select "Manual", operate the transfer from the cell phone to start the download.

To transfer the phonebook data of an unregistered cell phone to the handset

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Bluetooth Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Cell Phone", and then press **OK**.
5. Press **[▲]** or **[▼]** to select "Phonebook", and then press **OK**.
6. Press **OK**.
7. Press **[▲]** or **[▼]** to select "2: Other Cell", and then press **OK**.
8. When "Transfer Phonebook From Cell Phone" is displayed, start the transfer by operating the cell phone.

Note

- For details about registering a cell phone, see "Registering and Deregistering a Cell Phone for Phonebook Transfer (Page 33)".
- Phonebook transfer and the Bluetooth headset functions cannot be operated at the same time.
- If a call is received during a transfer, only the phonebook data transferred before the call was received is saved to the handset phonebook.
- If the transfer was not fully completed, "Completed" is displayed, and details of what was not transferred will be shown.
- If the phonebook is locked, the temporary unlocking screen will be displayed, and you will need to temporarily unlock to continue. For details, see "Unlocking the Phonebook Temporarily (Page 42)".
- While transferring phonebook data from a cell phone using Bluetooth, the Bluetooth pictograph will not be displayed on the screen of the handset (see "Display (Page 18)").

Transferring vCard Data using Bluetooth

vCard™ is a standard file format for an electronic business card. A vCard can include a name and phone numbers. You can save this vCard data to the handset using Bluetooth wireless transmission.

Note

- Only version 2.1 of vCard is supported.
- If both the name and phone number of a phonebook item being transferred corresponds with existing data in the handset, the phonebook item will not be transferred. Also, phonebook entries without any phone numbers entered will not be transferred to the handset.
- If multiple phone numbers exist for one name item, only the first 6 phone numbers received will be saved. Any numbers beyond the first 6 received will not be saved to the handset.
- Phone numbers that contain more than 32 digits will not be saved to the handset.
- Phonebook names can contain up to 24 characters. Names over 24 characters in length will be shortened to 24 characters when transferred. Note that if extended characters are used, the length of the name transferred may be further reduced.

Assigning Hot Keys

You can assign a phone number stored in the phonebook to a key to be used as a Hot Key.

1. In standby mode, press and hold a dial key (0–9) for more than 1 second.
2. Press **MENU**.
3. Press **[▲]** or **[▼]** to select "Copy from P.book", and then press **OK**.
4. Press **[▲]** or **[▼]** to select an entry, or press **Q** to search for an entry, and then press **OK**.
5. Press **[▲]** or **[▼]** to select a number, and then press **OK**.
6. Press **OK**.

Note

- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".

Selecting the Type of Hot Key Dialing

You can select one of 2 types of Hot Key Dialing for each assigned Hot Key.

If "Manual" is selected, pressing and holding an assigned Hot Key for the set number of seconds will display the Hot Key's information. Then, pressing **OK** dials the Hot Key's assigned number.

If "Auto" is selected, pressing and holding an assigned Hot Key for the set number of seconds will dial that Hot Key's assigned number immediately.

1. In standby mode, press and hold a dial key (0–9) for more than 1 second.
2. Press **MENU**.
3. Press **[▲]** or **[▼]** to select "Automatic Call", and then press **OK**.
4. Select "Manual" or "Auto", and then press **OK**.

Note

- To select the number of seconds before the call is automatically made, see "Key Option (Page 47)".

Memo Alarm Setting

An alarm will sound at the set time. A memo can also be displayed. Memo Alarm is available only when the handset is within range of a CS.

Note

- You can select the ringer pattern and LED pattern for each Memo Alarm. For details, see "Incoming Option (Page 45)".
- If you are on a call at the time that the alarm is set to sound, it will sound after you have ended the call.

Setting a Memo Alarm

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Memo Alarm**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select an alarm number (1–3), and then press **OK**.
- Press **[▲]** or **[▼]** to select an alarm mode, and then press **OK**.

The alarm modes are as follows:

- off**: Disables the selected Memo Alarm.
 - once**: The selected Memo Alarm will occur only once.
 - Daily**: The selected Memo Alarm will occur at the same time every day.
 - Weekly**: The selected Memo Alarm will occur at the same time on selected days of the week.
- Set the time and date for the Memo Alarm. The information to enter depends on the alarm mode.
 - once**: Enter the date and time, using the Navigator Keys and/or dial keys, and then press **OK**.
 - Daily**: Enter the daily time, using the Navigator Keys and/or dial keys, and then press **OK**.
 - Weekly**:
 - Press **[▲]** or **[▼]** to select a day of the week, and then press **✓**. A ✓ mark will be displayed next to each day of the week that has been selected. In this way, you can select multiple days of the week.
 - After selecting 1 or more days of the week, press **OK**.

- Enter a time of day using the Navigator Keys and/or dial keys, and then press **OK**.

- Enter a text message to be displayed when the Memo Alarm occurs, and then press **OK**.
- Press **OK**.




Note

- For details about entering characters, see "Entering Characters (Page 40)".
- When entering a time of day, press **AM/PM** to toggle between AM or PM. **AM/PM** will not be displayed if 24-hour-time display is set.

Deleting a Memo Alarm

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Memo Alarm**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select an alarm number (1–3), and then press **DELETE**.
- Press **[▲]** or **[▼]** to select "Yes", and then press **OK**.

Stopping a Memo Alarm




- While the alarm is ringing, press , , , or set the handset on the charger.

Entering Characters

You can enter characters and digits using the dial keys.

You can select one of 3 character modes by pressing the **Right Soft Key** while entering a name. The function icon above the soft key displays the current character mode.

For a list of available characters, see "Character Mode Table (Page 41)".

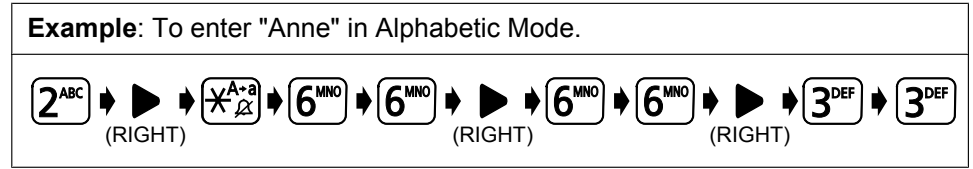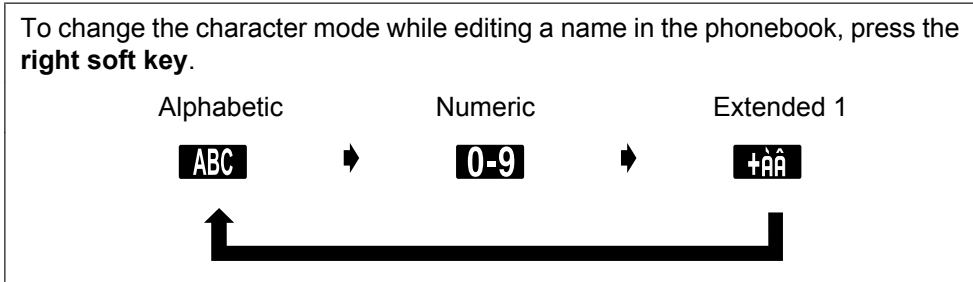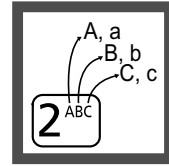

- To switch between uppercase and lowercase, press A^Aa^a.
- To enter a character located on the same dialing key as the previous character, move the cursor by pressing the Navigator Key **[▶]**, then enter the desired character.
- If you enter a different character by mistake, press the Navigator Key **[◀]** or **[▶]** to highlight the character, press X^{FER}Δ^{CLR} to delete it, and then enter the correct character.
- To clear an entire line, press X^{FER}Δ^{CLR} for more than 1 second.
- To move the cursor, press the Navigator Key **[◀]**, **[▶]**, **[▲]** or **[▼]**.

Character Mode Table

Keys	ABC (Alphabetic)		0-9 (Numeric)	+ÀÂ (Extended 1)	
	Upper	Lower		Upper	Lower
1	Space # & ' () * , - . / 1		1	Space # & ' () * , - . / 1	
2^{ABC}	A B C 2	a b c 2	2	A Â Ã Ä Å Æ Æ B C Ç 2	a à á â ã ä å æ b c ç 2
3^{DEF}	D E F 3	d e f 3	3	D Ð E Ê Ë Ì Í Î Ï 3	d ð e è é ê ë ì í î ï 3
4^{GHI}	G H I 4	g h i 4	4	G Ğ H I Ì Í Î Ï Ñ 4	g ğ h i ì í î ï ñ 4
5^{JKL}	J K L 5	j k l 5	5	J K L 5	j k l 5
6^{MNO}	M N O 6	m n o 6	6	M N Ñ O Ò Ó Ô Õ Ö ø Æ 6	m n ñ o ò ó ô õ ö ø æ 6
7^{PQRS}	P Q R S 7	p q r s 7	7	P Q R S Ş ß 7	p q r s ş ß 7
8^{TUV}	T U V 8	t u v 8	8	T U Û Ú Û Ü Ý V 8	t u ù ú û ü ý v 8
9^{WXYZ}	W X Y Z 9	w x y z 9	9	W Ŵ X Y Ŷ Z 9	w ŵ x y ŷ z 9
0^{OPER}	Space ! ? " : ; + = < > 0		0	Space ! ? „ ; + = < > 0	
#	\$ % & @ € £		#	\$ % & @ € £	

- Press **X^{A-a}** before or after entering a character to change between uppercase and lowercase.
- Pressing a key repeatedly will cycle through the characters associated with that key. For example, to enter the letter "C" in Alphabet Mode, press **2^{ABC}** 3 times.
- The illustrations of the keys in the table may differ in appearance from the actual keys on the handset.

Locking the Handset Phonebook


 
You can lock/unlock the phonebook while the handset is in standby mode. If no password has been set, you cannot lock the phonebook. For details about setting the password, see "Setting the Password (Page 16)".

Locking/Unlocking the Phonebook

To lock

- Press and hold  for more than 2 seconds.  will be displayed.

To unlock




 








1. Press and hold  for more than 2 seconds.
2. Enter your password.
3. Press  to return to standby mode.

Unlocking the Phonebook Temporarily

1. Press .
2. Enter your password.

   Deleting Stored Items








Phonebook

1. Press  or  to display the phonebook.
2. Press  or  to select an item, or press  to search for an item.
3. Press .
4. Press  or  to select "Delete", and then press .
5. Press  or  to select "Yes", and then press .



Note

- In step 4, you can select "Delete All" instead to delete all items.
- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".

 








Hot Key Dial

1. Press and hold the dialing key assigned as a Hot Key for more than 1 second.
2. Press .
3. Press  or  to select "Delete", and then press .
4. Press  or  to select "Yes", and then press .

Note

- In step 1 while the Hot Key's information is displayed, you can press  or  to select another Hot Key number.
- In step 3, you can select "Delete All" instead to delete all items.

Incoming/Outgoing Call Log


1. In standby mode, press  to open the Incoming Call Log or press  to open the Outgoing Call Log.
2. Select an item stored in the call log, and then press .
3. Press  or  to select "Delete", and then press .
4. Press  or  to select "Yes", and then press .

Note

- In step 3, you can select "Delete All" instead to delete all items.

Changing Handset Settings

Handset Setting Menu Layout

	[Main Item]	[Sub Item]
Setting Handset	├ Incoming Option	├ Ringer Volume
		├ Ringer Type
		├ Vibrate
		├ Ring On Charger
		├ Memo Alarm
		├ Power Save
		└ Headset Ringer
	├ Talk Option	├ Speaker Volume
		├ Receiver Volume
		├ Headset Volume
		├ Headset Mic Vol
		└ Talk On Charger
	├ Answer Option	├ Any Key Answer
		├ Quick Answer
		└ Auto Ans Delay
	├ Key Option	├ Soft Key Edit
		├ Soft Key Name
		├ Key Lock Type
		├ Auto Lock Time
		└ Hot Key Time
	├ Display Option	├ Language
		├ Backlight
		├ LCD Brightness
		├ Standby Display
		├ Category Name
		├ Date Format
		├ Time Format
		├ Caller ID Disp
		└ Color Scheme

Customizing the Telephone

	Tone Option	└	Key Tone
		└	Range Alarm
	System Option	└	Register H/S
		└	Cancel Base
		└	Select Base
		└	System Lock
		└	Change PIN
		└	H/S Information
		└	Firmware Update ^{*1}
		└	Enable CS Web ^{*1}
	Bluetooth Option	└	On/Off
		└	Cell Phone
		└	BT Headset
	Other Option	└	Change Password
		└	Reset Handset
		└	MasterCS Address

^{*1} These settings are made available through Web user interface programming. For details, consult your administrator or dealer.

Incoming Option

Sub Item	Description	Setting	Default
Ringer Volume	Adjusts the ringer volume.	<input type="checkbox"/> Step Up <input type="checkbox"/> Step Down <input type="checkbox"/> Level 1–6 <input type="checkbox"/> Off	Level 3
Ringer Type – Default – Private Ring (Category 1–9)	Ringer Pattern Selects the ringtone for each type of call. ¹	<input type="checkbox"/> Ringtone 1–19, 25–32	Ringtone 1
	LED Pattern Selects the LED pattern for each type of call.	<input type="checkbox"/> Red <input type="checkbox"/> Green <input type="checkbox"/> Orange <input type="checkbox"/> R→ G→ O	Default: Red Private Ring: Green
	Vib. Pattern Selects the vibrate pattern for each type of call.	<input type="checkbox"/> Single <input type="checkbox"/> Double <input type="checkbox"/> Triple <input type="checkbox"/> Continuous	Single
	Color Pattern ² Selects the color pattern for each type of call.	<input type="checkbox"/> Normal <input type="checkbox"/> Yellow <input type="checkbox"/> Red	Normal
Vibrate	Selects whether the handset vibrates while receiving a call.	<input type="checkbox"/> Vib.& Ring <input type="checkbox"/> Vib.→ Ring <input type="checkbox"/> Off	Off
Ring On Charger	Selects the ringing mode (On or Off) while a handset is set on the charger. ³	<input type="checkbox"/> On <input type="checkbox"/> Off	On
Memo Alarm	Ringer Pattern Selects the ringtone for each Memo Alarm.	<input type="checkbox"/> Ringtone 1–19, 25–32	Ringtone 1
	LED Pattern Selects the LED pattern for each Memo Alarm.	<input type="checkbox"/> Red <input type="checkbox"/> Green <input type="checkbox"/> Orange <input type="checkbox"/> R→ G→ O	Green

Sub Item	Description	Setting	Default
Power Save	Vib. Pattern Selects the vibrate pattern for each Memo Alarm.	<input type="checkbox"/> Single <input type="checkbox"/> Double <input type="checkbox"/> Triple <input type="checkbox"/> Continuous	Single
	Power Save Time Selects the number of seconds before automatically turning off the Power Save Items below when receiving a call.	0–60 s	30 s
	Power Save Item Selects the items to turn off.	<input type="checkbox"/> Ringer&Vibrate <input type="checkbox"/> Backlight	Not selected
Headset Ringer	Selects whether a tone is heard from the attached headset while receiving a call.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off

¹ The preset melodies in this product are used with permission of © 2010 Copyrights Vision Inc.

² Displayed only when "Private Ring" is selected.

³ When "Ring On Charger" is set to "On" but "Ringer Volume" is set to "Off", the handset rings at level 1.

Talk Option

Sub Item	Description	Setting	Default
Speaker Volume	Adjusts the rear speaker volume.	Level 1–6	Level 3
Receiver Volume	Adjusts the receiver volume.	Level 1–6	Level 2
Headset Volume	Adjusts the headset speaker volume.	Level 1–6	Level 2
Headset Mic Vol	Adjusts the headset microphone volume.	Level 1–6	Level 3
Talk On Charger	Selects whether or not to continue the conversation when the handset is put on the charger during a conversation.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off

Answer Option

Sub Item	Description	Setting	Default
Any Key Answer	Answers a call by pressing any dialing key.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off
Quick Answer	Answers a call while the phone is charging by just lifting up a handset from the charger.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off

Sub Item	Description	Setting	Default
Auto Ans Delay	Selects the number of seconds before a call is automatically answered when Auto Answer is turned on.	0–20 s	6 s

Key Option

Sub Item	Description	Setting	Default
Soft Key Edit – Softkey A – Softkey B – Softkey C	Edits the soft keys. – Standby – Talking	<input type="checkbox"/> Default <input type="checkbox"/> Flexible Key <input type="checkbox"/> Function Key <input type="checkbox"/> Hot Key Dial ^{*1}	Not stored
Soft Key Name – Softkey A – Softkey B – Softkey C	Edits the names of the soft keys. – Standby – Talking	Max. 5 characters	Not stored
Key Lock Type	Selects the type of key lock.	<input type="checkbox"/> Manual <input type="checkbox"/> Manual&Password ^{*2,3} <input type="checkbox"/> Auto <input type="checkbox"/> Auto&Password ^{*2,3}	Manual
Auto Lock Time	Sets the number of seconds before the handset key lock is activated when "Auto" is selected as the Key Lock Type.	0–60 s	10 s
Hot Key Time	Selects the number of seconds before a call is automatically made when a Hot Key assigned to "Auto" is pressed and held.	1–20 s	2 s

^{*1} Displayed only when "standby" is selected.

^{*2} To avoid unauthorized access to this product:

- Set a password that is random and cannot be easily guessed.
- Change the password regularly.

^{*3} If no password has been set, you cannot select "Manual&Password" or "Auto&Password" for "Key Lock Type". For details about setting the password, see "Setting the Password (Page 16)".

Display Option

Sub Item	Description	Setting	Default
Language	Selects the display language.	<input type="checkbox"/> English <input type="checkbox"/> Español <input type="checkbox"/> FRANÇAIS	English
Backlight	Turns on the backlight of the LCD and keypad. Can be set for each of the following: <ul style="list-style-type: none"> – Receiving – Talking 	<input type="checkbox"/> On <input type="checkbox"/> Off	Receiving: Off Talking: On
LCD Brightness	Adjusts the brightness of the backlight of the LCD.	Level 1–6	Level 3
Standby Display	Selects what is shown on the display while in standby mode. ¹	<input type="checkbox"/> H/S No. <input type="checkbox"/> Base & H/S No. <input type="checkbox"/> Edit <input type="checkbox"/> Off	H/S No.
	Edits the name displayed on the LCD while in standby mode.	Max. 16 characters	Not stored
Category Name	Edits the names of the categories.	Max. 13 characters per Category (1–9)	Not stored
Date Format	Selects the format for the date shown on the display in standby mode.	<input type="checkbox"/> DD-MM-YYYY <input type="checkbox"/> MM-DD-YYYY <input type="checkbox"/> YYYY-MM-DD	MM-DD-YYYY
Time Format	Selects the format for the time shown on the display in standby mode.	<input type="checkbox"/> 12H <input type="checkbox"/> 24H	12H
Caller ID Disp	Selects which caller information is displayed when a call is received. Either the information stored in the handset's phonebook or the phone system can be displayed.	<input type="checkbox"/> H/S Phonebook <input type="checkbox"/> PBX Setting	PBX Setting
Color Scheme	Selects the color scheme of the LCD.	<input type="checkbox"/> Dark <input type="checkbox"/> Light	Dark

¹ If an extension name is assigned through Web user interface programming, the extension name is displayed when "H/S No." or "Base & H/S No." is selected. Depending on the number of characters stored for the extension name, the end of the extension name may not be displayed.

Tone Option

Sub Item	Description	Setting	Default
Key Tone	Turns the key tone on or off.	<input type="checkbox"/> On <input type="checkbox"/> Off	On
Range Alarm	Selects whether the range alarm tone rings or not.	<input type="checkbox"/> On <input type="checkbox"/> Off	On

System Option

Sub Item	Description	Setting	Default
Register H/S	Registers a handset to a base.	Base 1–4	Not stored
Cancel Base ^{*1}	Cancels the registration of a handset.	Base 1–4 ^{*2}	Not selected
Select Base ^{*1}	Selects a base.	<input type="checkbox"/> Auto <input type="checkbox"/> Base 1–4	Auto
System Lock	Selects whether to lock the System Option setting or not.	<input type="checkbox"/> On ^{*3} <input type="checkbox"/> Off	Off
Change PIN	Before registering your handset with a phone system, enter the phone system's PIN here. Once you have registered the handset with a phone system, this PIN can be changed so that the handset can be registered to an additional phone system.	Enter the PIN number. (max. 8 digits)	1234
H/S Information	Displays the firmware version and the IPEI (International Portable Equipment Identity) number of the handset.	—	—

^{*1} Only registered bases are shown.

^{*2} You can select multiple bases simultaneously.

^{*3} Password is required (4 digits). For details about setting the password, see "Setting the Password (Page 16)".

Bluetooth Option

Sub Item	Description	Setting	Default
On/Off	Turns the Bluetooth function on or off.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off

Customizing the Telephone

Sub Item	Description	Setting	Default
Cell Phone	Phonebook Receives the phonebook from a cell phone by Bluetooth.	—	—
	Registration Registers or deregisters a cell phone.	<input type="checkbox"/> Register <input type="checkbox"/> Deregister	Not registered
	Change BT PIN Sets or changes the Bluetooth PIN number.	Enter the PIN Code. (4 digits)	Not registered
BT Headset	Connection ^{*1} Connects or disconnects a Bluetooth headset.	<input type="checkbox"/> On <input type="checkbox"/> Off	On
	Registration Registers or deregisters a Bluetooth headset.	<input type="checkbox"/> Register <input type="checkbox"/> Deregister	Not registered
	Headset Mic Vol Adjusts the microphone volume of the Bluetooth headset.	Level 1–6	Level 3

*1 If a Bluetooth headset has not been registered yet, the "Registration" screen of "BT Headset" is displayed when this option is selected.

Other Option

Sub Item	Description	Setting	Default
Change Password ^{*1,2}	Changes the handset password (4 digits) used for unlocking the phonebook, using the Reset Handset option, and unlocking the key lock.	Enter Old Password. ^{*3} ↓ Enter New Password. ↓ Verify New Password.	Not registered
Reset Handset	Returns the handset settings to its default settings.	Enter Password. ^{*4} (4 digits) ↓ Select the desired item(s). ↓ Press OK .	Not selected
MasterCS Address	Displays the IP address of the Master CS. If the handset is not yet registered, "xxx . xxx . xxx . xxx" will be displayed.	—	—

*1 To avoid unauthorized access to this product:

- Set a password that is random and cannot be easily guessed.

- Change the password regularly.

^{*2} Make a note of the password so that you will not forget it.


^{*3} If a password has not already been set, you can skip the first step.

^{*4} For details about setting the password, see "Setting the Password (Page 16)".

Installation and Setup


Battery Installation

Open the battery cover, insert the battery, and close the cover as indicated below.

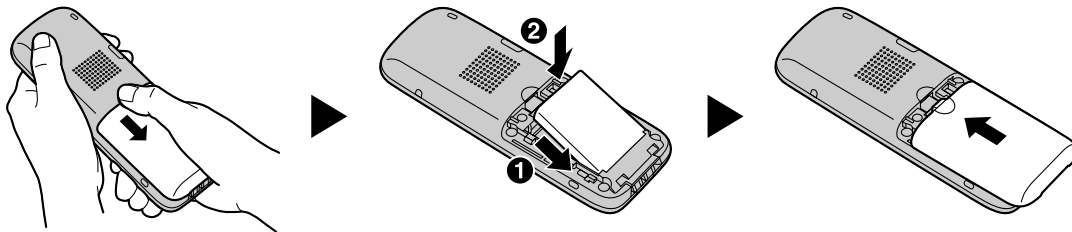

Charger Connection

Connect the AC adaptor to the charger.

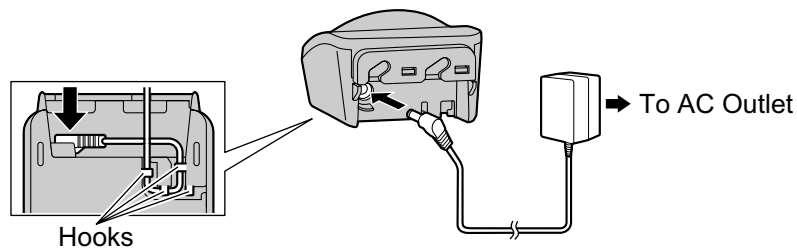


- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- Fasten the AC adaptor cord to the cord holder.
- Use only the included Panasonic AC adaptor. For details, see "Accessory Information (Page 13)".

WARNING

- To reduce the risk of fire or electric shock, do not overload AC outlets and extension cords.
- Do not bundle the charger's AC adaptor cord with the power cords of machines located nearby.
- Completely insert the AC adaptor/power plug into the AC outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.


Charging the Battery

At the time of shipment, the battery is not charged. **Please charge the battery for about 3 hours before using the handset for the first time.**


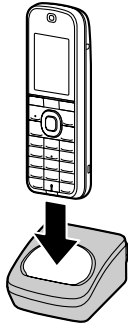


- The charge indicator will turn off when the battery is fully charged. For more information about charging the battery, see "Battery Information (Page 11)".
- It is normal for the handset and charger to feel warm while the battery is charging.
- Keep devices sensitive to magnetic fields away from the charger.
- Use only the included charger.

Charger Wall Mounting

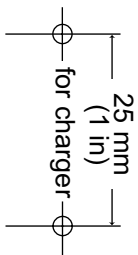

1. Install the two screws in the wall, spacing them 25 mm (1 in) apart.

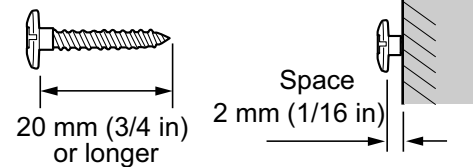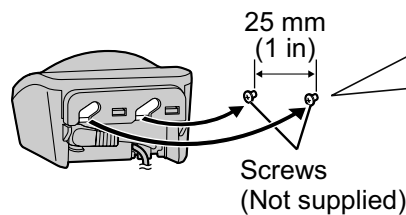

- Recommended screw size is **M4 x 20**.

2. Mount the charger securely on the wall.


- Please copy this page and use as a reference for wall mounting. Make sure to set the print size to correspond with the size of this page. If the dimension of the paper output still deviates slightly from the measurement indicated here, use the measurement indicated here.
- When mounting the charger, ensure that the correct screws are used for the type of wall.
- Make sure that the wall that the charger will be attached to is strong enough to support the total weight of the handset and charger (approx. 135 g [0.30 lb]). If not, it is necessary for the wall to be reinforced.
- When this product is no longer in use, make sure to detach it from the wall.
- When inserting screws, avoid pipes and electrical cables, etc, that may be present/buried.
- The screw heads should not be flush to the wall.
- Certain types of wall may require plugs to be anchored in the wall before the screws are inserted.

Attaching the Belt Clip

You can attach the handset to your belt by following the steps below.


[To attach]

1. Insert the clip into the designated notches in the handset.
2. Slide the clip into the holder until it clicks.

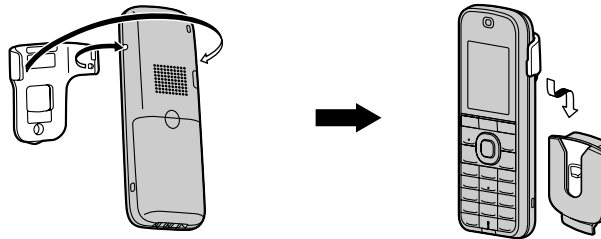


[To remove]

1. Make sure to turn the handset 180° when you take it off.
2. Remove the belt clip.

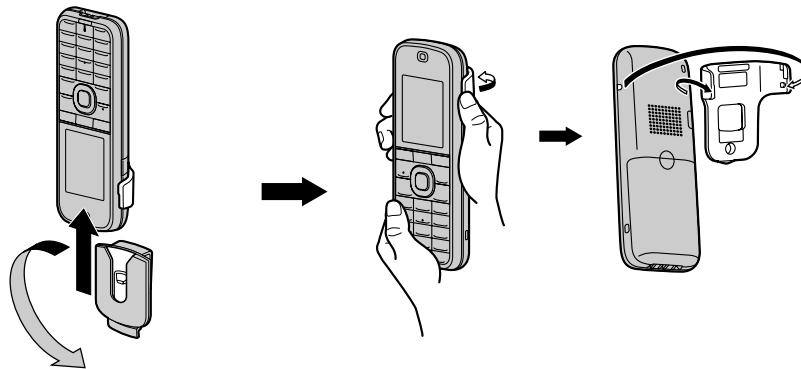

Attaching the Phone Strap

Open the battery cover, run the strap through the strap hole, and then loop it around the hook.

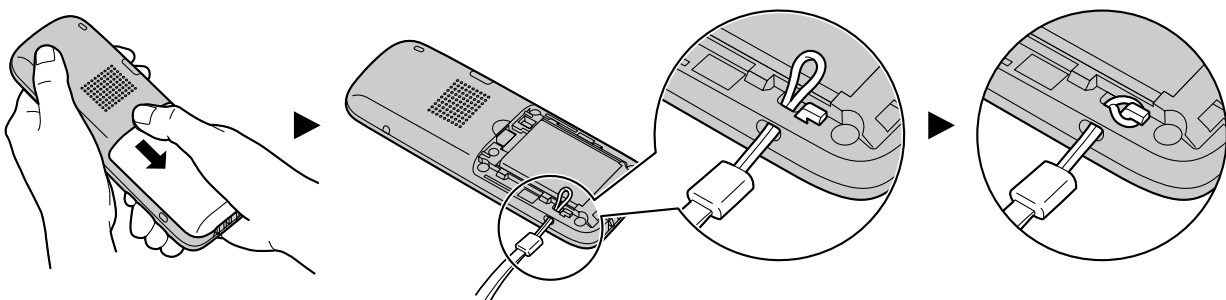

Appendix

Specifications

Item	Specifications
Display	1.8-inch TFT Backlight LCD, 65,000 colors
Headset Jack	1 (ø 2.5 mm [3/32 in])
Battery	Li-Ion 3.7 V (700 mAh)
Maximum Power Consumption (Charger)	Standby: 0.3 W Maximum: 4.0 W
Battery Performance	Talk: up to 13 hours Standby: up to 200 hours
Charging Time	3 hours
Dimensions (Width × Depth × Height)	Handset only: 48.5 mm × 17.9 mm × 127.5 mm (1.91 in × 0.70 in × 5.02 in) Handset on charger: 63.0 mm × 78.0 mm × 140.0 mm (2.48 in × 3.07 in × 5.51 in)
Weight	Handset (including battery): 88 g (0.19 lb) Handset (including battery) and charger: 135 g (0.30 lb)
Operating Environment	0 °C to 40 °C (32 °F to 104 °F) 5 °C to 40 °C (41 °F to 104 °F) (When charging)




RF Specifications (DECT 6.0)

Item	Specifications
Frequency Band	1920 MHz to 1930 MHz
Number of Carriers	5
Transmission Output	Peak 115 mW

RF Specifications (Bluetooth)

Item	Specifications
Frequency Band	2.4000 GHz to 2.4835 GHz
Class	Class 2

Troubleshooting

Problem	Possible Cause	Solution
The handset does not work.	The battery is drained.	Charge the battery fully. For details, see "Charging the Battery (Page 53)".
	The power is off.	<ul style="list-style-type: none"> Turn it on. For details, see "Location of Controls (Page 14)". Re-insert the battery, and then set the handset on the charger. For details, see "Battery Installation (Page 52)", and "Charging the Battery (Page 53)".
The handset does not ring.	Ringer volume is set to "off". (If the ringer volume is set to "off",  is displayed.)	Adjust the ringer volume level. For details, see "Adjusting the Ringer Volume (Page 24)".
	Silent Mode is on. (If Silent Mode is on, the  icon is displayed.)	Turn off Silent Mode. For details, see "Silent Mode (Page 16)".
You cannot make/receive a call.	The handset is out of range, or the CS is busy.	Move closer to the CS or try again later.
	The radio channel is busy, or a radio communication error occurred.	Try again later.
You cannot dial.	The number that you dialed is restricted by your phone system.	Consult your administrator or dealer.
	Key lock mode is on.	To cancel the mode, press and hold  for about 2 seconds. For details, see "Key Lock (Page 16)".
	The radio channel is busy or a radio communication error occurred.	Try again later.
The handset stops working during operation.	An unknown error has occurred.	<ul style="list-style-type: none"> Turn the handset off, and then turn it back on. For details, see "Location of Controls (Page 14)". Re-insert the battery and try again. For details, see "Battery Installation (Page 52)".
You cannot use the handset during a power failure.	The handset will not function during a power failure because the CS stops emitting radio waves.	—

Problem	Possible Cause	Solution
The headset does not work.	The headset ringer cannot be heard when receiving an incoming call when the headset is attached.	<ul style="list-style-type: none"> Make sure the headset ringer setting is set to "On". For details, see "Incoming Option (Page 45)". Make sure the headset jack is connected properly. For details, see "Location of Controls (Page 14)".
The tone from the Bluetooth headset cannot be changed.	The Bluetooth headset tone is a specific tone and is not related to the Incoming Option settings (Ringer Type).	—
Noise is frequently heard.	Nearby electrical appliances are causing interference, or you are too far from the CS.	<ul style="list-style-type: none"> Place the handset and CS away from other electrical appliances. Move closer to the CS.
Two short beeps are heard during a conversation.	The radio signal is weak.	Move closer to the CS.
You charged the battery for 3 hours, but the beep tones sound, and "🔋" flashes (needs to be charged) after a few telephone calls.	The battery charge contacts may be dirty.	Clean the battery charge contacts without damaging them and charge once more.
	It is time to change the battery.	Replace with a new battery.
While charging the battery, the handset and the AC adaptor feel warm.	These are normal conditions.	—
"No Service" is displayed, and beep tones are heard.	The handset is out of range.	Move closer to the CS or try again later.
	The CS or phone service is out of service.	Consult your administrator or dealer.
While charging the battery, the LED indicator blinks rapidly, but the handset does not beep.	The temperature of the battery being charged is outside of normal limits.	Confirm that the area where the handset is being charged is between 5 °C (41 °F) and 40 °C (104 °F), and wait for the battery's temperature to drop.
While charging the battery, the LED indicator blinks rapidly and the handset beeps rapidly.	The battery is not charging correctly due to an electrical failure.	Unplug the AC adaptor from the AC outlet, remove the battery from the handset, and consult your dealer.

Problem	Possible Cause	Solution
<p>I cannot copy the phonebook entries from my cell phone.</p>	<p>The cell phone does not support the Bluetooth function.</p>	<ul style="list-style-type: none"> • Confirm that the cell phone supports Bluetooth wireless technology. • Confirm that the cell phone supports the Object Push Profile (OPP) or Phone Book Access Profile (PBAP) specification.
	<p>A connection error has occurred.</p>	<ul style="list-style-type: none"> • If the cell phone is already connected to another Bluetooth device such as a Bluetooth headset, turn it off or disconnect it from the cell phone. • Turn the cell phone off, and then turn it on and try again.
<p>I cannot have a conversation using a Bluetooth headset.</p>	<p>The Bluetooth headset is not registered to the handset.</p>	<p>Register the Bluetooth headset to the handset. For details, see "Registering a Bluetooth Headset (Page 32)".</p>
	<p>A connection error has occurred.</p>	<p>Turn the Bluetooth headset off, and then turn it on and try again.</p>
	<p>A wired headset is also connected to the handset.</p>	<p>Disconnect the wired headset from the handset, and try again.</p>
	<p>The Bluetooth headset is out of range of the handset.</p>	<p>The Bluetooth headset can communicate within a certain range of the handset. The connection may be subject to interference from obstructions such as walls or electronic devices. Move closer to the handset, and try again.</p>
<p>Noise is heard during a call on the Bluetooth headset.</p>	<p>The Bluetooth headset is too far away from the handset.</p>	<p>The Bluetooth headset can communicate within a certain range of the handset. The connection may be subject to interference from obstructions such as walls or electronic devices. Move closer to the handset.</p>

Problem	Possible Cause	Solution
I cannot connect a Bluetooth headset to the handset.	The Bluetooth headset or the Bluetooth function of the handset is off.	<ul style="list-style-type: none"> • Confirm that the Bluetooth headset is turned on. • Confirm that the Bluetooth setting of the handset is turned on. For details, see "Turning Bluetooth On or Off (Page 31)".
	A connection or registration error has occurred.	<ul style="list-style-type: none"> • If the Bluetooth headset is already registered to another Bluetooth device such as a cell phone, disconnect the Bluetooth headset from the cell phone, and then perform the connection procedure from the handset. • The Bluetooth headset is not registered to the handset. Register the Bluetooth headset. For details, see "Registering a Bluetooth Headset (Page 32)".
Some headset features are not functioning.	The handset does not support enhanced features such as last number redial or call reject.	—
An error tone is heard when I try to connect a Bluetooth device to the handset.	The Bluetooth function is not ready.	<ul style="list-style-type: none"> • The Bluetooth function cannot be accessed immediately after turning on the handset. Wait a few seconds and try again. • A connection could not be made between the handset and the Bluetooth device. Wait a few seconds and try again.
I cannot remember the PIN number.	—	Consult your administrator or dealer.
The "Delete All" operation to delete all phonebook entries is not functioning.	The battery is drained, which prevents the operation from being completed.	Charge the battery fully, then try again. For details, see "Charging the Battery (Page 53)".

Error Messages

Error Message	Possible Cause	Solution
Register Unit	The handset has been cancelled or the handset has not been registered.	Consult your dealer.
No Service	The handset is out of range.	Move closer to the CS.
	The CS is turned off.	Make sure the power cord is connected.
CS Busy	The CS is busy.	Try again later.
Charge Battery	The handset battery has little charge remaining.	Charge the battery fully. For details, see "Charging the Battery (Page 53)".
No Entries	When trying to view the phonebook: No items have been stored. For details, see "Storing an Item in the Handset Phonebook (Page 35)". When trying to view the Incoming or Outgoing Call Log: No logs have been stored.	—
Memory Full	The phonebook is full and cannot store the new item.	Remove unnecessary data in the phonebook and try again.
Need Repair	There is an error with the fixed internal memory.	Consult your dealer.
System Locked	The System Option menu has been locked and cannot be accessed.	Consult your administrator or dealer.
Password Not Stored	Displayed when you access a feature that requires a password, but a password has not been set.	Set a password. See "Setting the Password (Page 16)".
Transfer Error	A connection with a cell phone has been interrupted.	Perform the connection procedure with the cell phone again. For details, see "Transferring Phonebook Data from a Cell Phone using Bluetooth (Page 37)".
Register Error	Handset registration has failed or a time-out has occurred.	Wait and try again, or consult your administrator or dealer.
Restricted	You have tried to make an outside call that is restricted by the phone system.	Consult your administrator or dealer.
Error	An error message is received from the CS when trying to change FWD/DND status.	Try again, or consult your administrator or dealer.

Error Message	Possible Cause	Solution
Aborted	There was a wireless transmission error during a phonebook download or upload.	Use the PS closer to the CS.
Phonebook Error	There was a wireless transmission error, corrupted data, or the memory became full during a phonebook download.	<ul style="list-style-type: none"> Remove unnecessary data in the phonebook, or consult your administrator regarding the number of items being downloaded. Use the PS closer to the CS.
Download Failed	There was an error during a PS firmware update.	Consult your administrator or dealer.
<ERROR1>/<ERROR2>	There was a hardware error during a PS firmware update.	Consult your administrator or dealer.
Downloading Aborted	A phonebook download operation was aborted. The number of items that were being downloaded will also be displayed.	Ensure the handset and the other device are within range of each other, and then perform the download operation again. Do not move either unit until the download is completed.
Connect Error	An error occurred when establishing a Bluetooth headset connection.	Ensure the headset is operating correctly, and then try to establish the connection with the handset again.
Disconnect Error	An error occurred when deregistering a headset that has been registered to the handset.	Ensure the handset and the headset are within range of each other, and then perform the deregistration operation again.
Link Error	An error occurred during a phonebook download.	Ensure the handset and the other device are within range of each other, and then perform the download operation again.
BT Headset Link Error	The Bluetooth headset is out of range of the handset.	When you are using a Bluetooth headset, always keep the handset within range. We recommend keeping the handset and headset within 1 m (3.28 ft) of each other for best performance.

Error Message	Possible Cause	Solution
Completed (Information)	<p>During a phonebook download, some data was not transferred.</p> <ul style="list-style-type: none">• If an entry with the same name already exists in the handset's phonebook, only a total of 6 numbers can be registered to that entry. Once 6 phone numbers have been registered to a name, any additional numbers will not be downloaded.• Phone numbers longer than 32 digits in length are not downloaded to the handset's phonebook.	<ul style="list-style-type: none">• Before downloading, confirm that the source data does not contain more phone numbers than can be downloaded for each name, and does not have any phone numbers greater than 32 digits in length.• Check the data downloaded to the handset after the error message is displayed, and edit the phonebook contents as necessary.

Index

A

AC adaptor 13
 Accessories 13
 Advanced Voice Clarity 17

B

Battery 13
 Charging 53
 Installation 52
 Battery information 11
 Belt clip 13
 Attaching 54
 Belt clip holder 13
 Bluetooth 31

C

Call Forwarding 30
 Call Log
 Deleting 42
 Making a call 26
 Storing to phonebook 36
 Call Waiting 30
 Caller ID 28
 Calls
 Holding 29
 Making 26
 Receiving 28
 Transferring 29
 Category names, editing 37
 Characters
 Available characters 41
 Entering 40
 Charger 13
 Connection 52
 Wall mounting 53
 Conference 29
 Controls, locations of 14

D

Display language 24
 Do Not Disturb (DND) 30

E

Error messages 60

F

Flexible Keys 21
 Editing names 24
 Function keys 23
 Function menus 23

H

Headset volume 25
 Hold 29

Hot Key

 Assigning 38
 Deleting 42
 Dialing 26

K

Key Lock 16

L

Lock
 Keys 16
 Phonebook 42

M

Memo Alarm 39
 Message Waiting 31

O

One-touch Dialing 26
 Operation outline 22

P

Phone strap, attaching 54
 Phonebook 35
 Category names, editing 37
 Deleting 42
 Editing 35
 Locking 42
 Searching 27
 Storing from call log 36
 Storing from predial 36
 Storing new 35
 Phonebook and vCard by Bluetooth 37
 Power Save Mode 17
 Private Ring 35

R

Receiver volume 25
 Ringer volume 24

S

Settings 43
 Answer Option 46
 Bluetooth Option 49
 Display Option 48
 Incoming Option 45
 Key Option 47
 Other Option 50
 System Option 49
 Talk Option 46
 Tone Option 49
 Silent Mode 16
 Soft Keys 19
 Speaker volume 25
 Specifications 55
 Standby display number 24

Index

T

- Text, entering 40
- Three-party conference 29
- Transferring a call 29

V

- Vibrate 24
- Voice Mail 31
- Volume
 - Receiver/Speaker/Headset 25
 - Ringer 24

Panasonic Corporation of North America

One Panasonic Way, Secaucus, New Jersey 07094

<http://www.panasonic.com/sip>

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

<http://www.panasonic.ca>

Copyright:

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2012