


Back of the host device

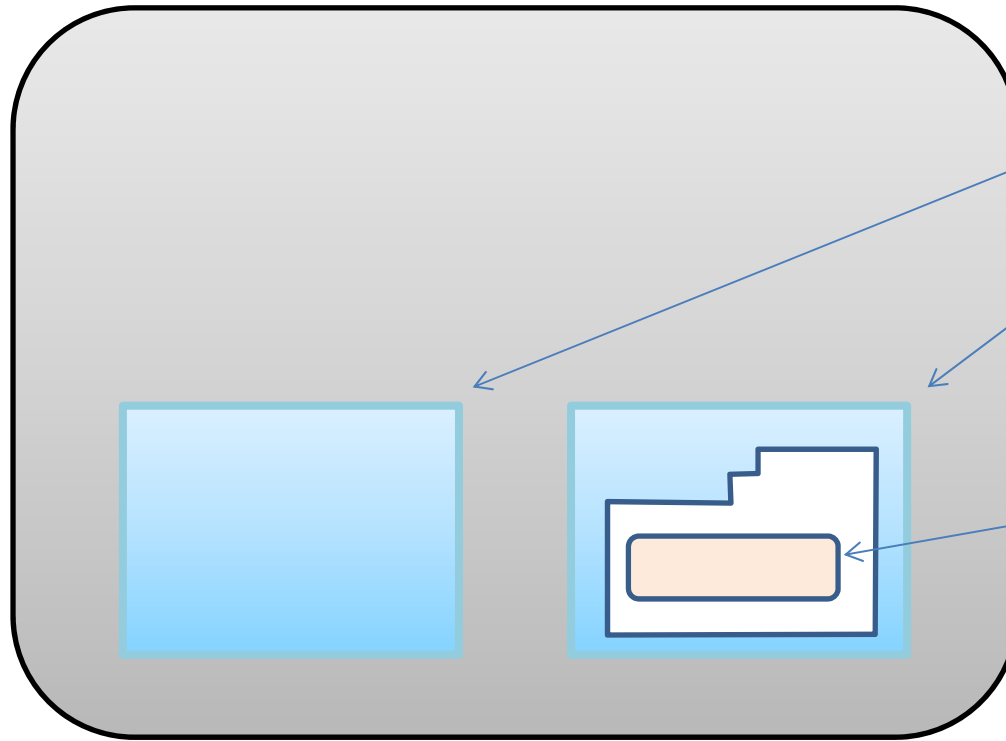

Battery Area :

Batteries are placed in rear side of the device.

Label Area :

This outline drawing shows the label in position within the battery compartment.

The label is visible to the user at the point of sale prior to fitting battery pack

The label is located inside the battery lid (under the battery), and it is permanently attached by glue, so it is not easily removed from the device.