 
 


User's Manual

- Step1 Unlock the battery storage cover at the back of the controller, take out the wireless USB receiver, and plug it into the USB slot of Mini PC or other smart devices such as the PC or tablet.

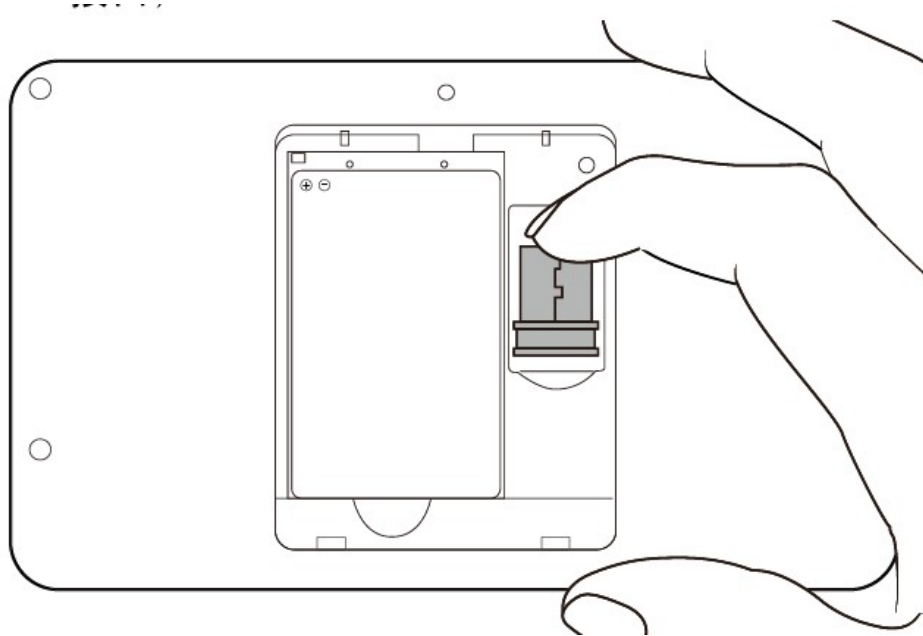

- Step2 Turn the power switch of the controller to the “ON” position. The red led light flashes, indicating the controller go active. There exist three working modes at most --- Mouse Control Mode; Touch Keyboard Mode; and Gaming Mode (optional).

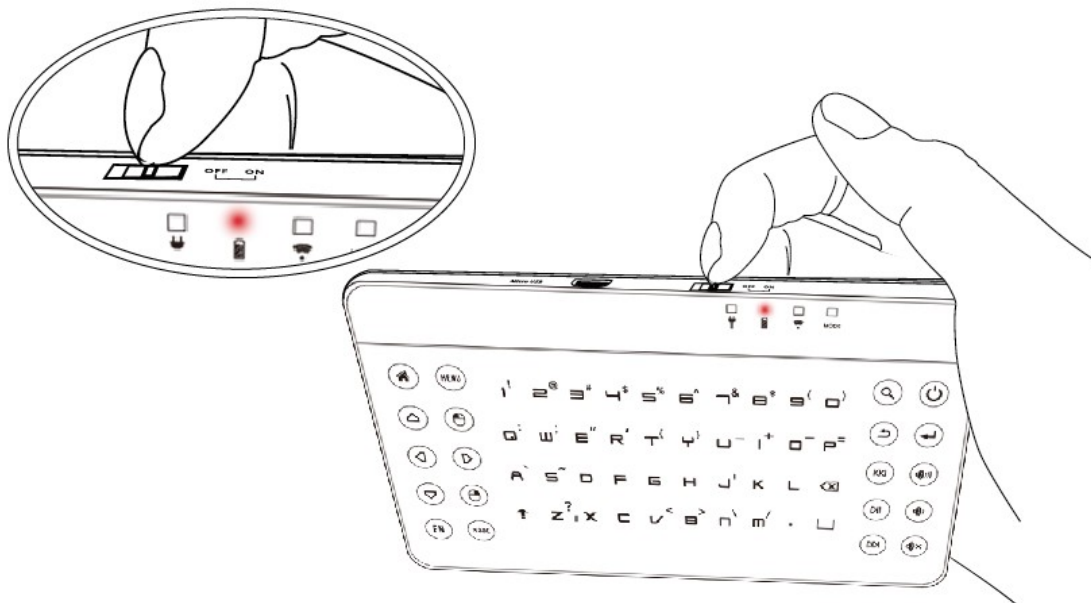




For proper initialization of the touch panel when powering on the device, please make sure no fingers are resting on the touch panel area.

Step3 As below illustrates the working zone of touch control, as well as multiple methods or ways for control operations.


Cursor Control and Tap

Use one finger to move on the surface and within the touch zone, of the panel, to control the movement of the cursor on the displayed screen accordingly. To perform a certain task, move the cursor to the targeted object on the screen, single tap on the touch panel to make the execution.

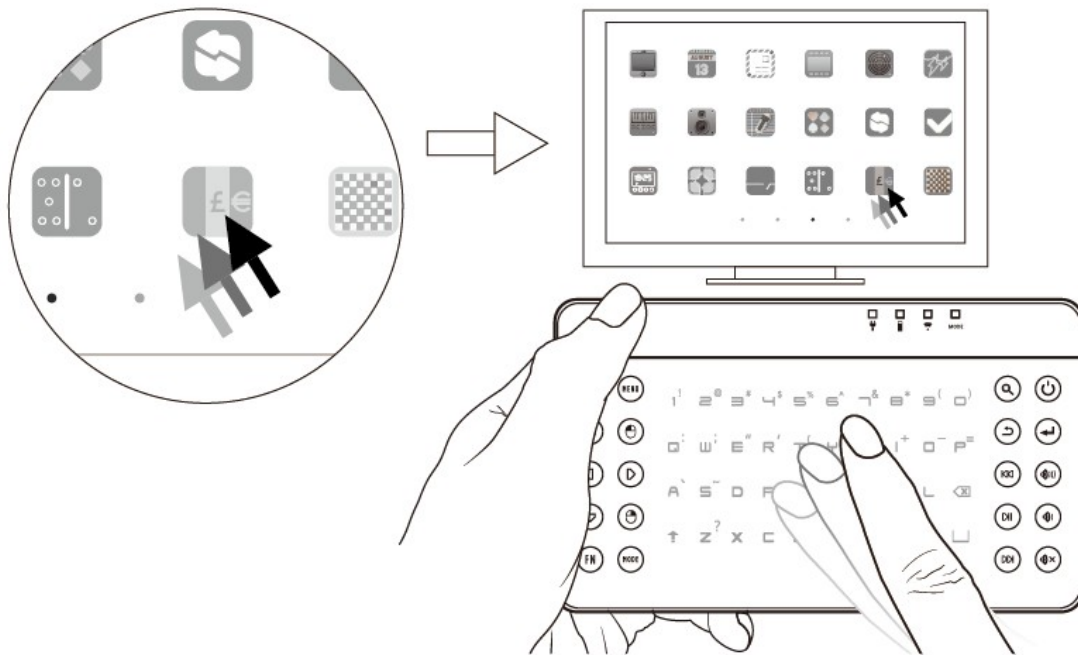


Gesture Control: Stretch / Pinch

Use two fingers to resemble the action on the surface of and within the touch area, of the control panel. Applicable applications include web page browsing, picture viewing, or games like Angry Birds.

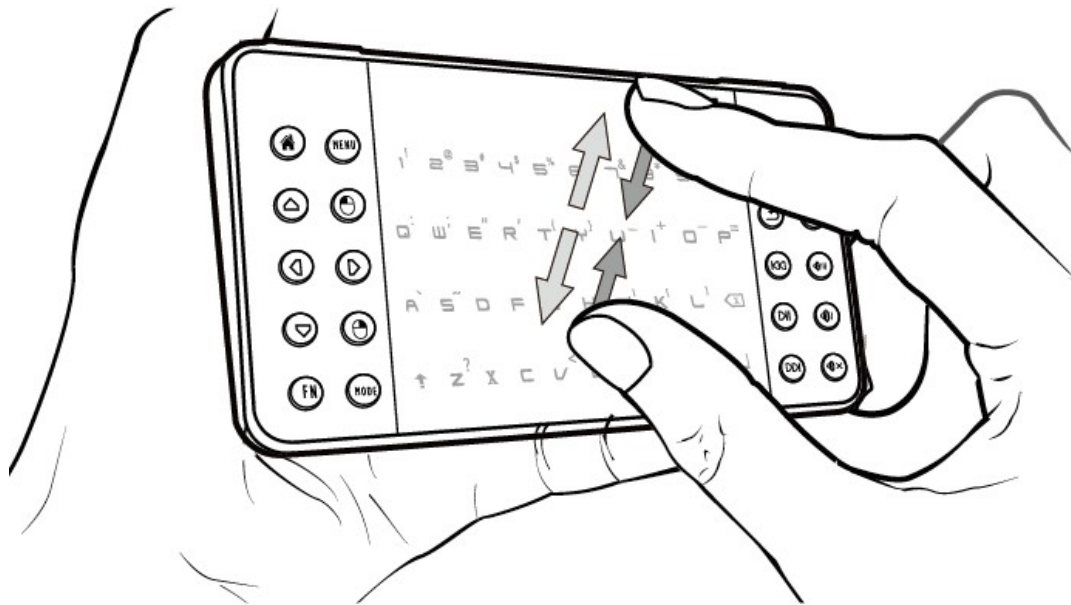


Gesture Control: Scroll / Drag / Stroke

Such controls must be achieved with coordination of holding the “Mouse Left” key. By holding the “Mouse Left” key, the single finger movement on the touch area does not perform the cursor control any more. Instead, they turn into corresponding gesture controls with respect to different applications. For examples, such act can perform scroll control under web page viewing; perform drag function to move folders when sorting files or to drag the bird when playing Angry Birds, or perform stroke function when playing the Fruit Ninja game.

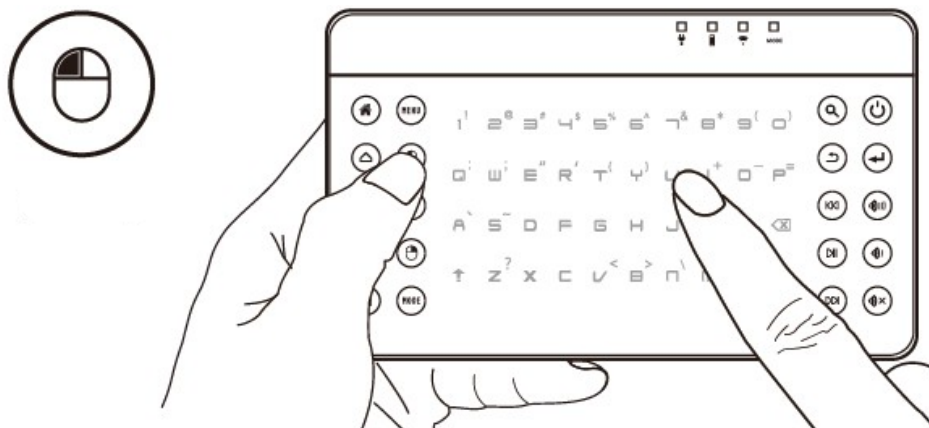


Touch Keyboard Function

By short press of the “Mode” key, the controller can switch from Mouse Control Mode to Touch Keyboard Mode, and the blue led light turns on constantly. Please note, under Keyboard Mode, the mouse function and gesture controls become inactive, and only keyboard function available. Immediately after finishing key-in, please remember to press the Mode key to resume to Mouse Control Mode for any further execution.

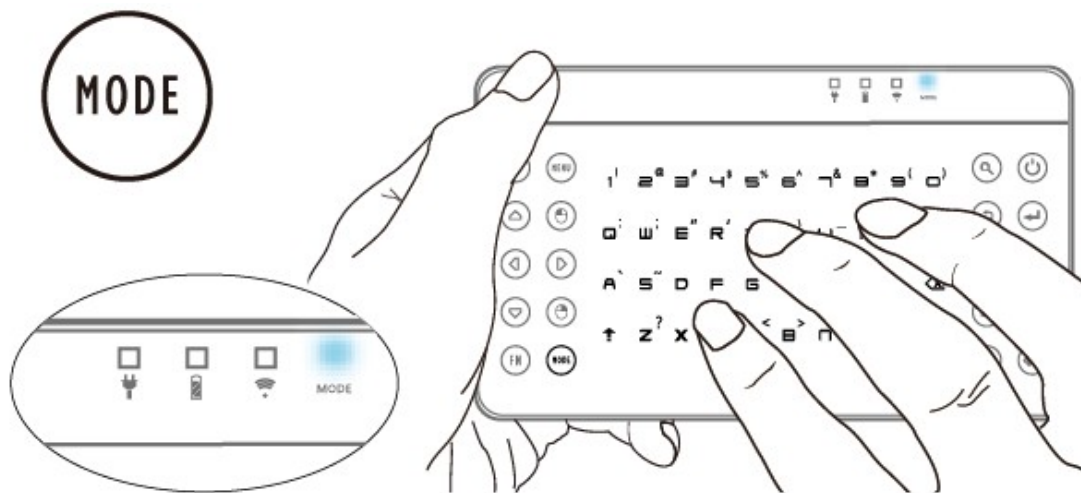

Gaming Mode

By long press of the “Mode” key, with the blue led light flashing constantly, the controller switches from Mouse Control Mode to Gaming Mode, where gaming function and tilt game support turns active. Under Gaming Mode, mouse function and gesture controls are kept available.

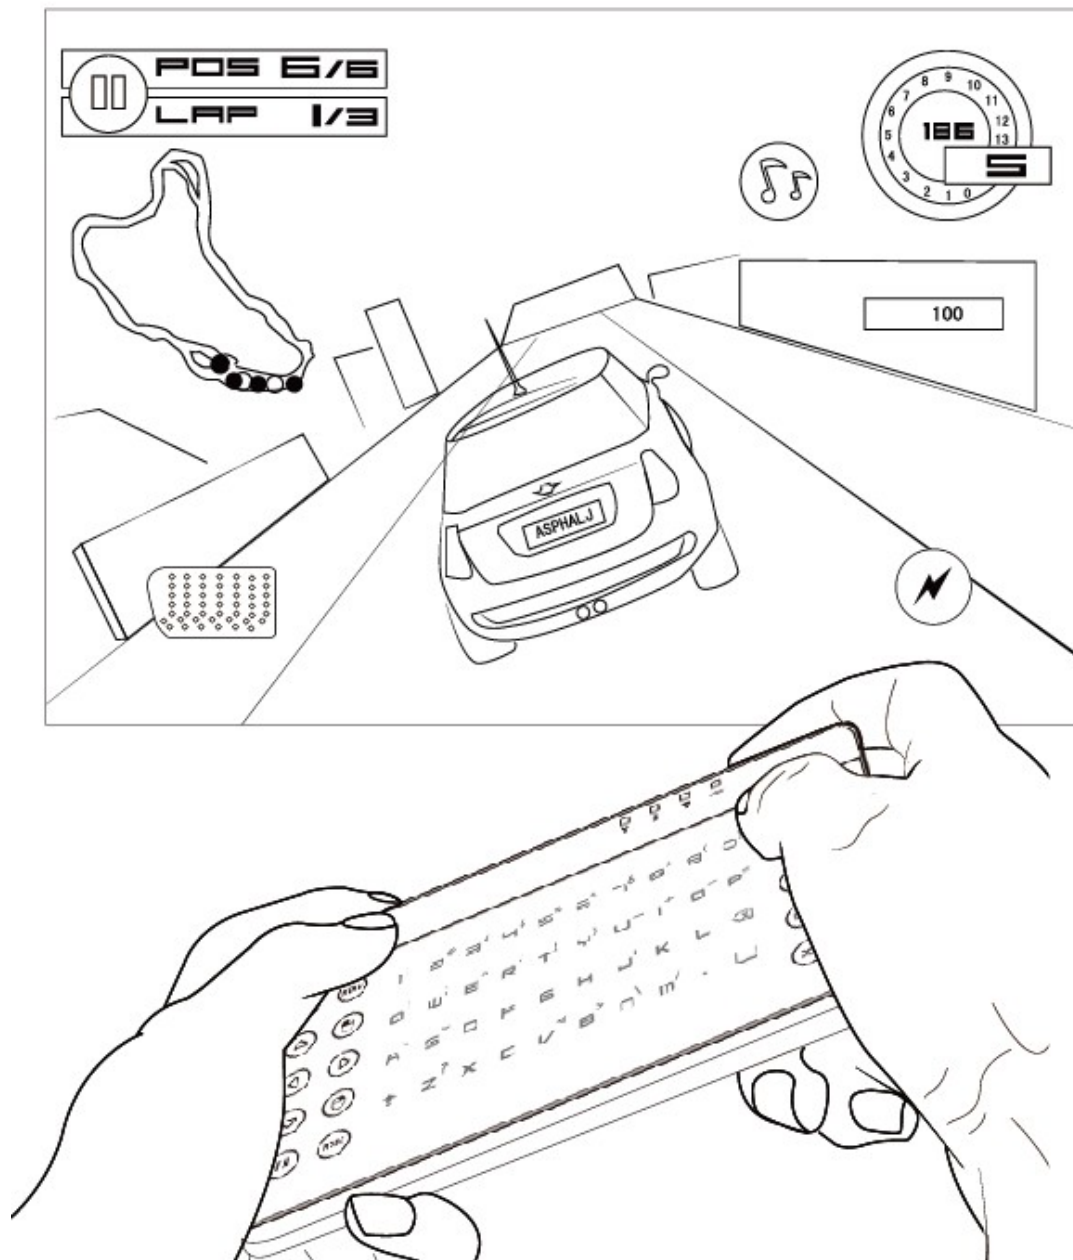

Product Specifications

System Requirements	Apply to O.S. of Window/Mac/Android 4.0 or above
Control Method	Multi-touch Control
Wireless Connection	2.4GHz Proprietary
Power Consumptions	3.7V / 120mA
Battery	800 mAh Li-ion rechargeable
Demensions	150mm*86.5mm*17 mm/134g
New Weight	90.6g with Li-ion battery
Accessory	100 cm micro USB cable for power charging

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.