



# User Manual


Model Name:Y-A3-WJ

FCC ID:ADZY-A3-WJ




# 1. System Combination

## A. Wireless receiver Y-310B/433:

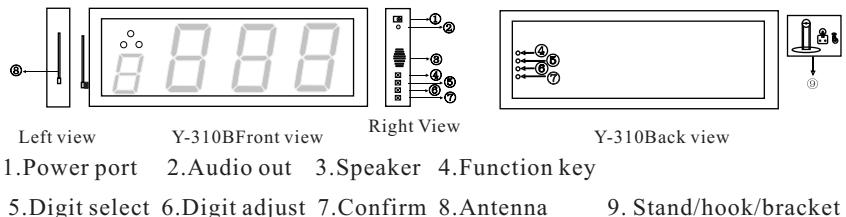

## B. Remote control : Y-T4A

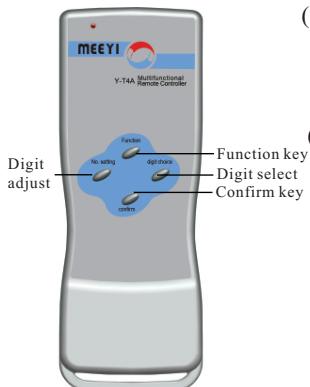

(1) Function key : enter/exit setting

(2) Digit select:

- under setting status select the digits ( 3 digits )
- under working status, query the last calling record

(3) Digit adjust:

- under setting status, adjust the digits (from 0-9)
- under working status, query the next calling record

(4) Confirm key:

- under setting status, confirm the setting
- under working status, cancel/clear the calling record

## C. Transmitter:



Y-A1-WR



Y-A3-WJ




Y-SC

Note:For Y-SC,when the indicator light shows green color,it means low batteny

## 2. System introduction

### (1) Feature:

- a. high strength aluminum alloy cover.
- b. It can work with 300 transmitters (1-key & 3-key) in max, receiving and storing 10 calling information.
- c. Display mode can be single or cycle. And the cycling time is adjustable from 5s-99s.
- d. The volume is adjustable.
- e. It can show the calling number with ringing. The lower left corner shows the numbers of unserved calls. The upper left corner shows the service type: call or bill.

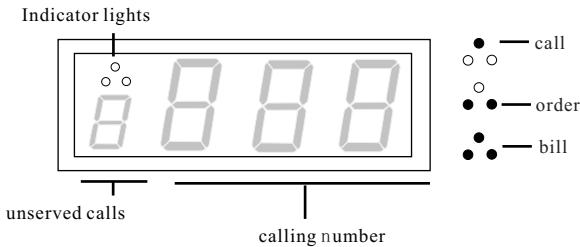

### (2) System settings

#### 1. Brief instruction

- F01 Set Transmitter Number
- F02 Delete Transmitter Number
- F03 Add remote control
- F04 Delete remote control
- F05 Display mode (single or cycle)
- F06 Cycling time (from 5s to 99s)
- F07 Volume adjust
- F08 Empty
- F09 Restore Manufacture Settings

#### 2. Detail instruction

\* F01 Set Transmitter Number

- ① Press “Function key” to setting status, showing “F01”
- ② Press “Confirm key”, showing “001” (First “0” is flashing)

- ③ Press “Digit select” and “Digit adjust” to choose the number (from 001 to 999)
- ④ Press “Confirm key” to confirm the number
- ⑤ Press any key on the transmitter for 2s till the number goes to the next one.

For example, choose “001”, when setting is successful, the receiver will show “002” automatically.

**Note:**

- ① When 1 indicator light is on, it means the transmitter has been saved already.
- ② When 2 indicator lights are on, it means the number has been used already.
- ③ When 3 indicator lights are on, it means no more transmitter can be saved.

Note: when use Y-A3-WJ, press any key on it to save the number. No need to press 3 keys separately.

**\* F02 Delete transmitter Number**

- ① Press “Function key” to setting status, showing “F01”
- ② Press “Digit adjust” to “F02”, then press “Confirm key”
- ③ Press “Digit select” and “Digit adjust” to choose the number to delete
- ④ Press “Confirm key” to delete the number. The receiver will show the next number.
- ⑤ Press “Function key” to exit

Delete all transmitter Number:

- ① Go to “F02”
- ② Press “Digit select” and “Digit adjust” to choose “000”
- ③ Press “Confirm key”, it will show “0 000” as follows:




3 indicator lights will be on and the receiver will display the numbers from “111” to “999”.

When 3 indicator lights come out and receiver shows “0 000”, it means all the numbers are deleted.

- ④ Press “Function key” to exit

**\* F03 Add remote control**

- ① Press “Function key” to setting status, showing “F01”
- ② Press “Digit adjust key” to “F03”, then press “Confirm key”
- ③ Receiver displays “001”, press “Confirm Key” to confirm it. It will show as follows:

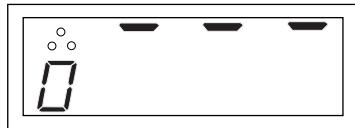

④Press the “Digit select” and “Digit adjust” on the remote control at the same time .

Then the remote control is added.

⑤Press “Function key” to exit

**Note:** when the remote control has been added in the receiver, it can be used to operate the receiver instead of the function keys at the side of receiver.

#### \* **F04 Delete remote control**

① Press “Function key”to setting status,showing “F01”

②Press “Digit adjust key” to “F04”, then press “Confirm key”

③Receiver displays “001”,press “Confirm Key” to confirm it. Then the remote control is deleted.

④Press “Function key” to exit

#### \* **F05 Display mode (single or cycle)**

① Press “Function key”to setting status,showing “F01”

②Press “Digit adjust key” to “F05”, then press “Confirm key”

③Pls adjust “001” or “002” to choose the display mode:

001-----single The last 10 numbers only shows 1 time

002----- cycle The last 10 numbers will show circularly with ringing until the number are cancelled.

④Press “Confirm key” to confirm the mode

⑤Press “Function key” to exit

#### \* **F06 Cycling time (from 5s to 99s)**

Note: this setting is based on F05 -002 display mode.

① Press “Function key”to setting status,showing “F01”

②Press “Digit adjust key” to “F06”, then press “Confirm key”

③Adjust to choose the cycle time from “05” to “99”,then confirm it

④Press “Function key” to exit

### \* **F07      Volume adjust**

- ① Press “Function key” to setting status, showing “F01”
- ② Press “Digit adjust key” to “F07”, then press “Confirm key”
- ③ Adjust the volume via choosing from “001” to “004”:
  - 01- first level (lowest)
  - 02- second level
  - 03- third level
  - 04- fourth level (loudest)
- ④ Press “Confirm key” and press “Function key” to exit

### \* **F08      Empty**

### \* **F09      Restore Manufacture Settings**

- ① Press “Function key” to setting status, showing “F01”
- ② Press “Digit adjust key” to “F09”, then press “Confirm key”
- ③ Press “Digit adjust key” to choose “000”, then press “Confirm key”
- ④ The receive will display the numbers from “111” to “999”.
- ⑤ When the receive displays “000”, it means the setting is done.

Manufacture Settings are as follows:

Remote control ----- blank  
Transmitter ----- blank  
Display mode ----- single  
Cycling time ----- 5s  
Volume ----- fourth level (loudest)

## **3. How to inquiry and clear the calling information?**

- A. Y-310B/433 can save 10 calling information in max. When the 11th calling information comes in, the 1st calling information will disappear automatically.
- B. Press “Digit select” and “Digit adjust” on remote control to inquiry the calling information up and down.

C. Press “Confirm key” on the remote control or “Confirm key” at the side of receiver to clear the calling information. Or press the “cancel button” on the transmitter (Y-A3-WJ)

## 4 . Technical Specification:

Model number	Y-310B	Remote control	Adaptor
Working voltage	12V DC	9V	12V DC
Working current	150MA	15MA	_____
Frequency	433.92MHZ	433.92MHZ	_____
Audio output	1W	_____	_____
Sensitivity	106dB	_____	_____

FCC ID: ADZY-A3-WJ□□□□□□

### IMPORTANT REGULATORY INFORMATION□□

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:□□

1. This device may not cause harmful interference and□□
2. This device must accept any interference that is received, including any interference that may cause undesired operation.□□□□

### WARNING:□□

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.□□