

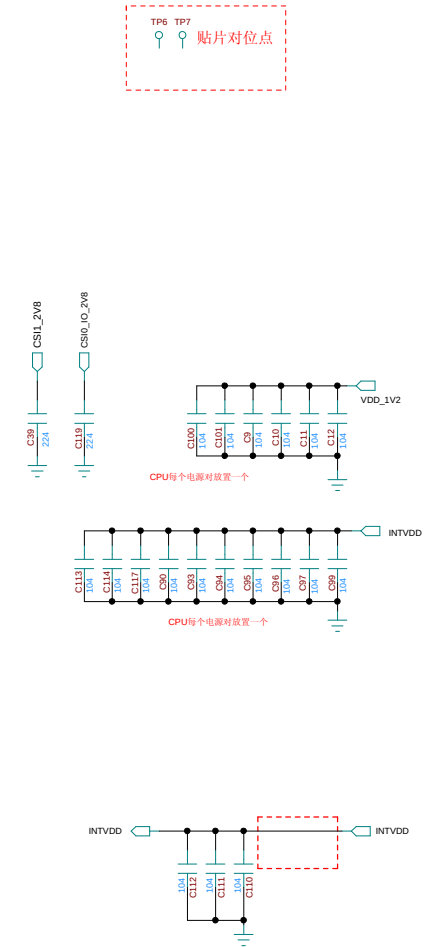



CPU及周辺器件

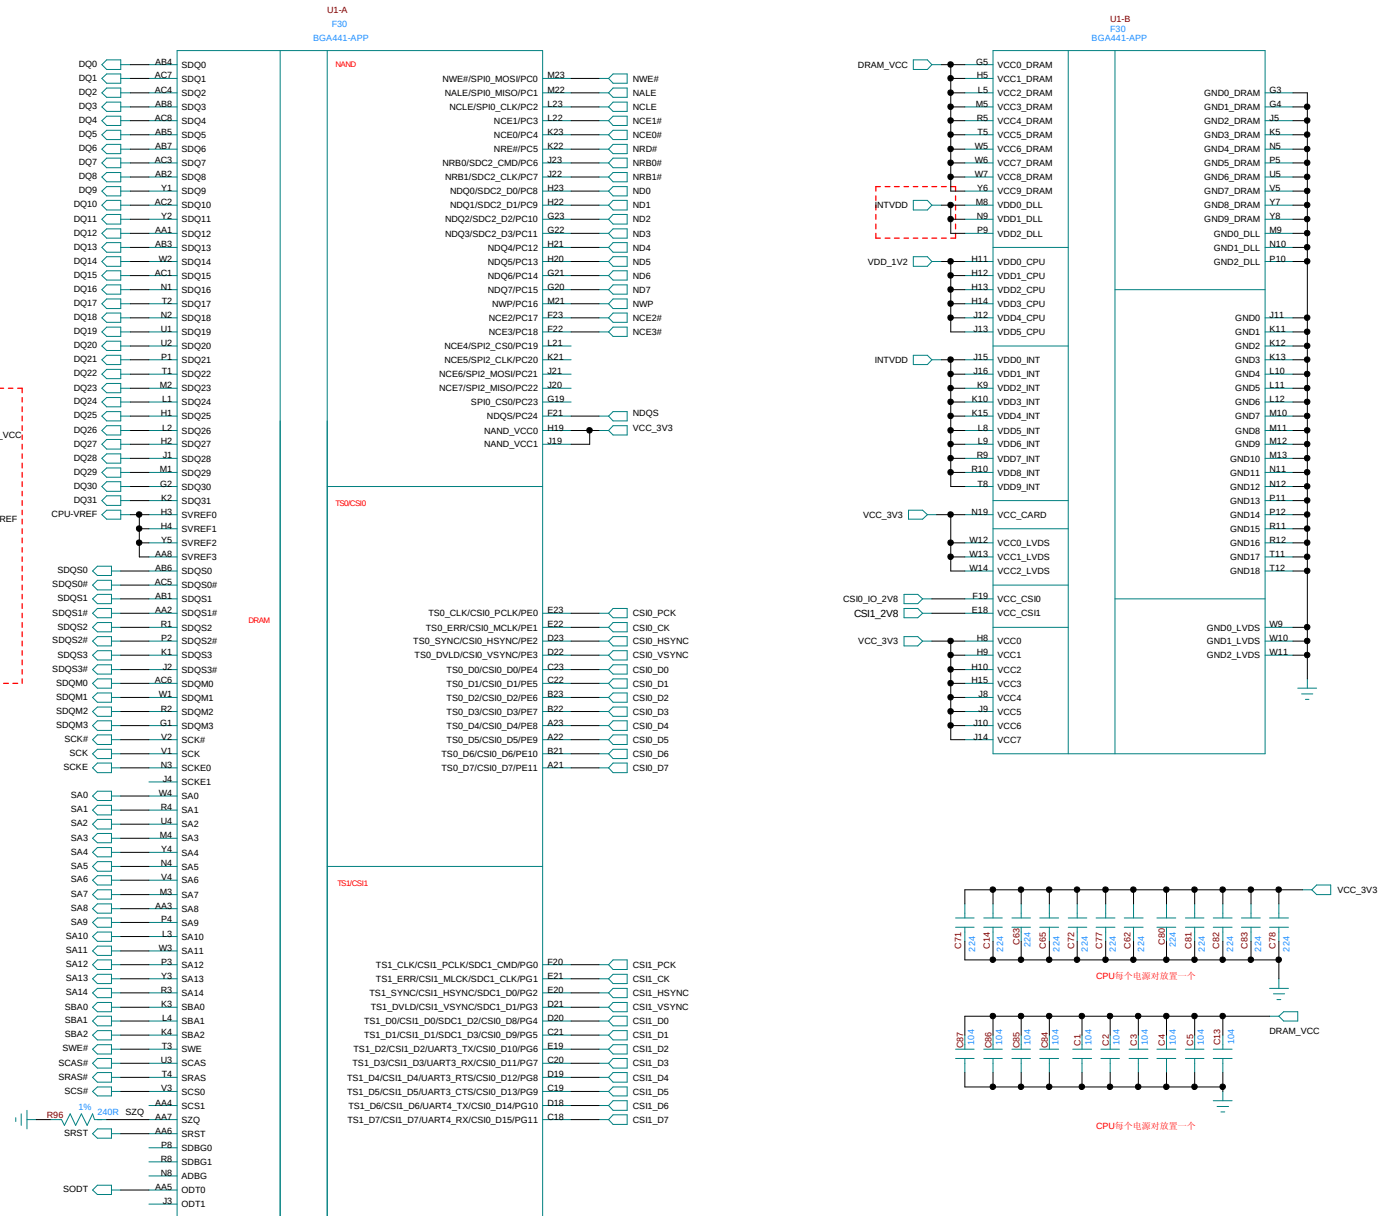



D			
TITLE:		SC3007	
DRAWN BY:		DATE:	
CHECK BY:		DATE:	
APPRO BY: XIE		DATE:	2011-08-05
PCB P/N:		SC3007_V03_110805.PCB	
SCALE:		VER:	1.00

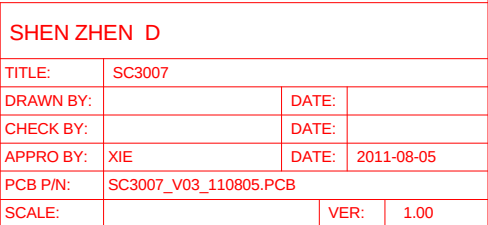

NAND FLASH


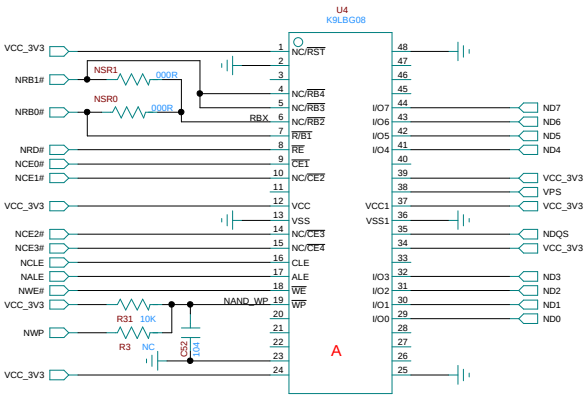


NAND FLASH

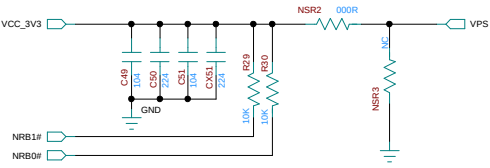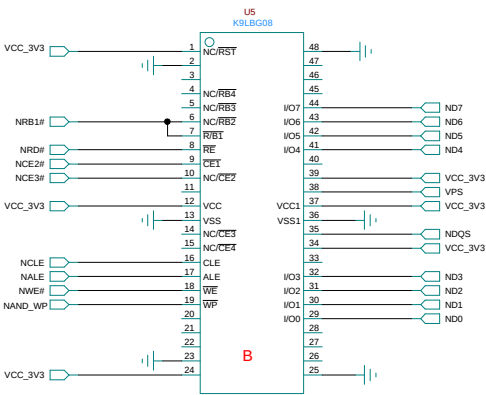

- (1)连接1片单片选FLASH的时候，NSR0,NSR1的电阻断开
(2)连接1片双片选FLASH的时候，连接NSR1，NSR0电阻断开
(3)连接1片四片选FLASH的时候，连接NSR0,NSR1电阻断开
(4)连接2片单片选或2片双片选FLASH的时候，连接NSR0电阻,NSR1电阻断开
(5) 接Intel、Toshiba、Samsung 2xnm TSOP Nand时，NSR2连接，NSR3断开；其它的NSR2断开，NSR3连接

前置摄像头30W像素

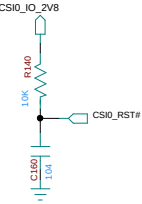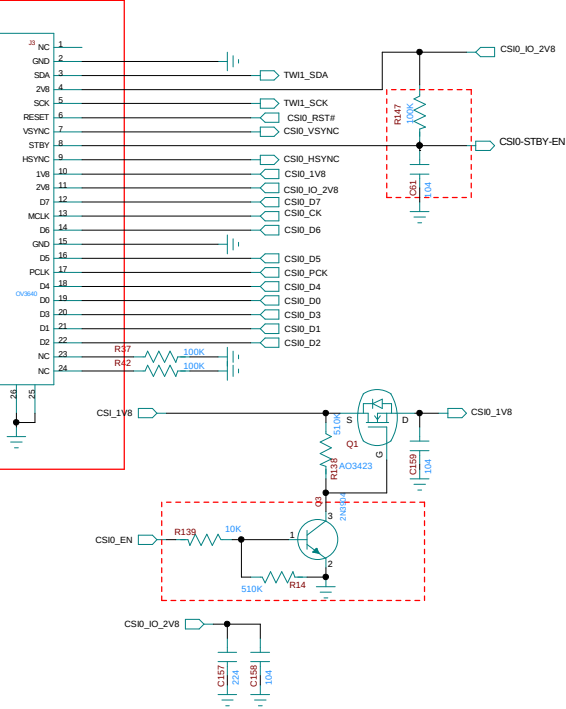

D

TITLE:	SC3007		
DRAWN BY:		DATE:	
CHECK BY:		DATE:	
APPRO BY:	XIE	DATE:	2011-08-05
PCB P/N:	SC3007_V03_110805.PCB		
SCALE:		VER:	1.00

