



Rating Label Location for Model XW-HTD630(T)

Top View

## Transmitter

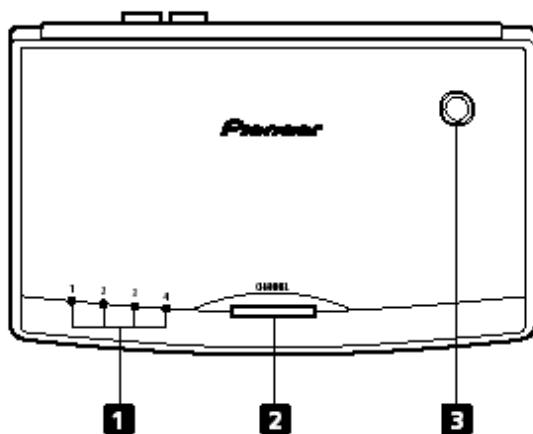

Bottom View

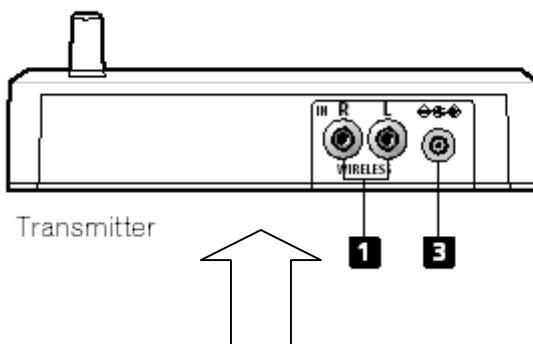

Rating Label is located on Bottom side