



Hide & Speak® Parts List

Pods:

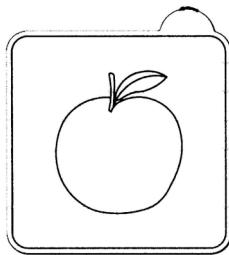

Picture card 50mm
Picture cards fit inside Pods

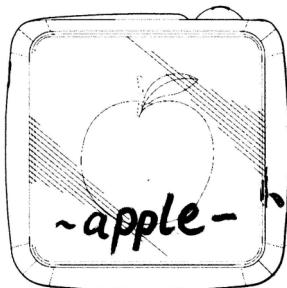


Front of Pod with
picture card in place

You can make
your own
picture cards.


Using a write on,
wipe off pen you
can add words to
the front of the Pod

At rear of Pod a gap gives
easy access to picture card

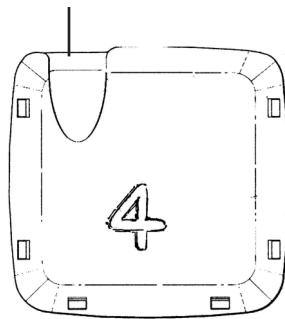


Pods each have a
unique number.


Fitting and Changing the Batteries (Use 3 AAA Cells)

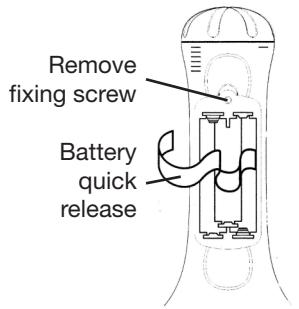

Step 1
Remove battery cover

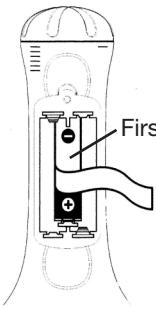

Step 2
Insert AAA cell

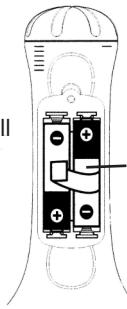

Step 3
Insert 2 more AAA cells
Refit cover

Battery Safety Information

Follow these battery guidelines or battery life may be shortened, leak or rupture:

- Use AAA batteries only.
- Do not mix old and new batteries or batteries of a different type.
- Insert batteries inside the battery compartment as indicated.
- Never short-circuit battery terminals.
- Exhausted batteries are to be removed from the toy.
- Rechargeable batteries must only be charged under adult supervision.
- Batteries must be fitted with the correct polarity as shown in the graphic on this page.
- Rechargeable batteries must be removed from the toy before being recharged.
- Do not charge non-rechargeable batteries.
- Keep batteries away from children.
- Dispose of batteries safely.